

Section C7

**System test and
fault diagnosis****Compressor thermal fuse fault diagnosis
Fig. C50**

This chart should be used to locate the cause of a thermal fuse blowing in the compressor protection unit.



Section C7

**System test and
fault diagnosis**


Voltage stabiliser

Sheet 1 of 2


Fig. C51

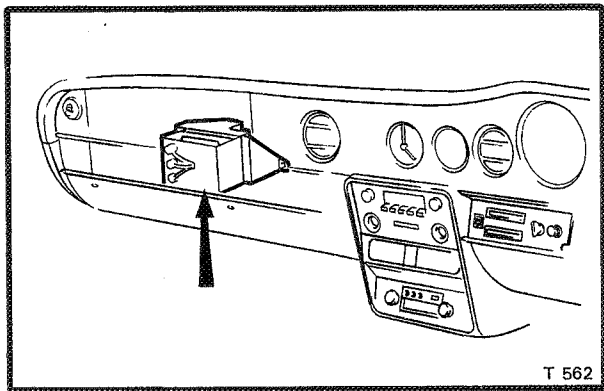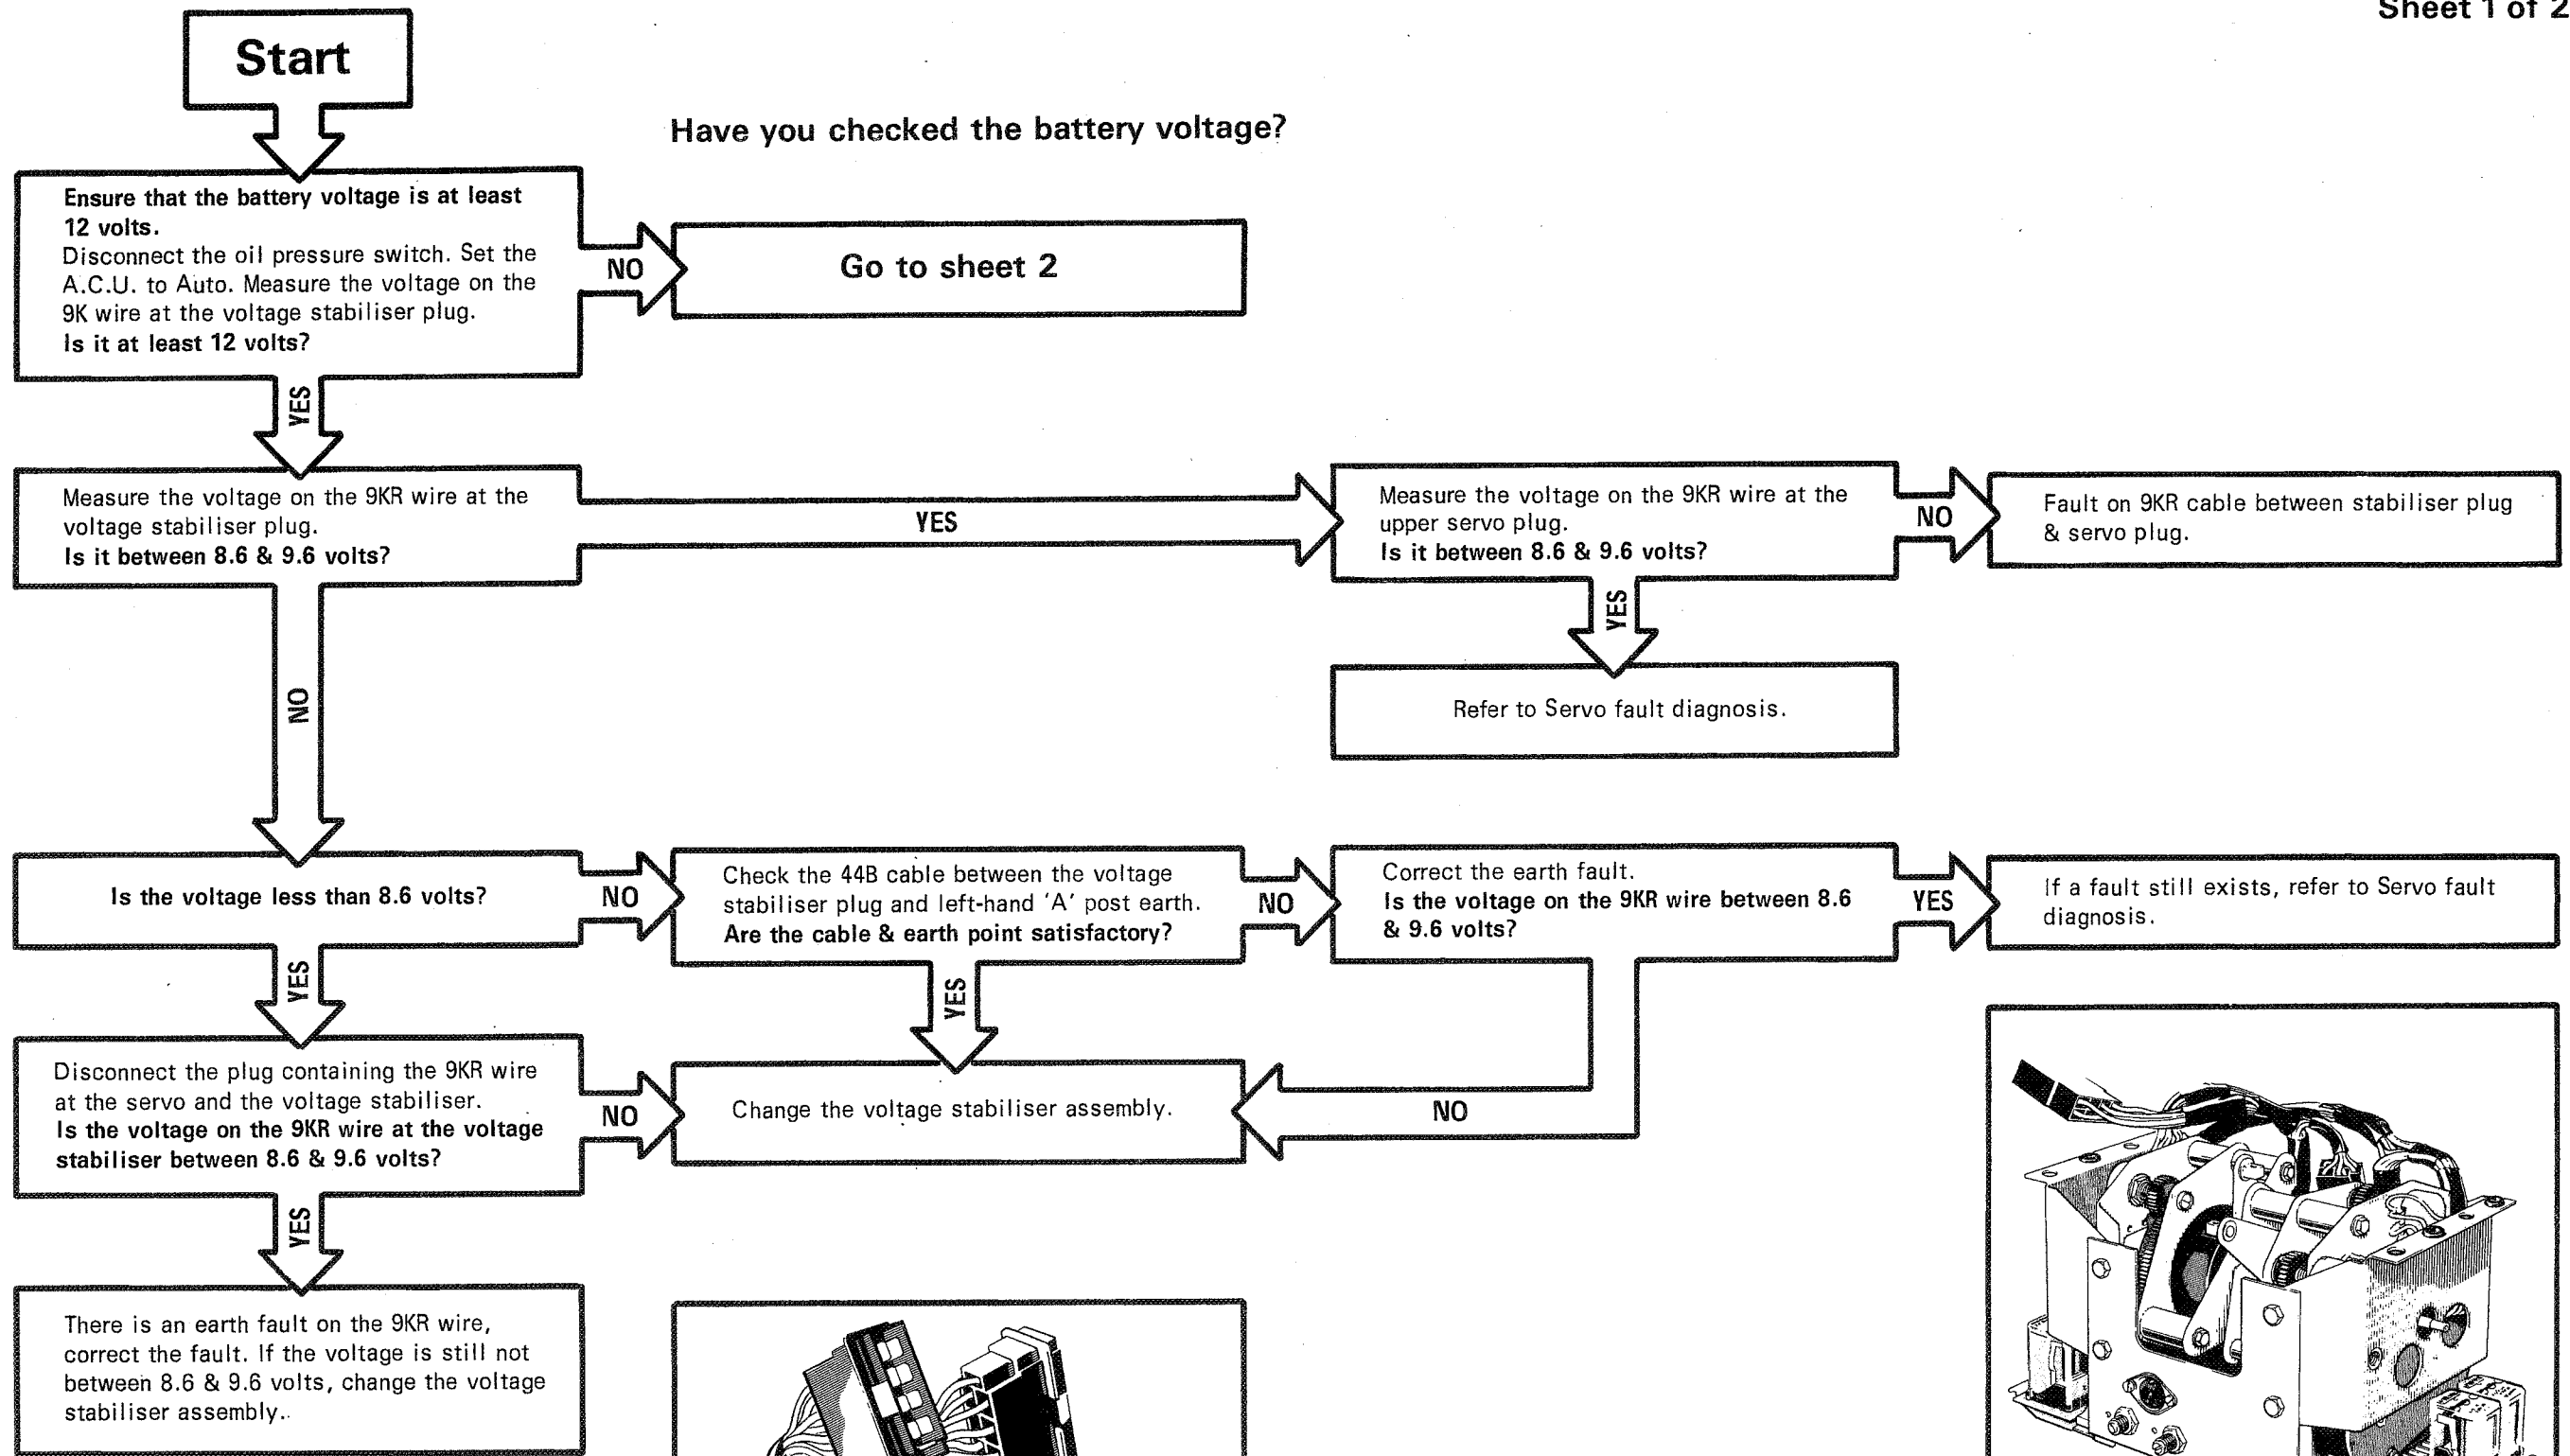


Location of fan speed module and voltage stabiliser right-hand drive cars

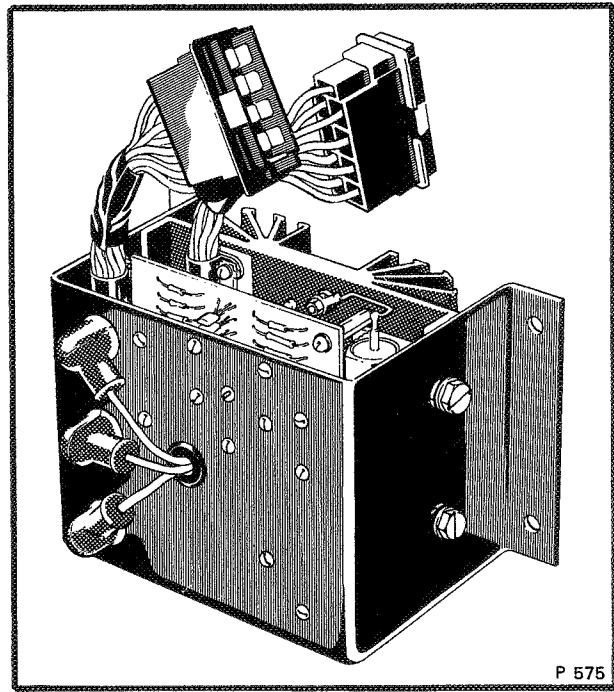


Fan speed module and voltage stabiliser

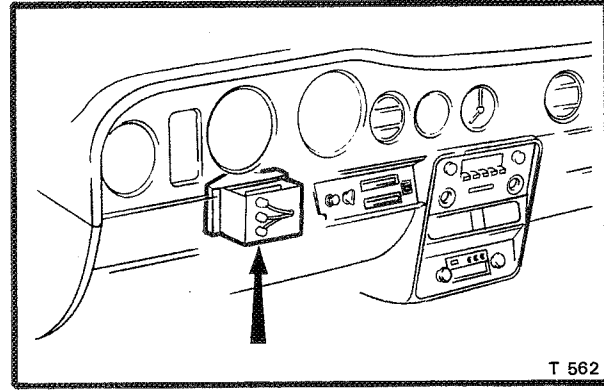

Location of fan speed module and voltage stabiliser left-hand drive cars

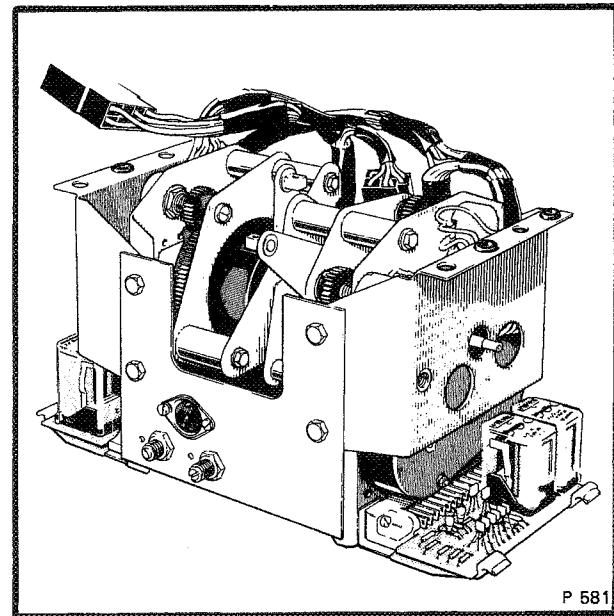




Servo assembly

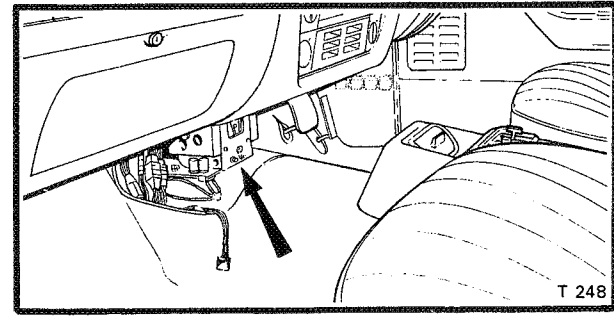

Location of servo assembly

Have you checked the battery voltage?

From page 1

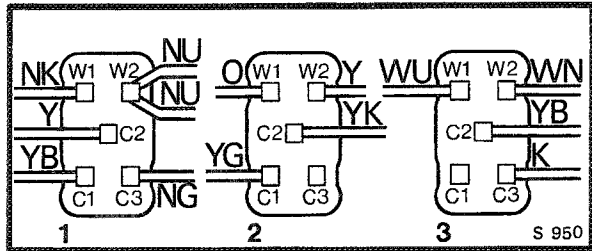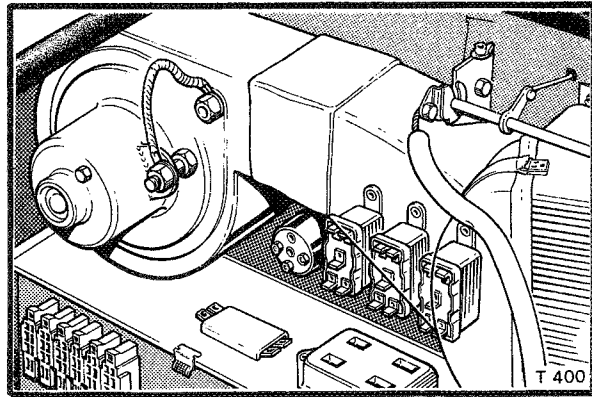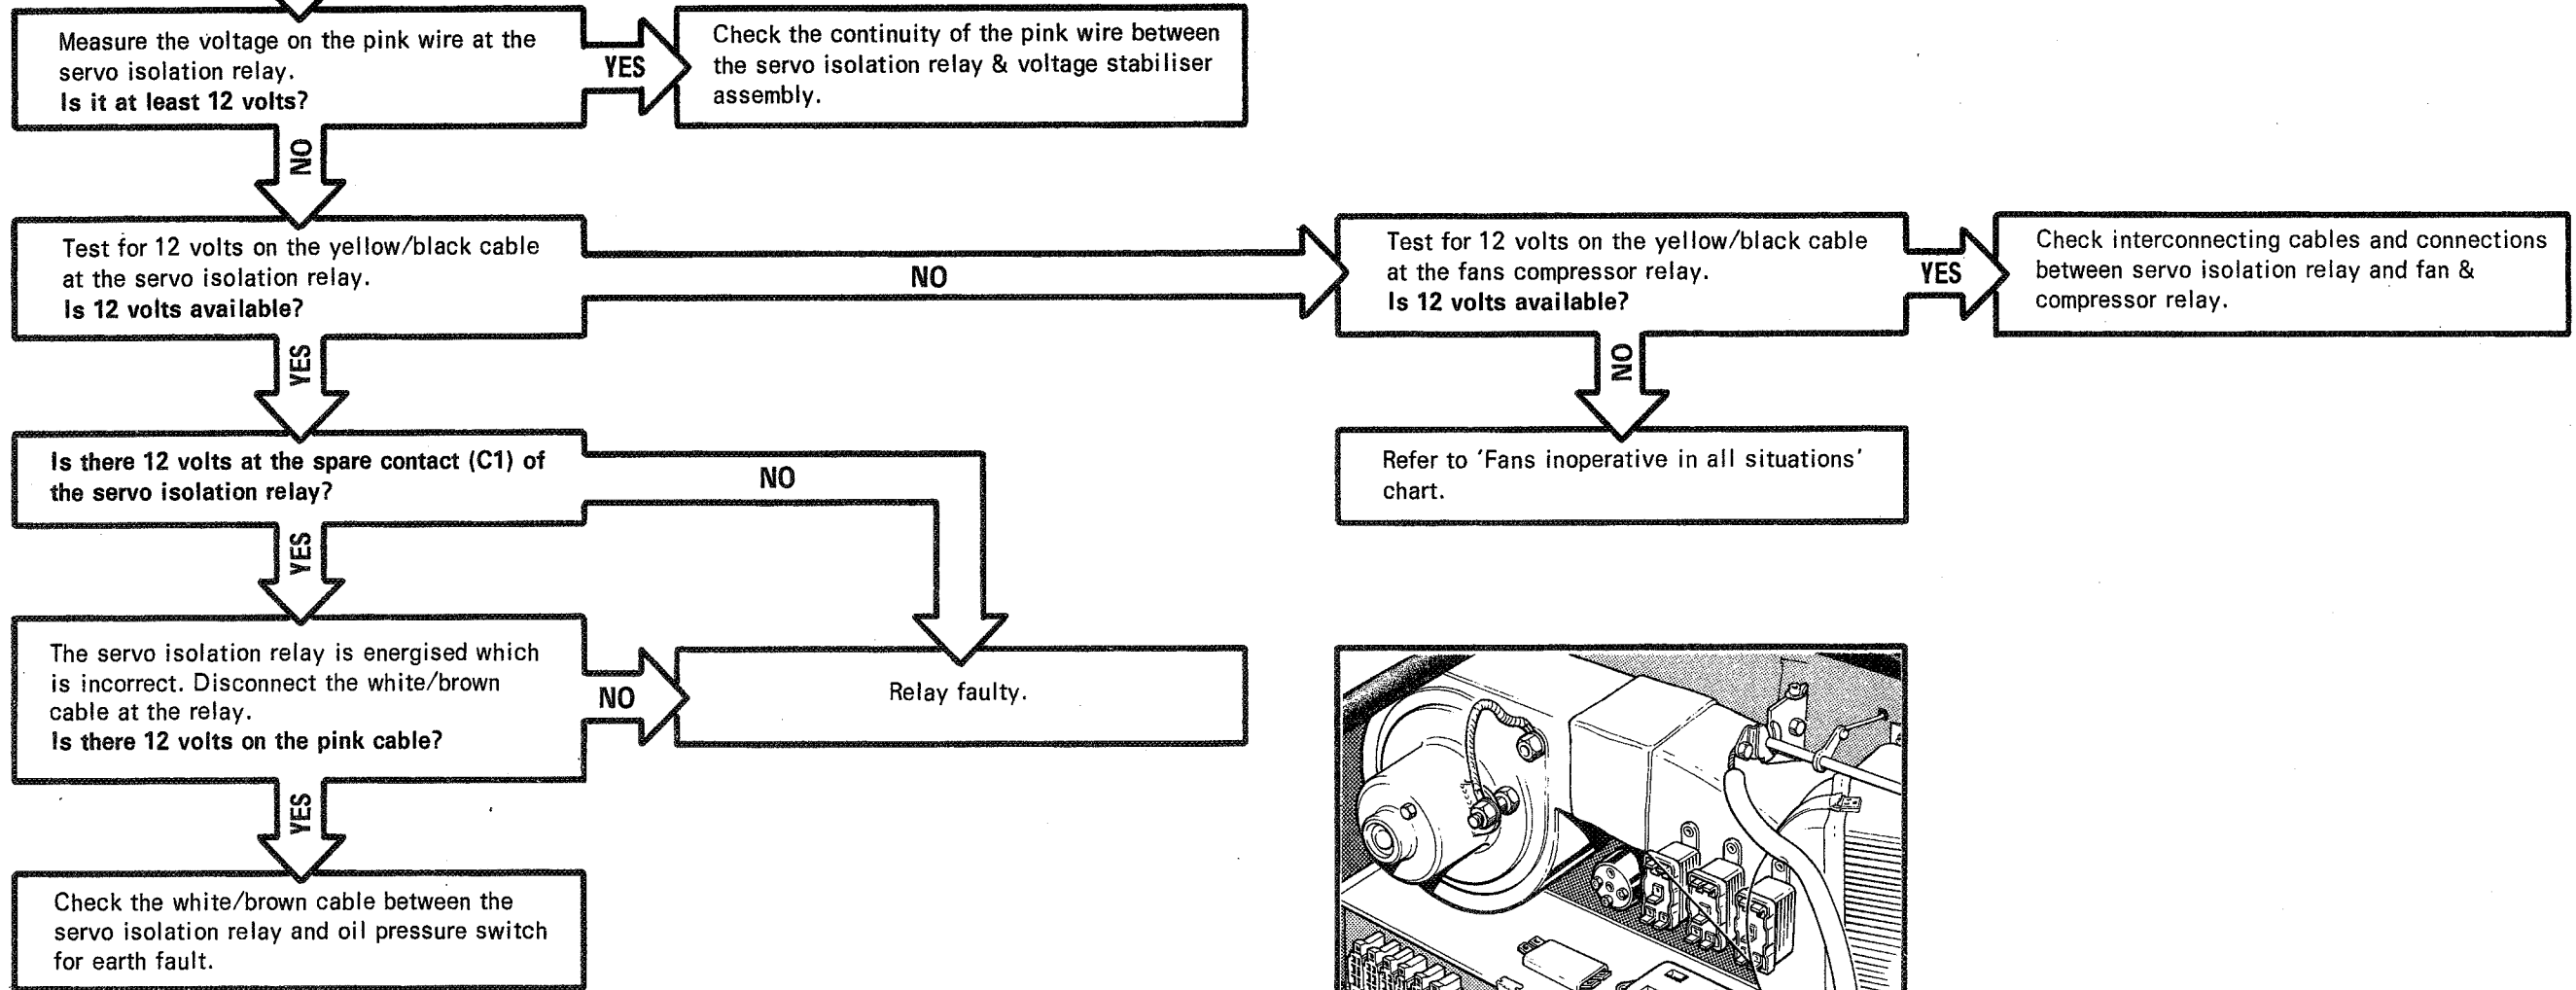

1. Fan and compressor relay
2. Fan delay relay
3. Servo isolation relay