
SECTION E.

FRONT PUMP

TITLE GEARBOX SERIES PAGE

FRONT PUMP ALL. E.I

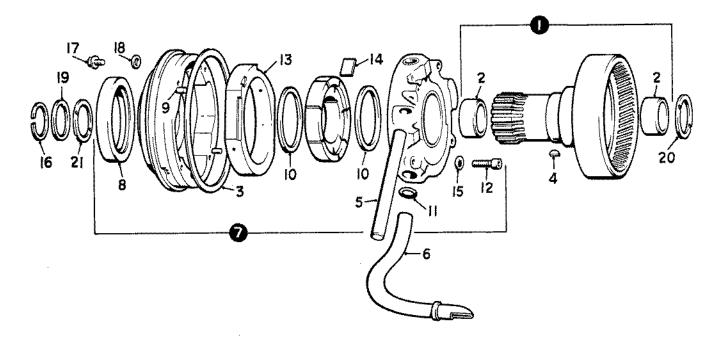



Ref.	Part No.	Description	No. off
(1)	UG.1408	GEARSHAFT, DRIVE—ASSY.	1
(2)	UG.1339	Bush, intermediate shaft	2
(3)	UG.1322	Joint, pump to casing	1
(4)	UG.105	Key, driving, gearshaft	1
(5)	UG.286	Pipe, pump to servo	1
(6)	UG.1452	PIPE, SUMP FILTER TO PUMP—ASSY.	. 1
(7)	UG.2618	PUMP, FRONT-ASSY,	1
(8)	UG.3670	Seal, oil	1
(9)	UG.609	Pín, dowel	2
(10)	UG.455	Ring, inner	2
(11)	UG.137	Ring, sealing, pipe	1
(12)	UG.1422	Screw, pump body	4
(13)	UG.2617	Slide, variable delivery	1
(14)	UG.481	Vane, rotor	7
(15)	UG.1218	Washer, lock, screw	4
(16)	UG.170	Ring, spring, thrust washers	1
(17)	UG.1527	Screw, pump to casing	2
(18)	UG.280	Washer, locating, pump	1
(19)	UG.1448	Washer, thrust, .093"	
	UG.1289	Washer, thrust, .098"	***
	UG.1909	Washer, thrust, .103"	1
	UG.1910	Washer, thrust, .106"	25
	UG.1911	Washer, thrust, .109"	reqd.
	UG.1912	Washer, thrust, .112"	
	UG.1913	Washer, thrust115"	*
	UG.1914	Washer, thrust, .117"	
(20)	UG.281	Washer, grooved, gearshaft	1
(21)	UG.287	Washer, grooved, gearshaft	1

FRONT PUMP