

## INDEX OF SECTIONS

- SECTION A. ENGINE.
- B. LUBRICATION.
- C. FUEL AND CARBURATION.
- D. COOLING SYSTEM.
- E. PROPELLER SHAFT.
- F. BRAKES.
- G. FRONT SUSPENSION.
- H. REAR SUSPENSION.
- J. REAR AXLE.
- K. STEERING.
- L. ELECTRICAL AND IGNITION.
- M. EXHAUST SYSTEM.
- N. FRAME.
- P. BODY.
- Q. CLUTCH (SYNCHROMESH GEARBOX).
- R. GEARBOX (SYNCHROMESH).
- S. TOOLS - SPARES.
- T. STANDARD PARTS.

## SPARES SCHEDULE

### PREFACE

This schedule of spare parts is for Rolls-Royce and Bentley S.I type cars,

Silver Cloud 'D' Series and onwards.

Bentley 'S' Type 'E' Series and onwards.

Bentley Continental 'D' Series and onwards.

Silver Cloud, Long Wheel Base.

Bentley 'S' Type, Long Wheel Base.

For the purpose of this schedule, the car is broken down into clearly defined sections. Each section being divided into sub-sections of correlated items and assemblies.

The sub-sections are detailed and illustrated on each page. Where an alteration or modification has been made to the car and affecting a sub-section, this is shown on a following page with the appropriate chassis numbers.

The illustrations and text are itemized for easy reference. A major assembly is printed in capitals with the parts which go to make up the assembly indented to the right. All "Standard Parts" which are common to many sections, such as bolts, nuts and washers, etc., are printed in italics.

## NOTES

Certain abbreviations are used in the text of the Schedule as set out below.

- R.H. Right-hand. In all cases this means the right-hand side of the car as viewed from the rear looking forwards.
- L.H. Left-hand. Remarks as for R.H.
- R.C. Right Control. The item is only applicable when the driving controls are on the R.H. side of the car.
- L.C. Left Control. Remarks as for R.C.
- L.W.B. Long Wheelbase Cars.
- ALT. Alternatives.
- O/D. Outside diameter.
- I/D. Internal diameter.
- O.B. Oil Bath.
- S/A. Sub-assembly.

Adjusting washers and Sealing rings, the measurement given is the thickness.