






Front seats

Contents	Specific application	Pages							
		Rolls-Royce			Bentley	Mulsanne	Mulsanne S	Turbo R	Continental
Silver Spirit	Silver Spur	Corniche / Corniche II	Eight						
Cars fitted with memory seat facility									
Component location	Right-hand seat	27-2	27-2	27-8	27-2	27-2	27-2	27-2	27-8
Wiring diagram		27-3	27-3	27-9	27-3	27-3	27-3	27-3	27-9
Component location	Left-hand seat	27-4	27-4	27-10	27-4	27-4	27-4	27-4	27-10
Wiring diagram		27-5	27-5	27-11	27-5	27-5	27-5	27-5	27-11
Cars other than those fitted with memory seat facility									
Component location	Right-hand seat	—	—	27-12	27-6	—	—	—	27-12
Wiring diagram		—	—	27-12	27-6	—	—	—	27-12
Component location	Left-hand seat	—	—	27-13	27-7	—	—	—	27-13
Wiring diagram		—	—	27-13	27-7	—	—	—	27-13






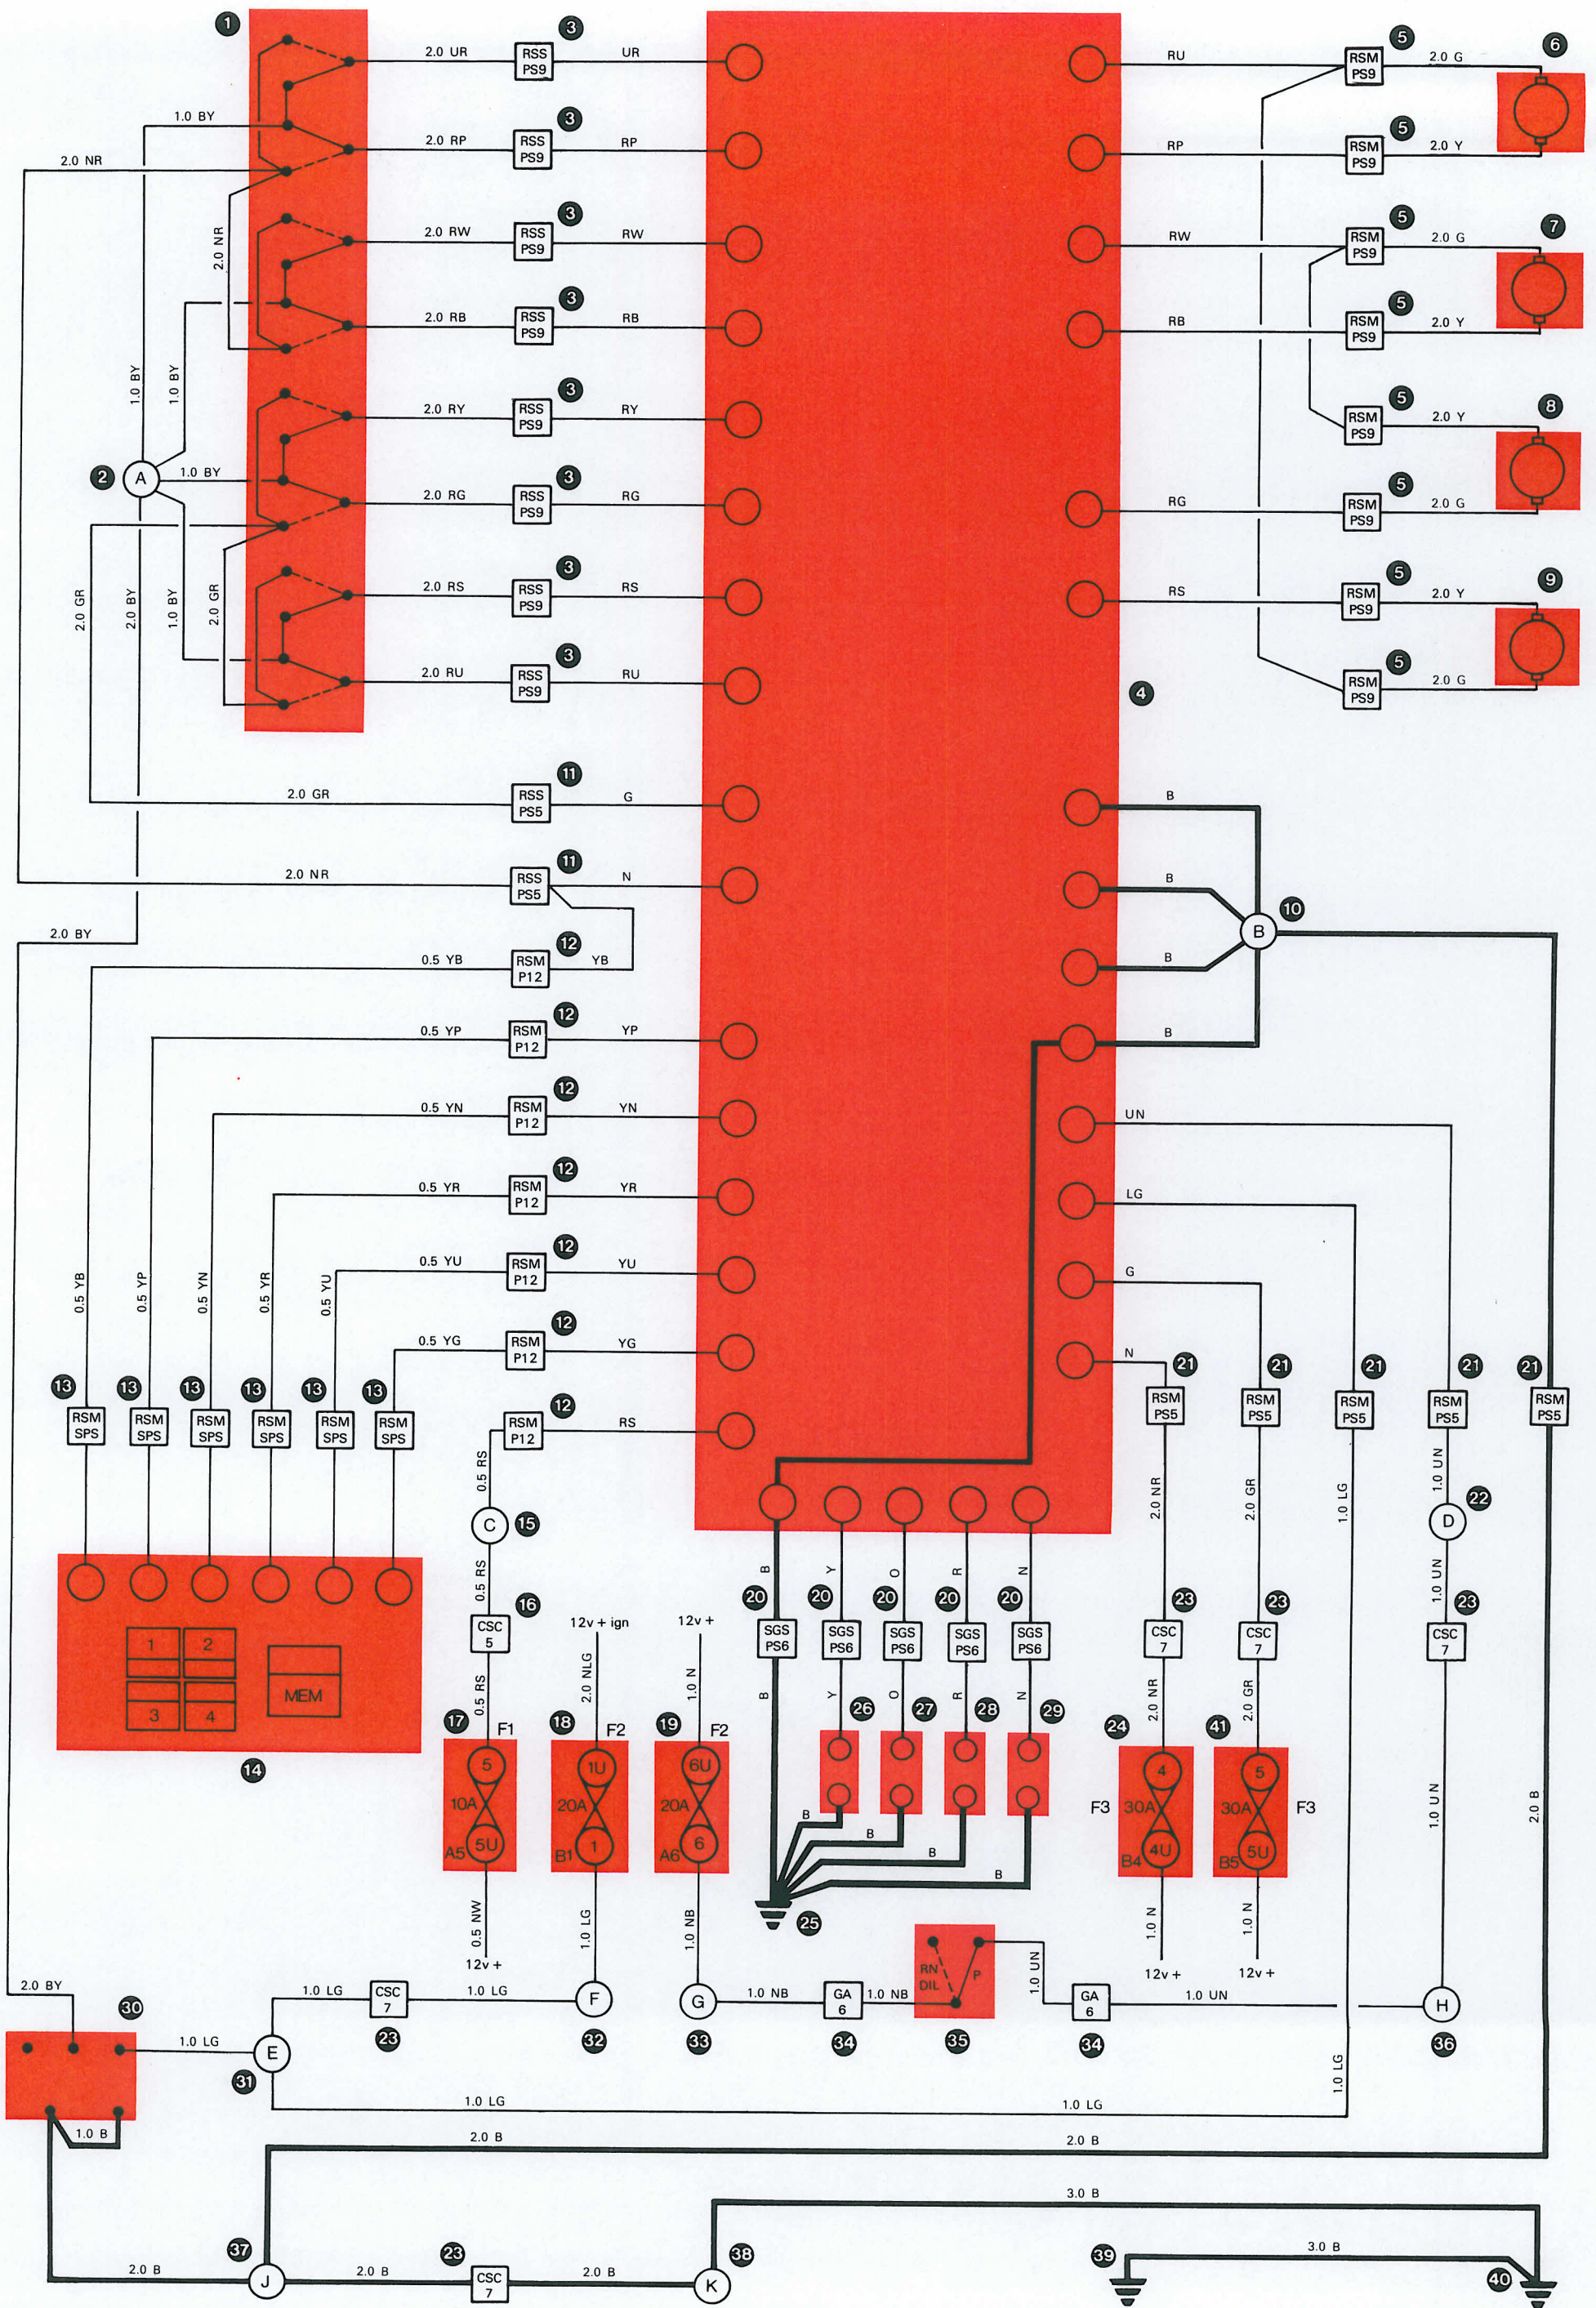


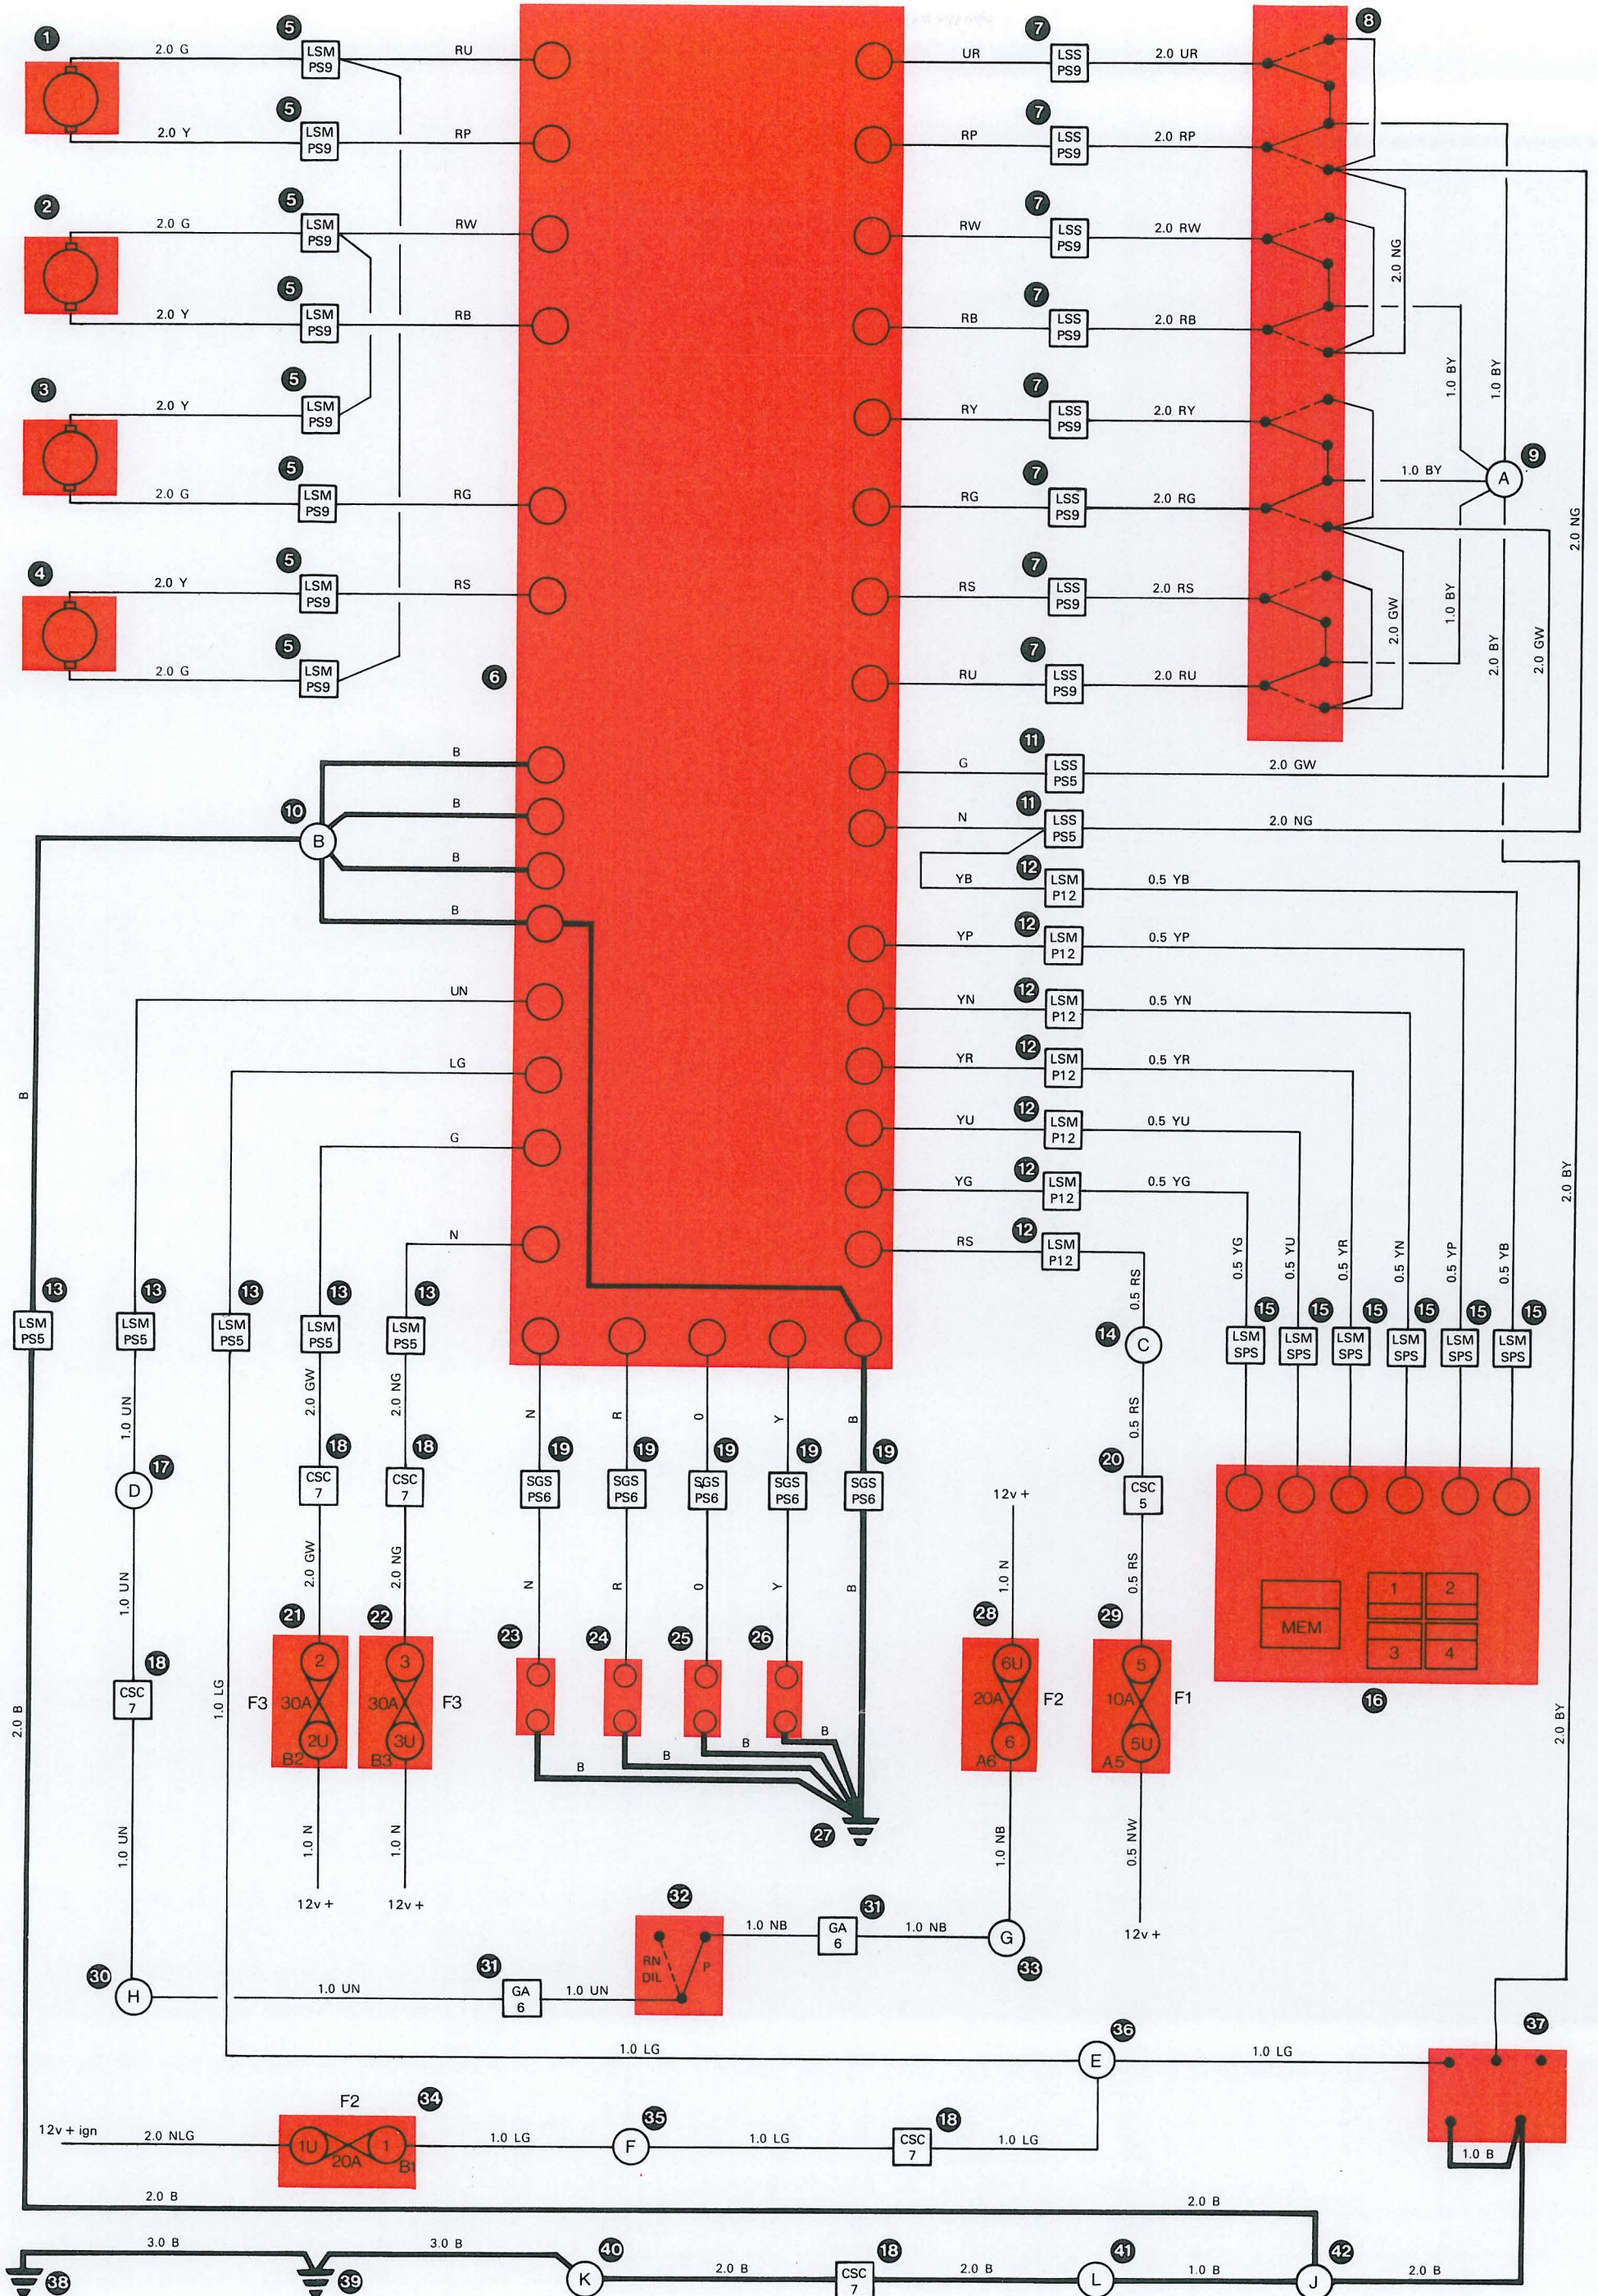


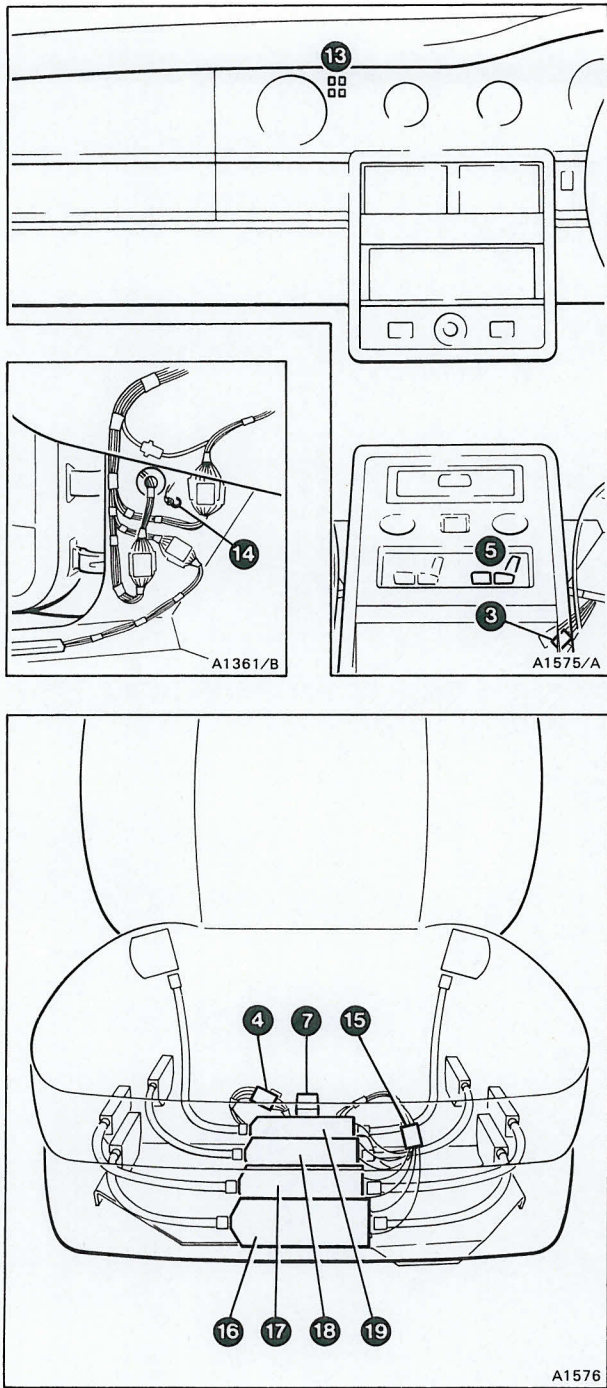

Key to 27-6

  
- 1 Fuseboard F3, fuse B4, 30 Amp
- 2 Fuseboard F3, fuse B5, 30 Amp
- 3 Centre stowage compartment plug and socket 7-way
- 4 Bentley Eight seat switch plug and socket — right-hand
- 5 Right-hand seat switch
- 6 Splice A
- 7 Right-hand seat relay
- 8 Splice B
- 9 Splice C
- 10 Splice D
- 11 Splice E
- 12 Fuseboard F2, fuse B1, 20 Amp
- 13 Instrument panel earth point
- 14 Left-hand 'A' post earth point
- 15 Right-hand seat motors plug and socket
- 16 Right-hand seat motor, controlling front up/down tilt
- 17 Right-hand seat motor, controlling forward and reverse
- 18 Right-hand seat motor, controlling rear up/down tilt
- 19 Right-hand seat motor, controlling forward/rear seat squab rake

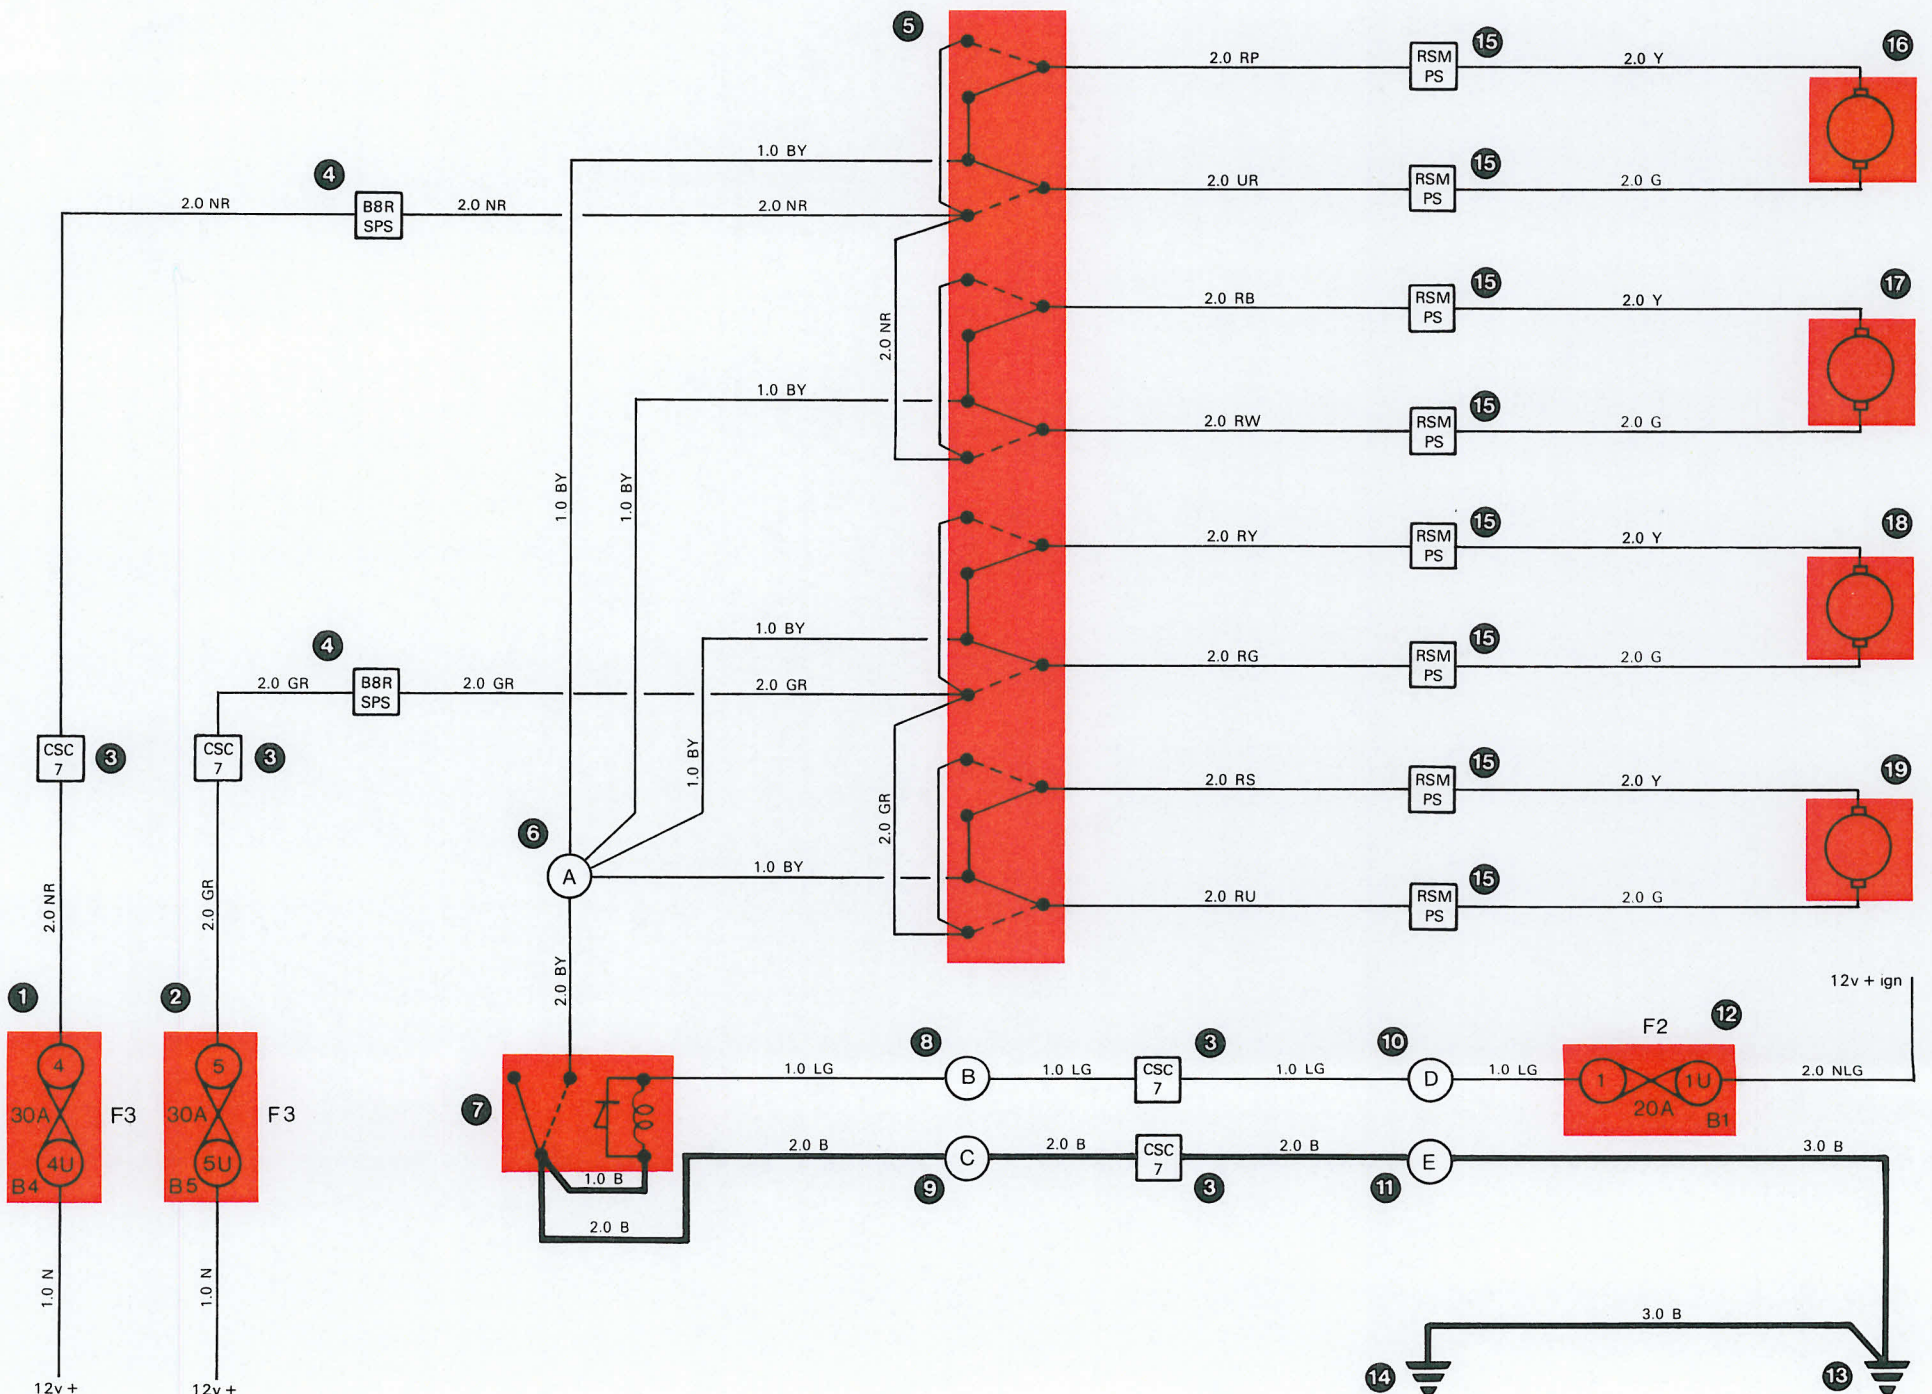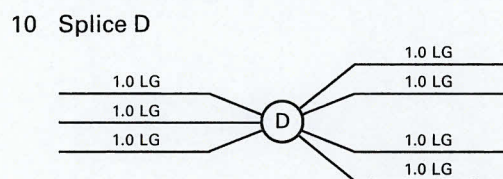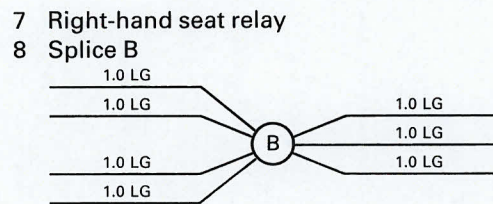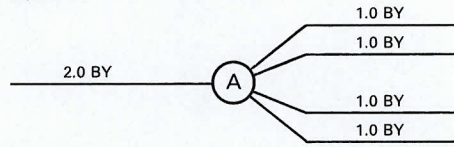

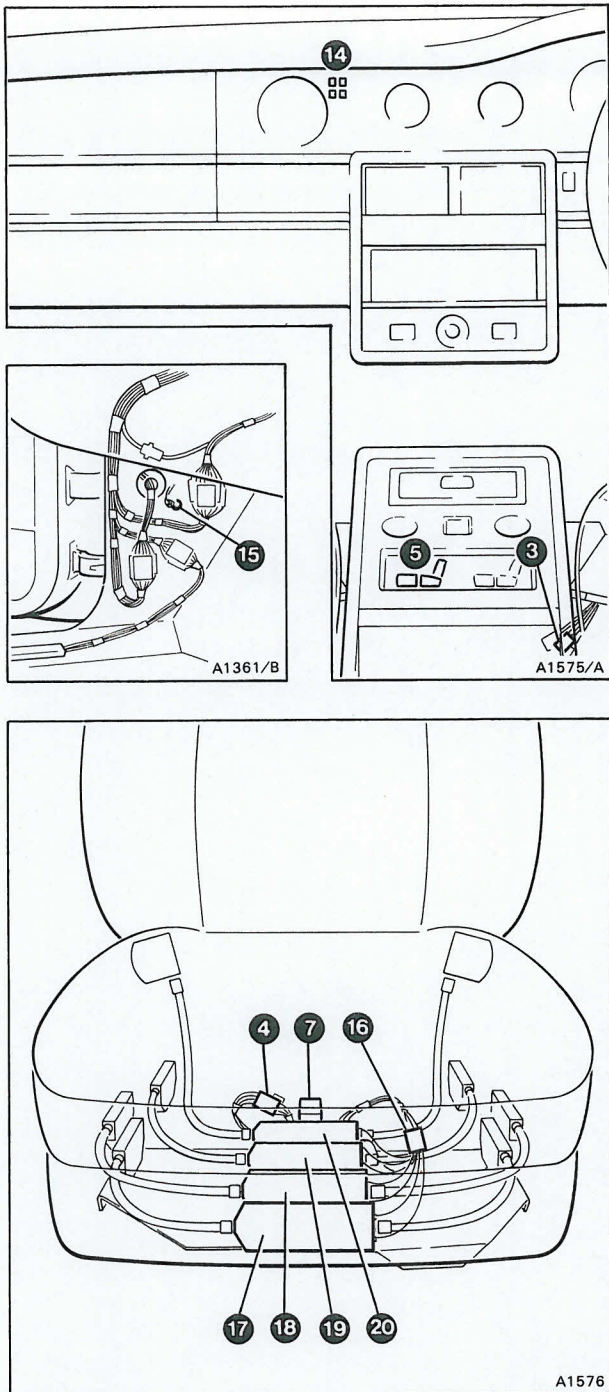


Key to 27-7


- 1 Fuseboard F3, fuse B3, 30 Amp
- 2 Fuseboard F3, fuse B2, 30 Amp
- 3 Centre stowage compartment plug and socket 7-way
- 4 Bentley Eight seat switch plug and socket — left-hand
- 5 Left-hand seat switch
- 6 Splice A

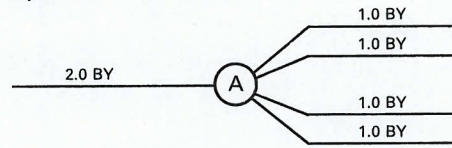


- 7 Left-hand seat relay
- 8 Splice C

 


- 9 Splice D

 


- 10 Splice B

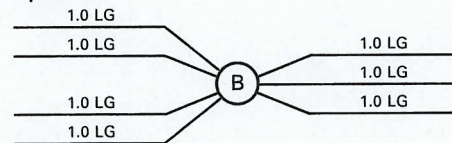

- 11 Splice F

 



- 12 Splice E

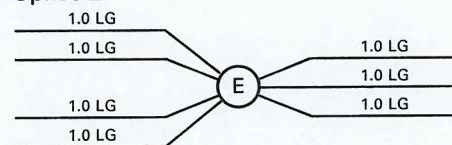



- 13 Fuseboard F2, fuse B1, 20 Amp
- 14 Instrument panel earth point

- 15 Left-hand 'A' post earth point
- 16 Left-hand seat motors plug and socket
- 17 Left-hand seat motor, controlling front up/down tilt
- 18 Left-hand seat motor, controlling forward and reverse
- 19 Left-hand seat motor, controlling rear up/down tilt
- 20 Left-hand seat motor, controlling forward/rear seat squab rake

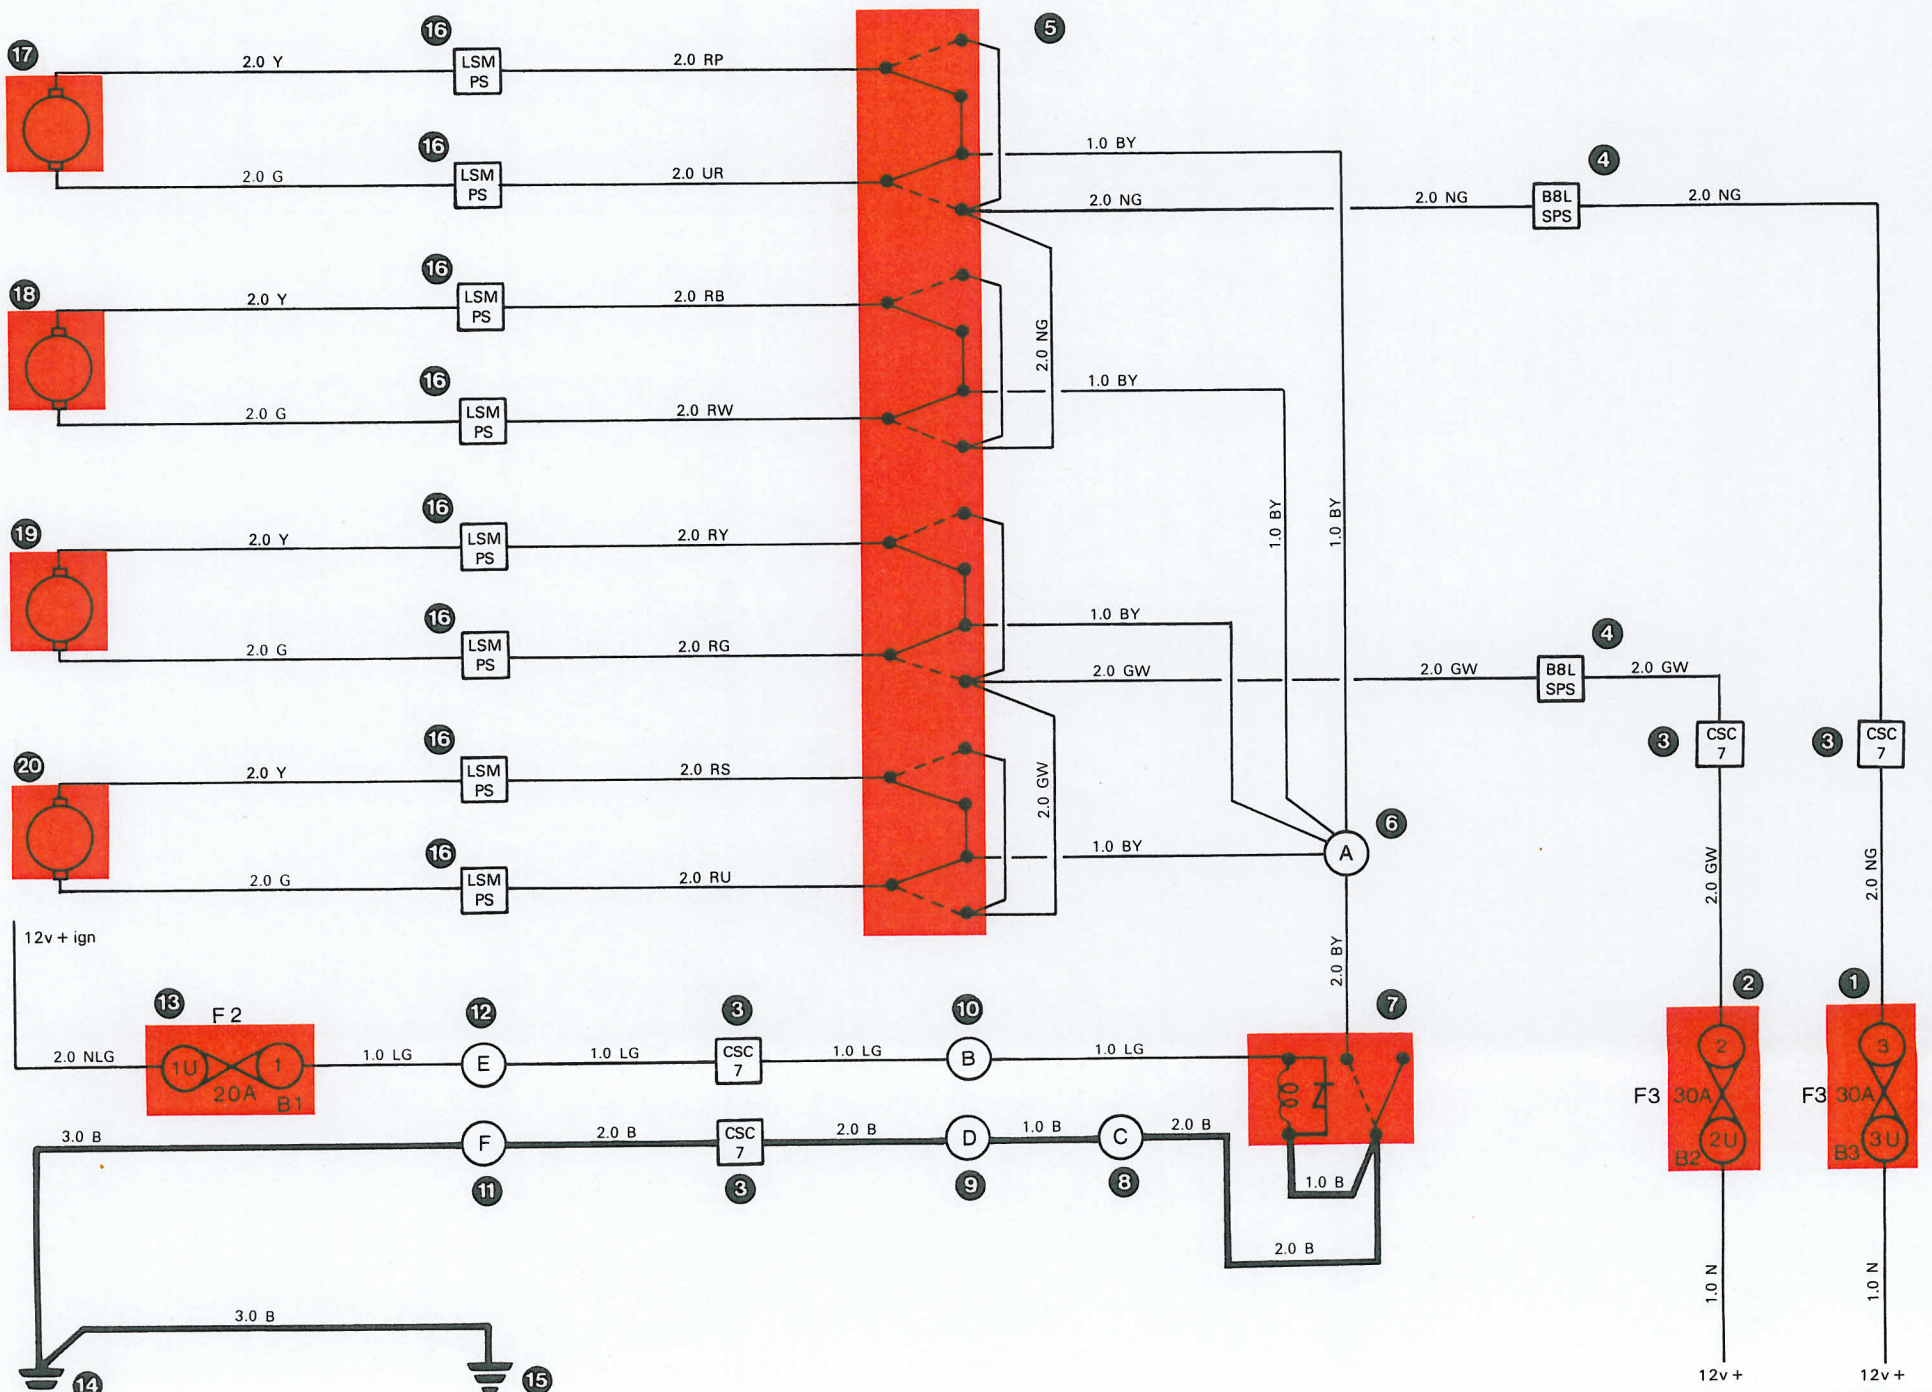

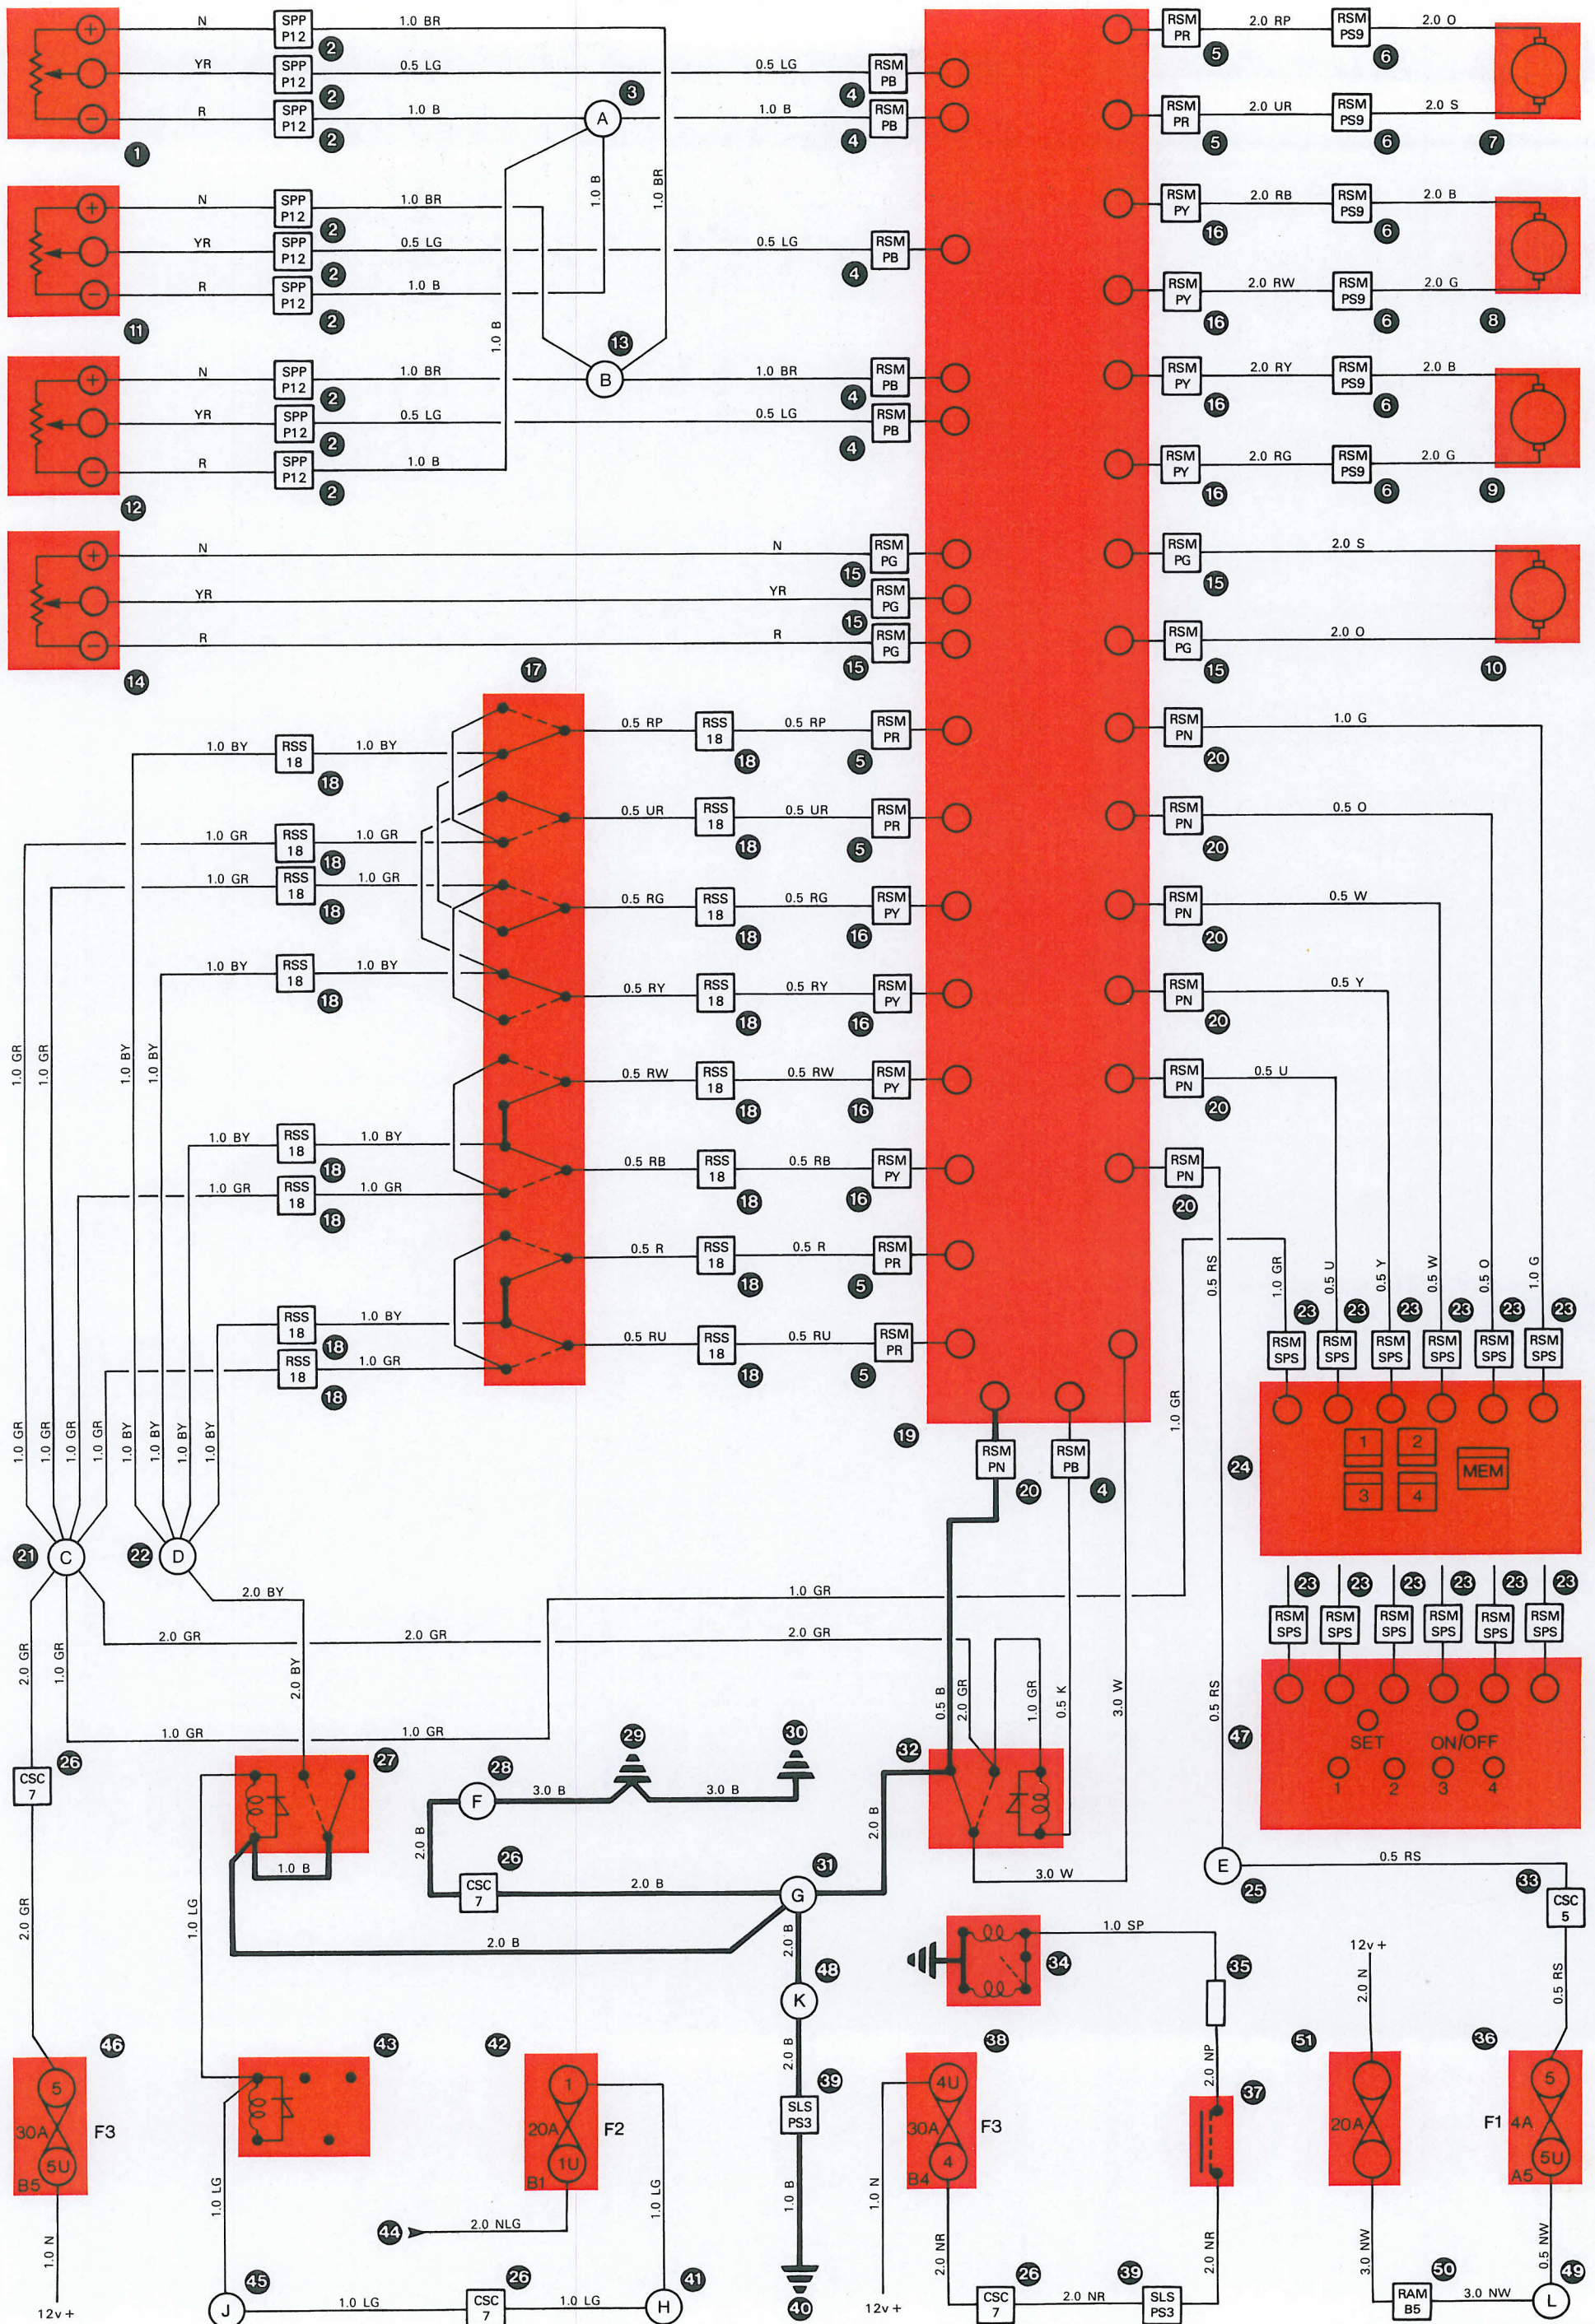


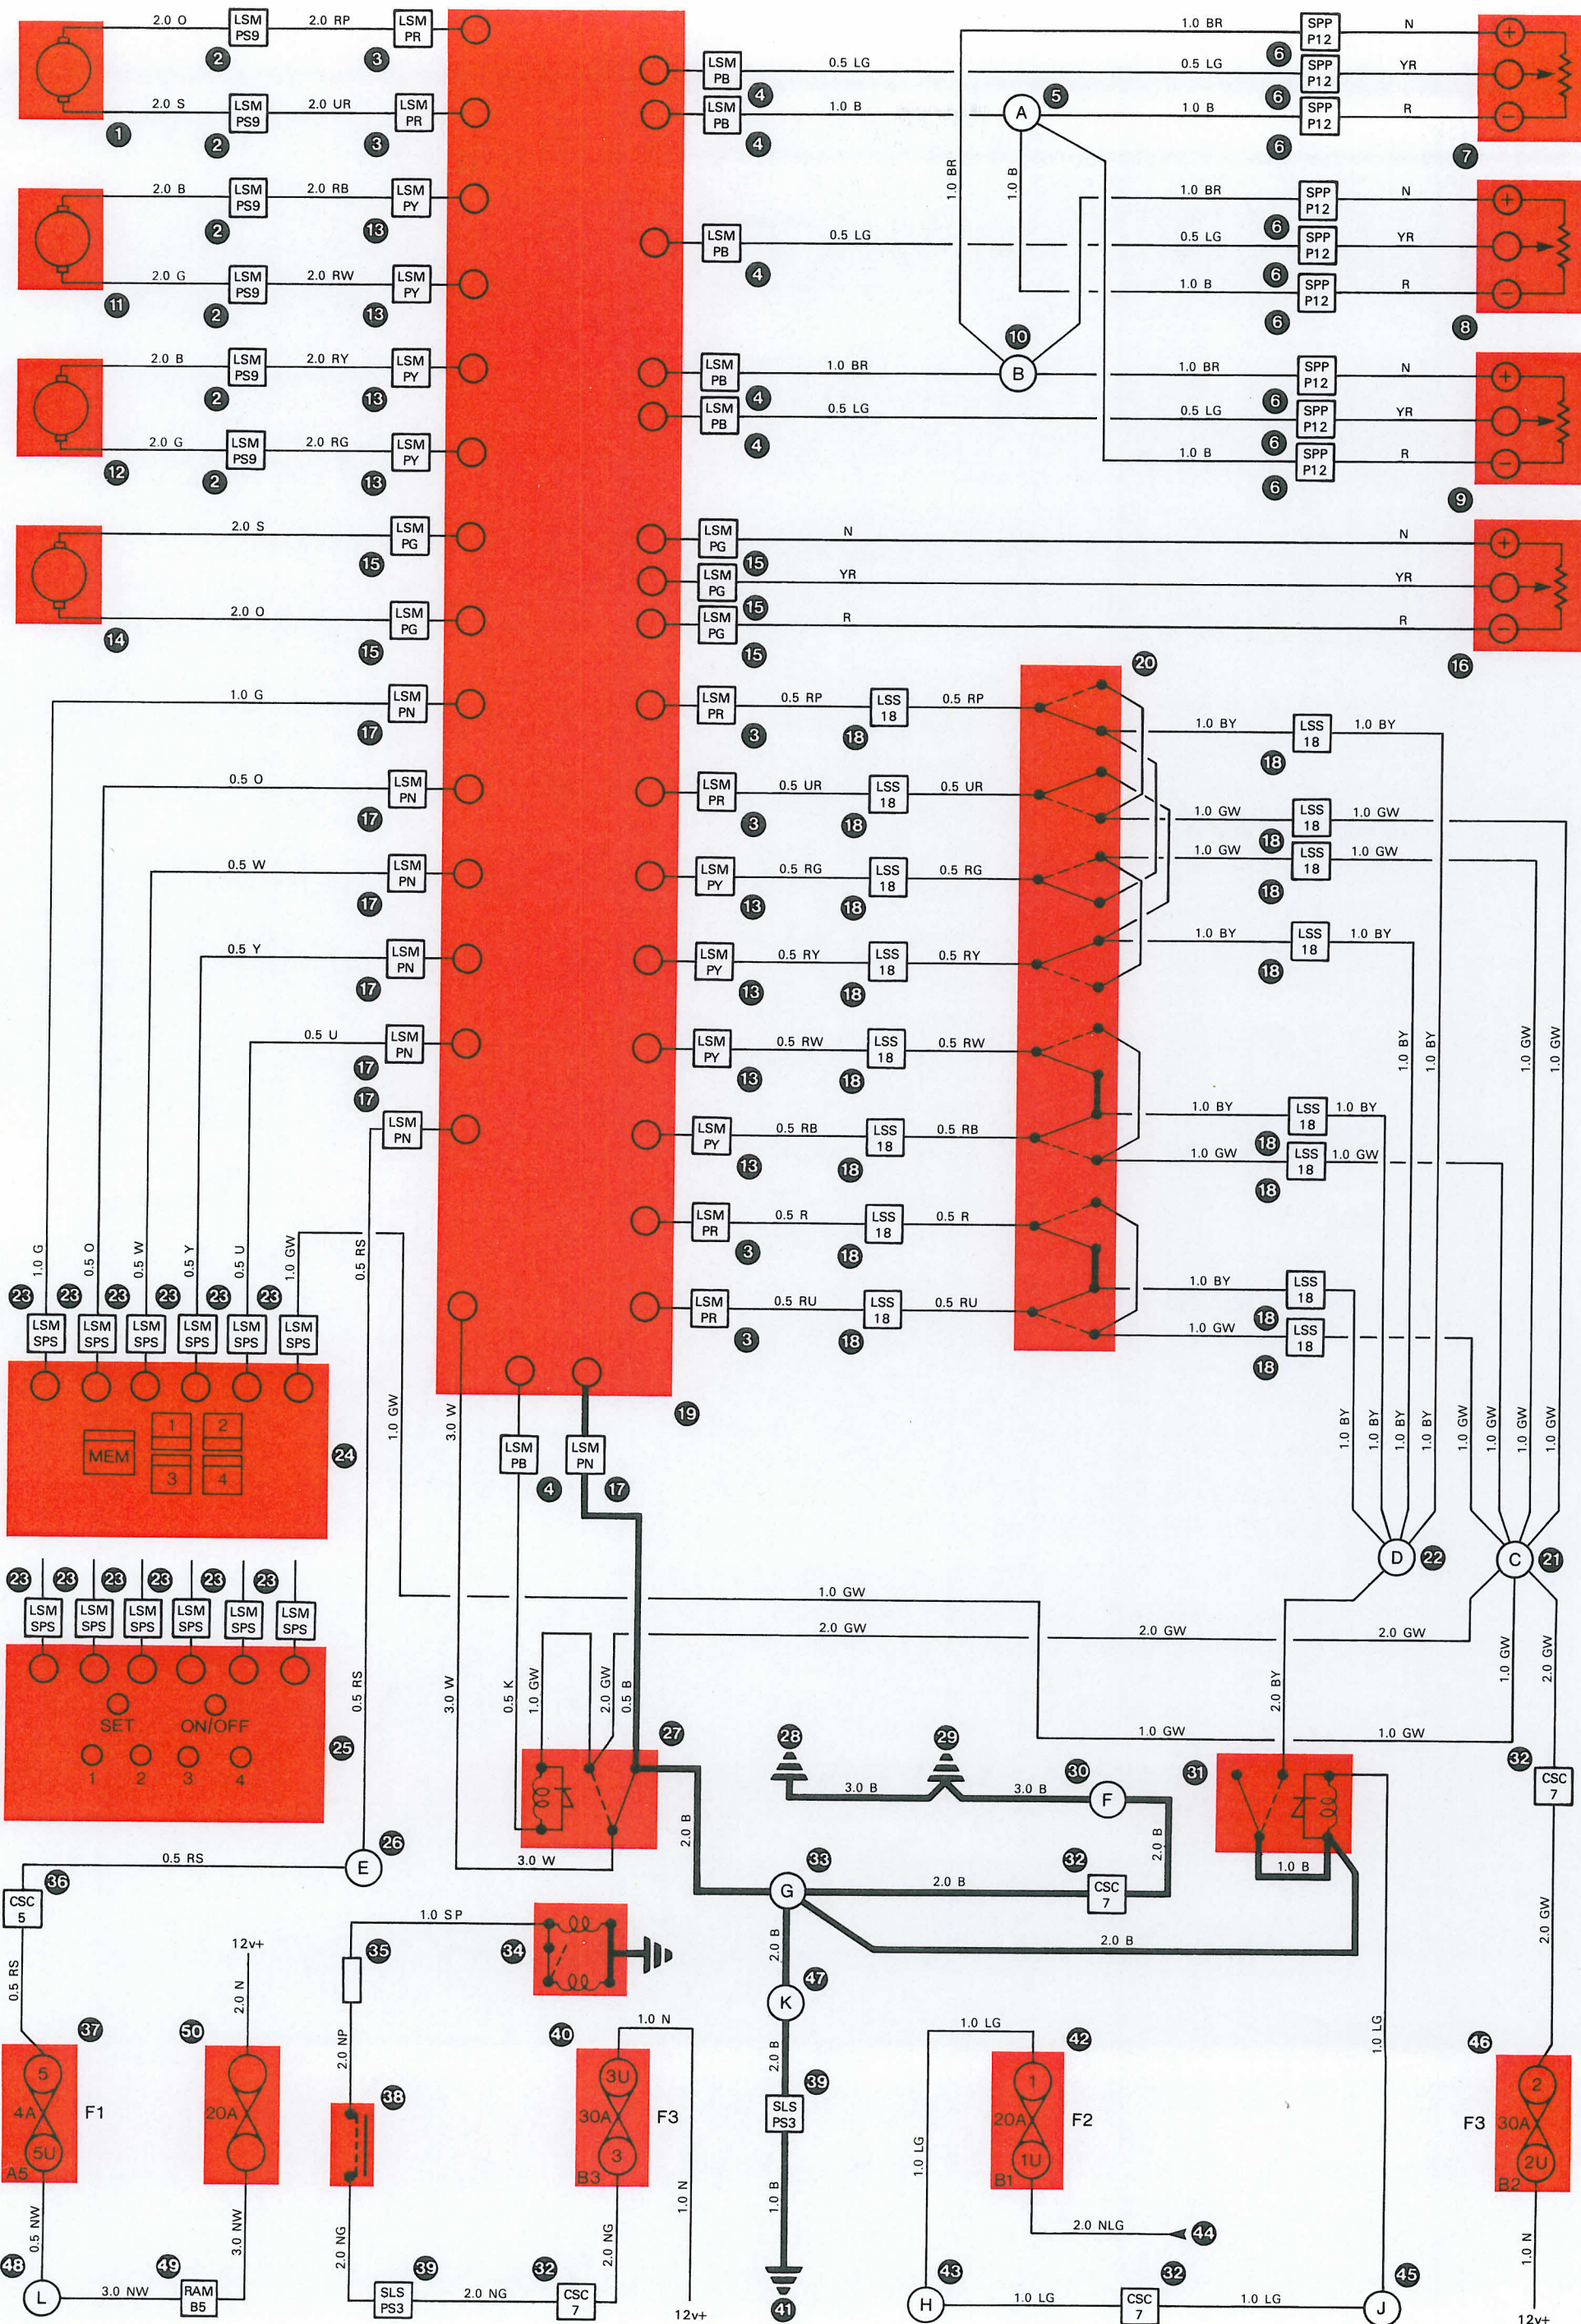

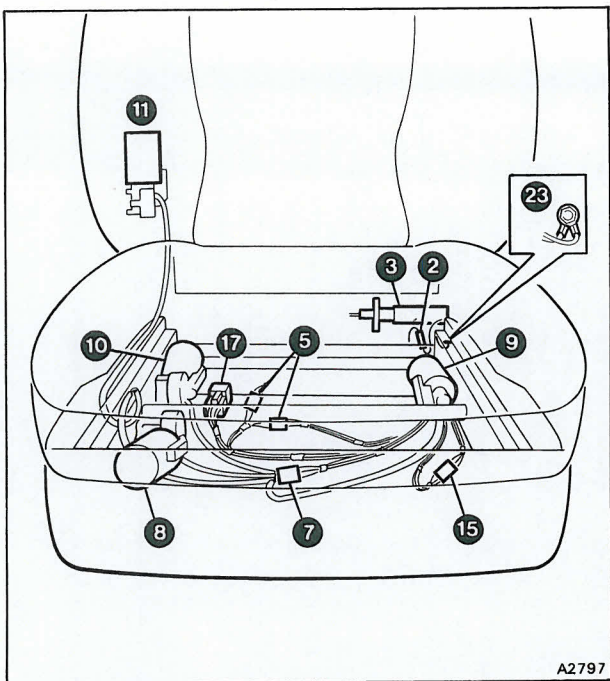


Key to 27-12

 
- 1 Squab locking switch
- 2 Barrel connector
- 3 Squab locking solenoid
- 4 Splice A




- 5 Right-hand seat loom plug and socket 5-way
- 6 Right-hand seat switches
- 7 Right-hand seat motors plug and socket 9-way
- 8 Right-hand seat motor, controlling front up/down tilt
- 9 Right-hand seat motor, controlling forward and reverse
- 10 Right-hand seat motor, controlling rear up/down tilt
- 11 Right-hand seat motor, controlling forward/rear seat squab rake
- 12 12 volts positive supply when ignition key is in the ACC or RUN position
- 13 Fuseboard F2, fuse B1, 20 Amp
- 14 Splice B

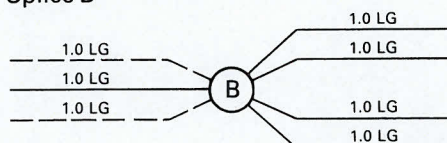


- 15 Centre stowage compartment plug and socket 7-way
- 16 Splice C

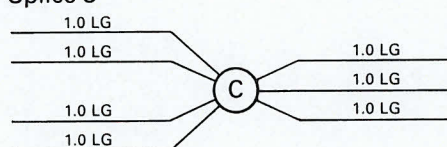


- 17 Right-hand seat relay
- 18 Splice D

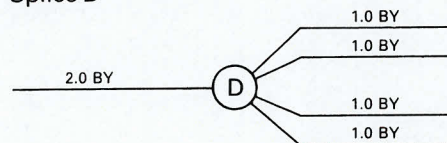



 
- 19 Fuseboard F3, fuse B4, 30 Amp
- 20 Fuseboard F3, fuse B5, 30 Amp
- 21 Splice E







- 22 Splice F

 


- 23 Right-hand seat base earth point
- 24 Instrument panel earth point
- 25 Left-hand 'A' post earth point

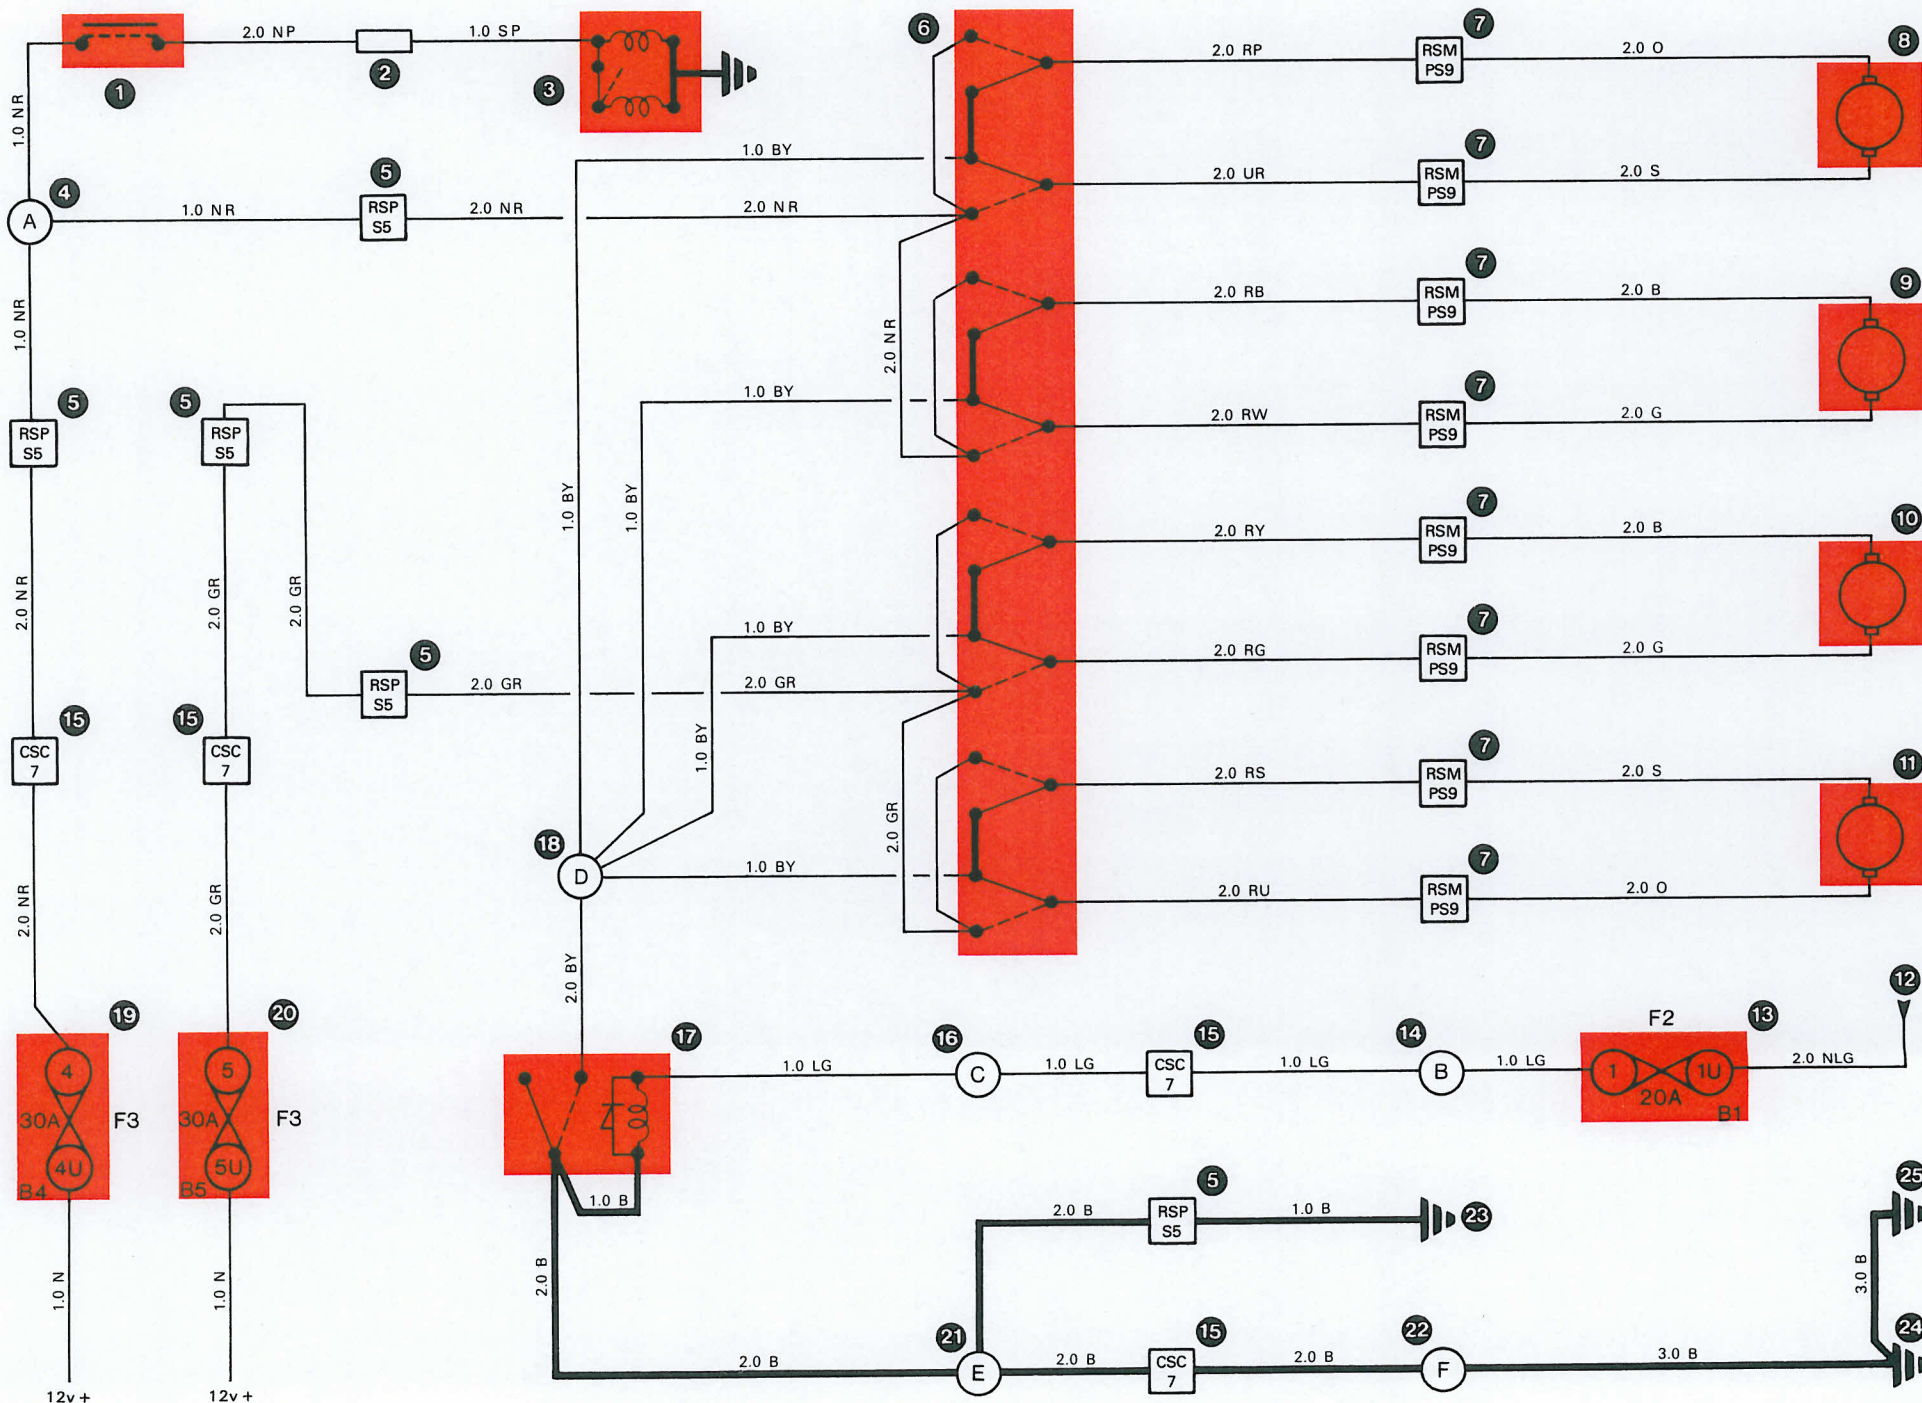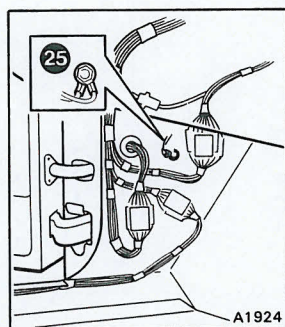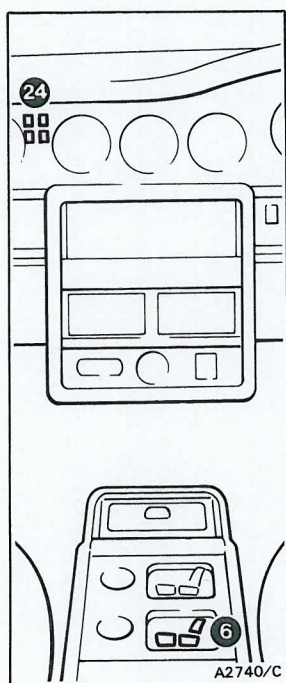

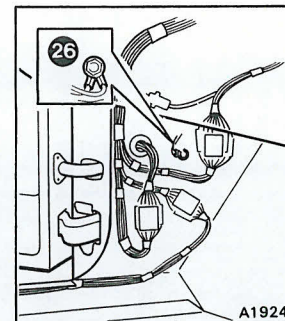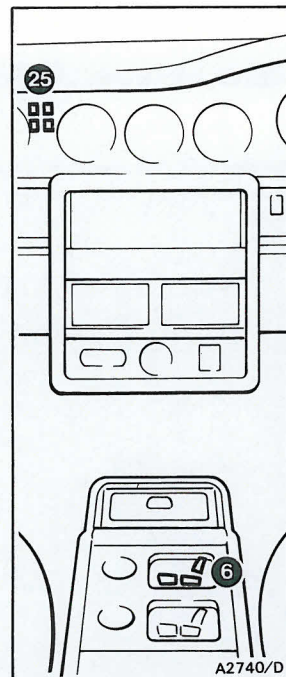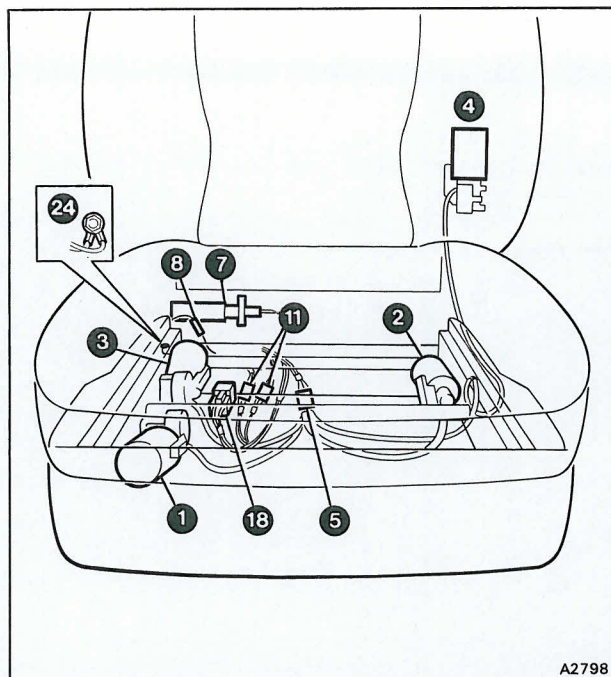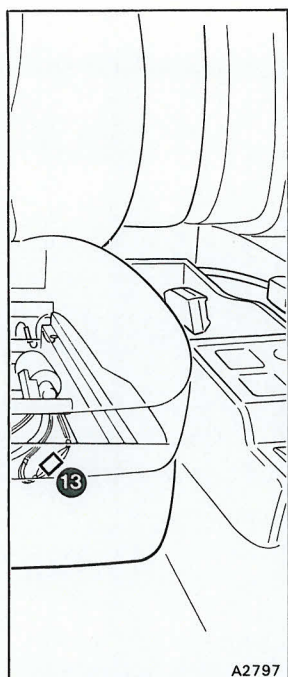


Key to 27-13

 
- 1 Left-hand seat motor, controlling front up/down tilt
- 2 Left-hand seat motor, controlling forward and reverse
- 3 Left-hand seat motor, controlling rear up/down tilt
- 4 Left-hand seat motor, controlling forward/rear seat squab rake
- 5 Left-hand seat motors plug and socket 9-way
- 6 Left-hand seat switches
- 7 Squab locking solenoid
- 8 Barrel connector
- 9 Squab locking switch
- 10 Splice A




12 Splice B

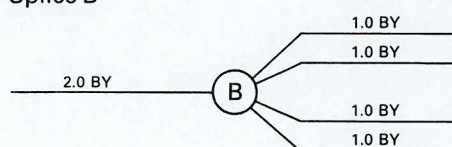


- 13 Centre stowage compartment plug and socket 7-way
- 14 12 volts positive supply when ignition switch is in the ACC or RUN position
- 15 Fuseboard F2, fuse B1, 20 Amp
- 16 Splice C

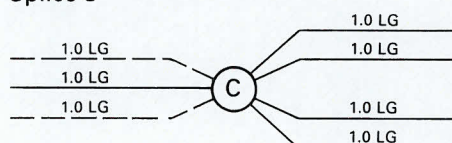


17 Splice D

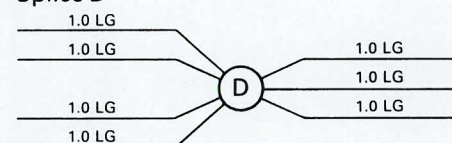

 
- 18 Left-hand seat relay
- 19 Fuseboard F3, fuse B2, 30 Amp
- 20 Fuseboard F3, fuse B3, 30 Amp
- 21 Splice E



22 Splice F

 

23 Splice G

 

- 24 Left-hand seat base earth point
- 25 Instrument panel earth point
- 26 Left-hand 'A' post earth point

- 11 Left-hand seat loom plug and socket 5-way

