 
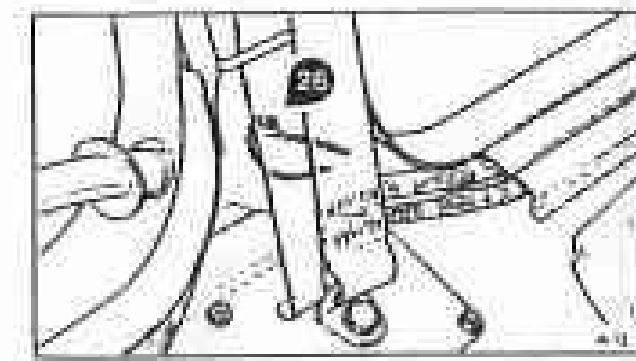 
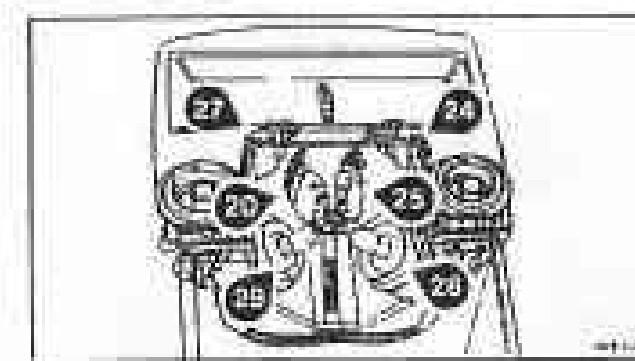 
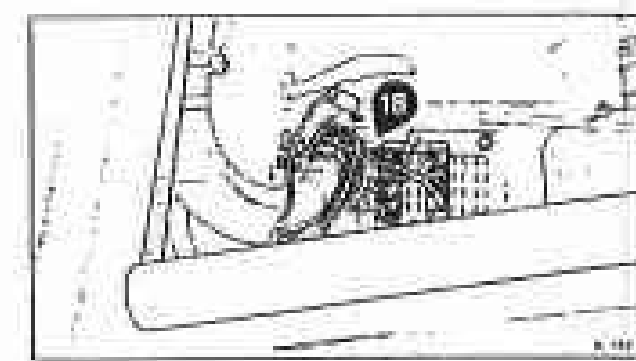 
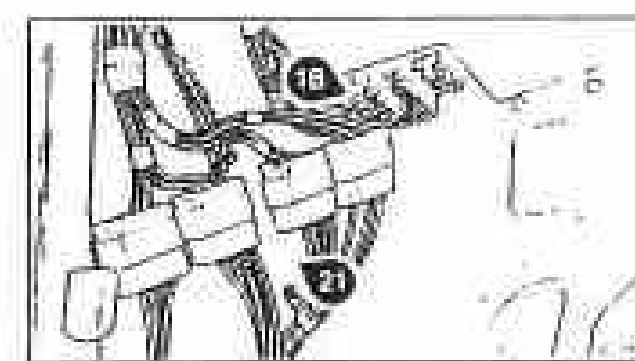 
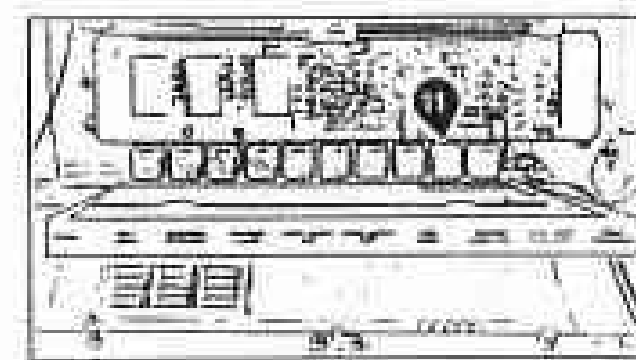 
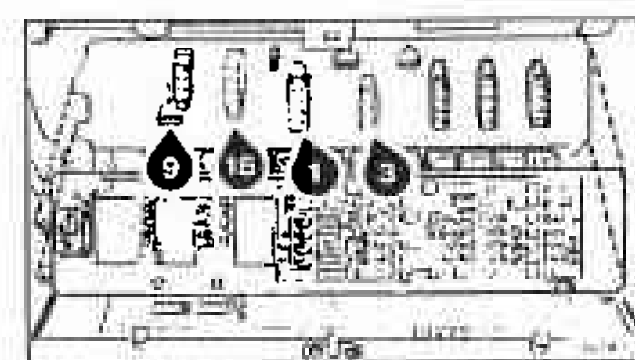 
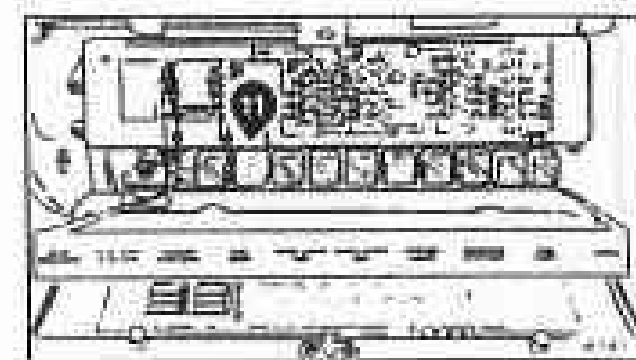 
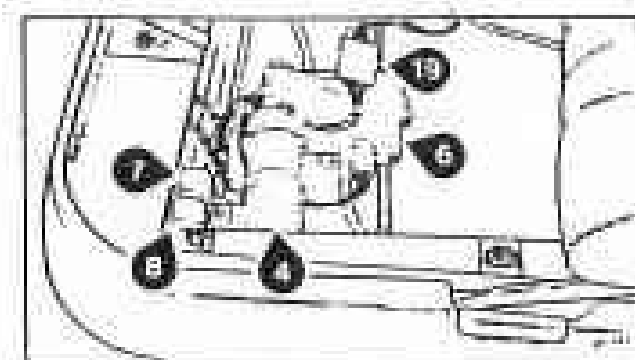 
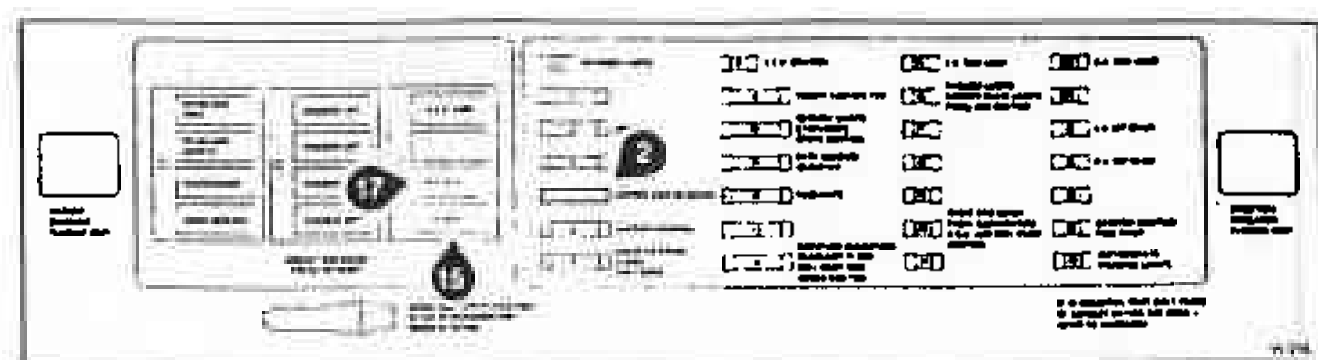 
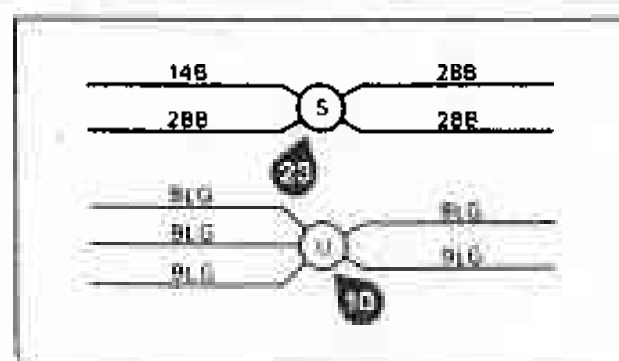 
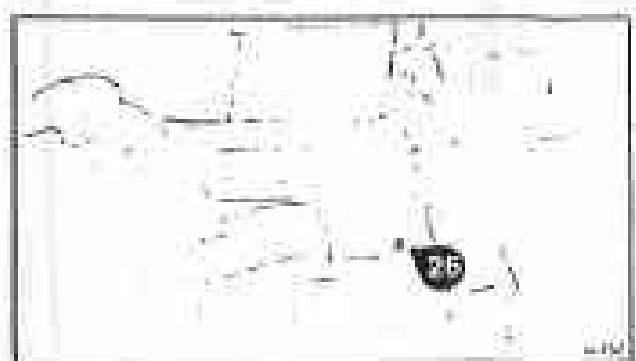 
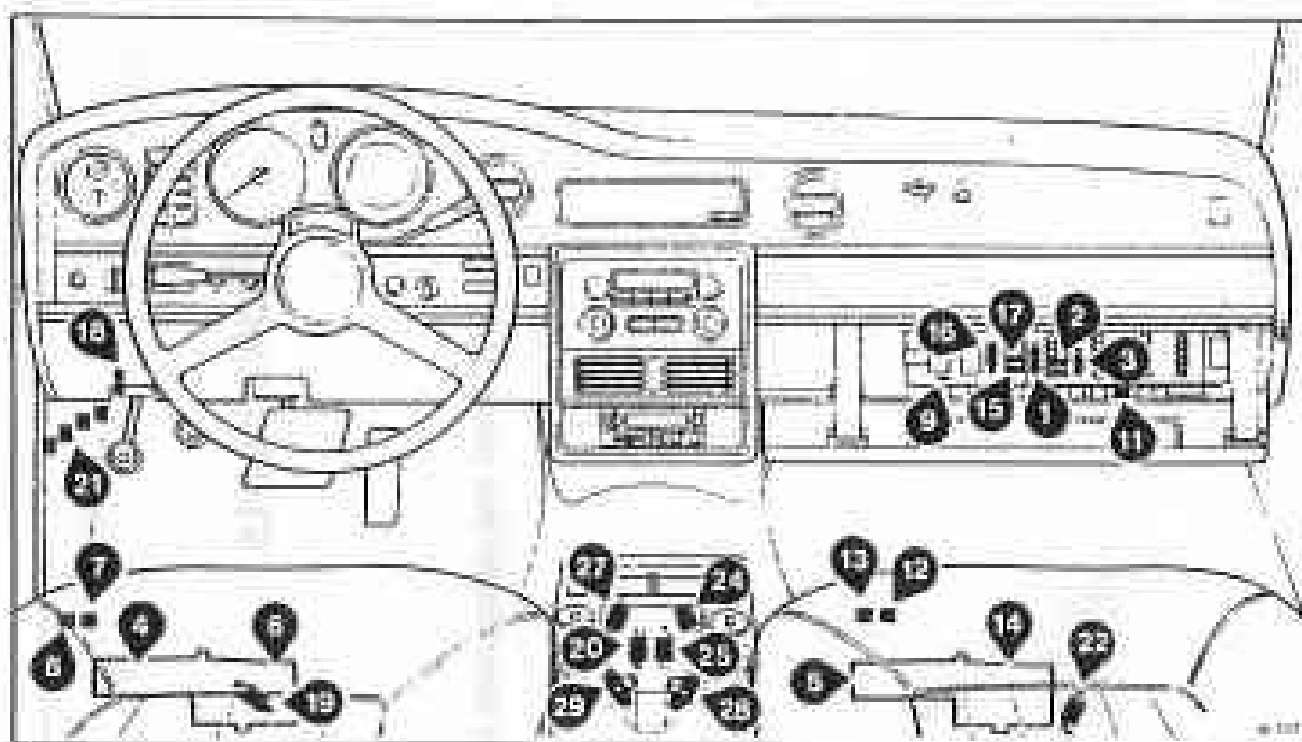 


Front seats

Wiring diagram and component location

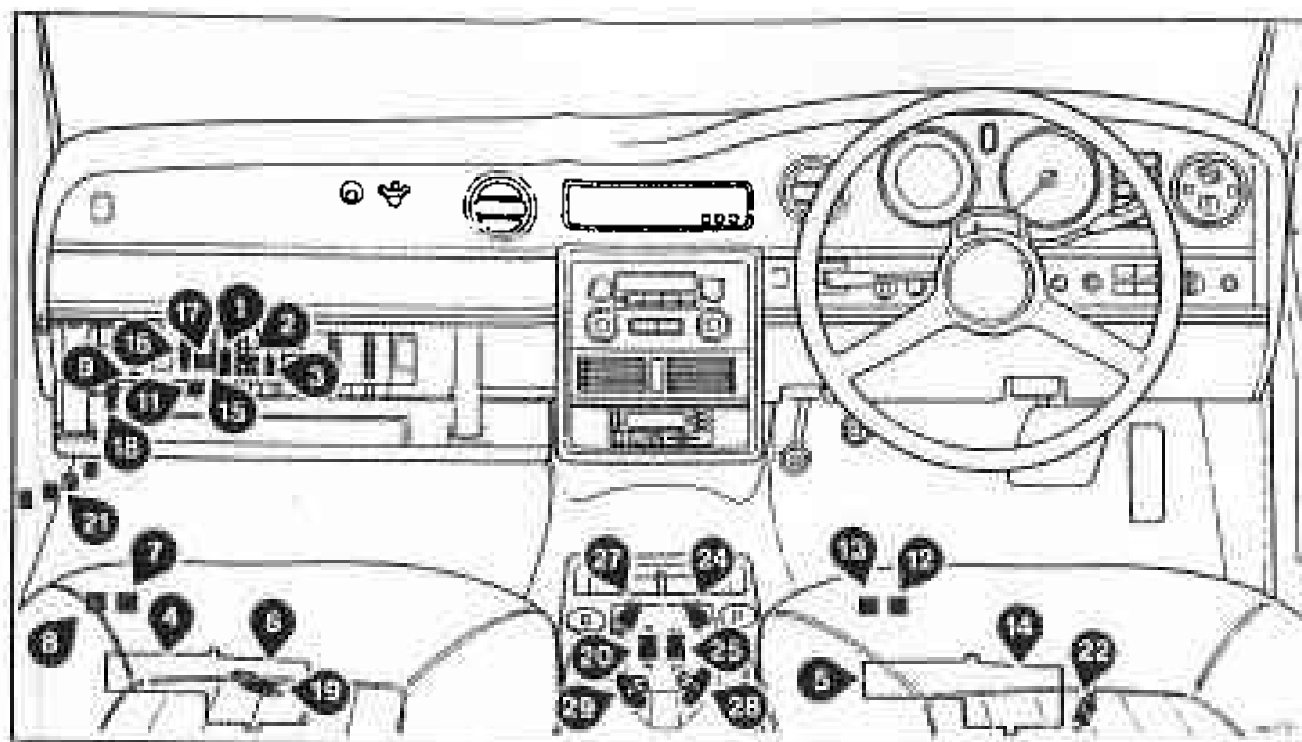

 
 
 
 
 
 
 
 
 
 
 
 
 
Front seats

**Rolls-Royce Silver Spirit, Silver Spur, and
Bentley Mulsanne (including Turbo)**

Wiring diagram and component location

A Non-division cars


B Division cars

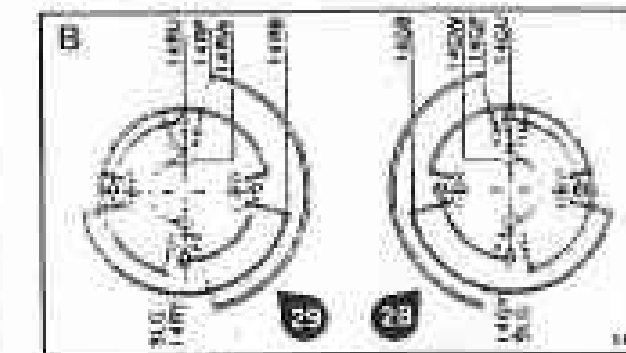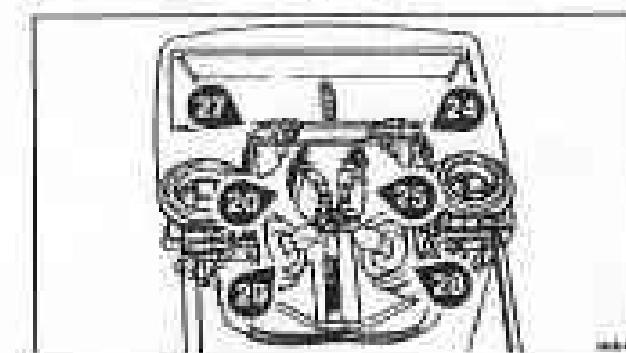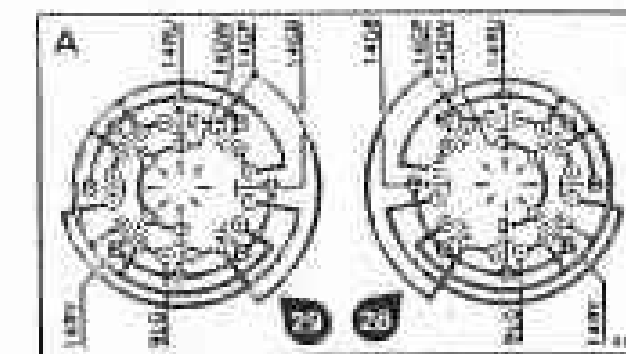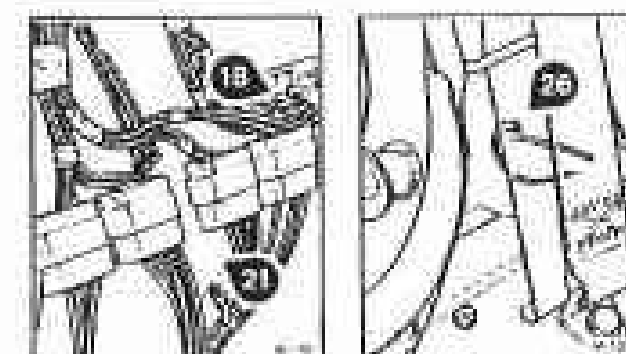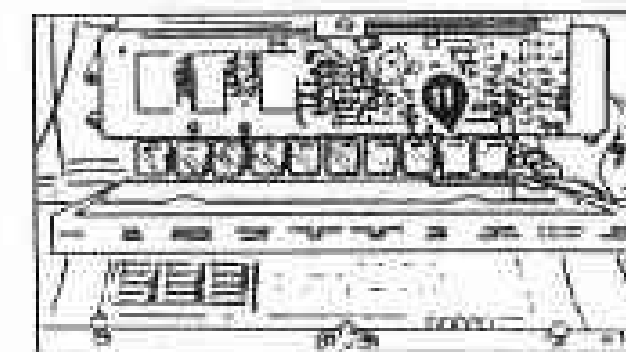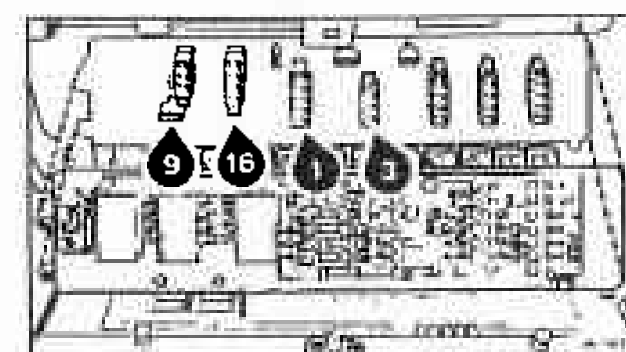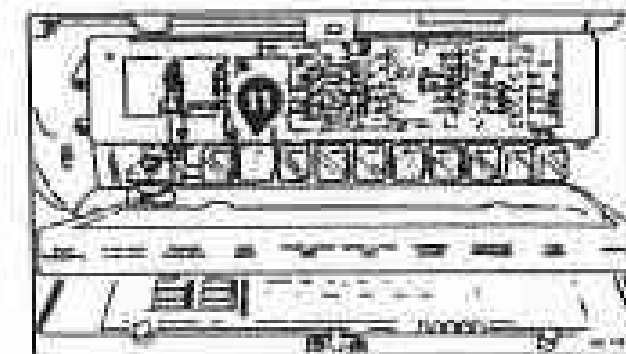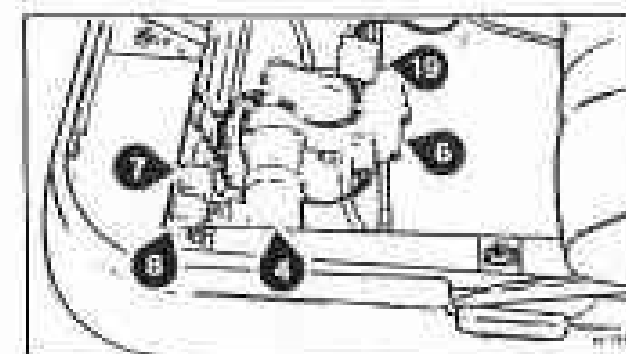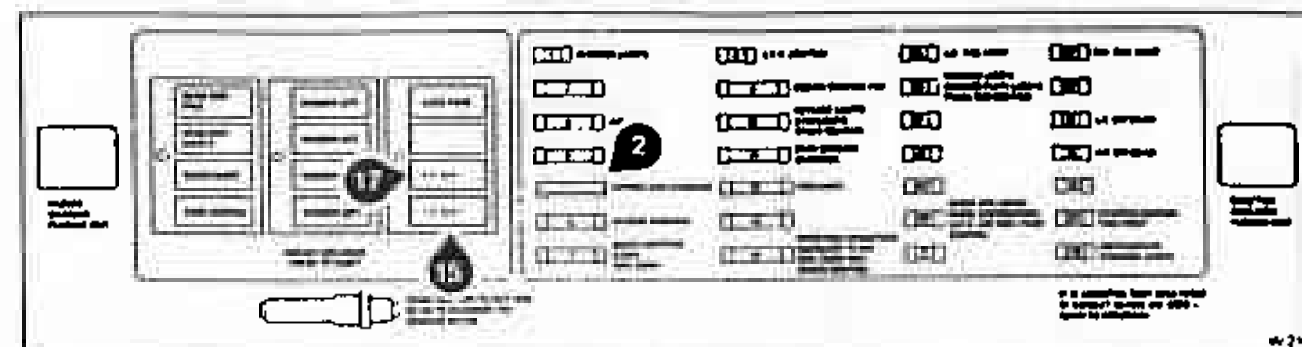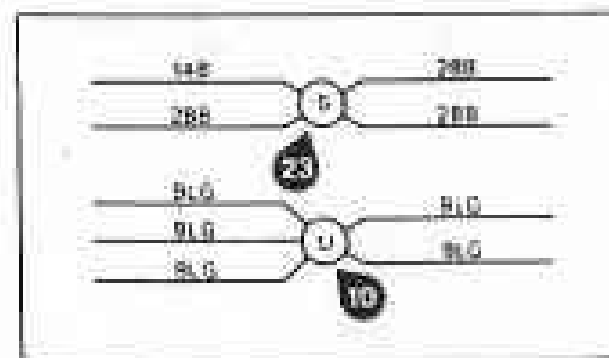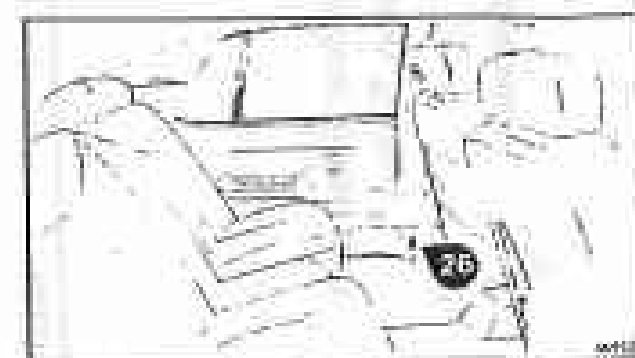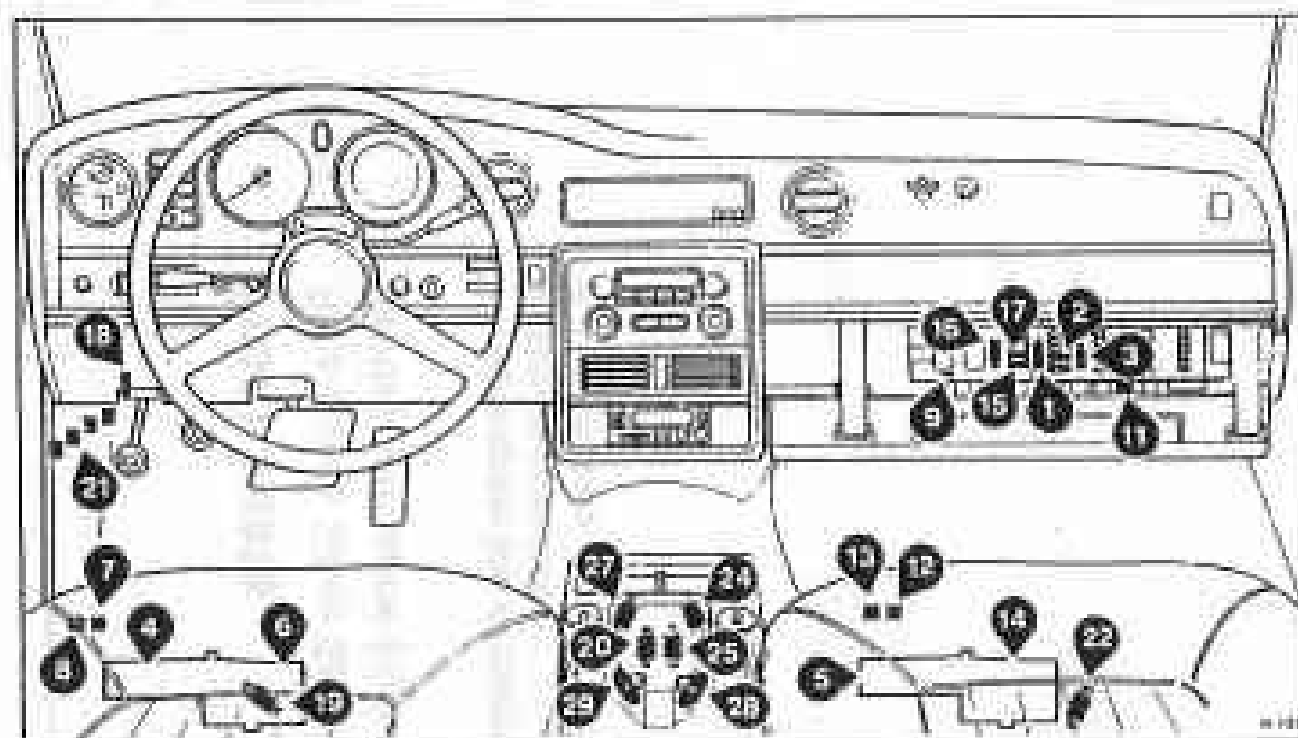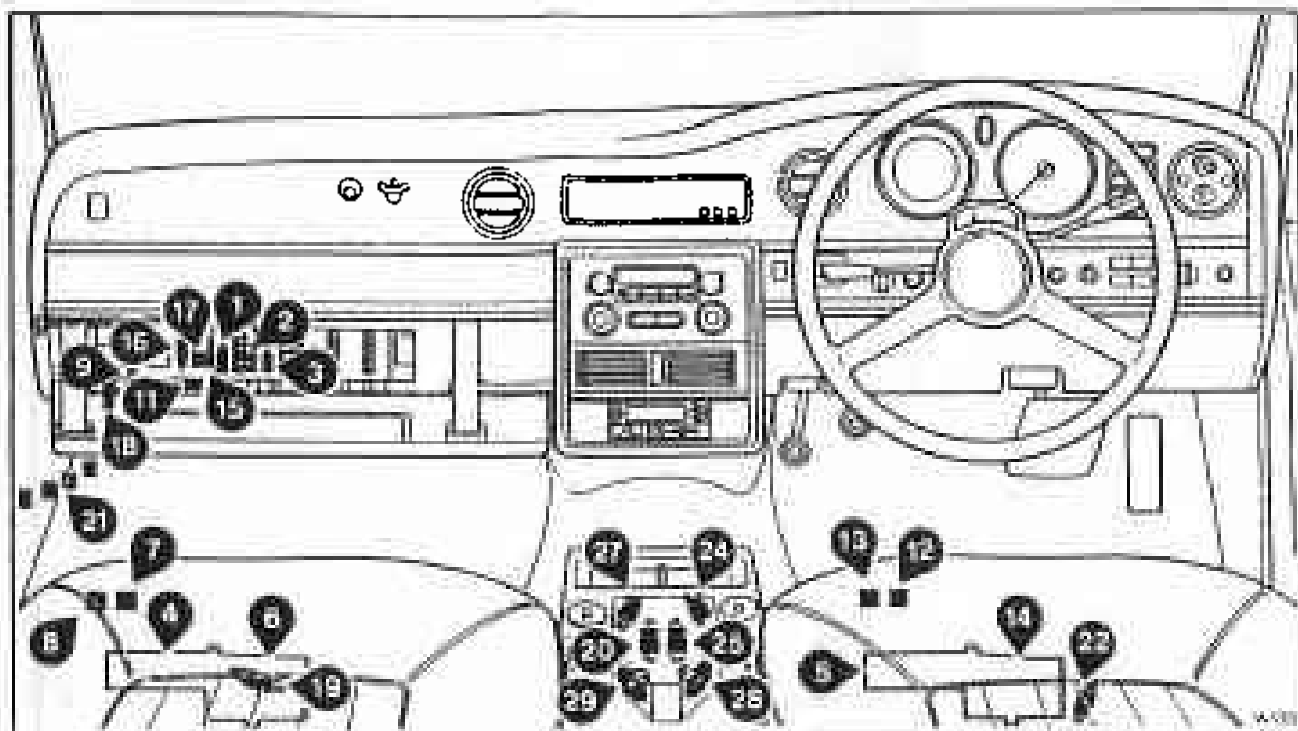

Front seats

**Rolls-Royce Silver Spirit, Silver Spur, and
Bentley Mulsanne (including Turbo)**












 
Wiring diagram and component location

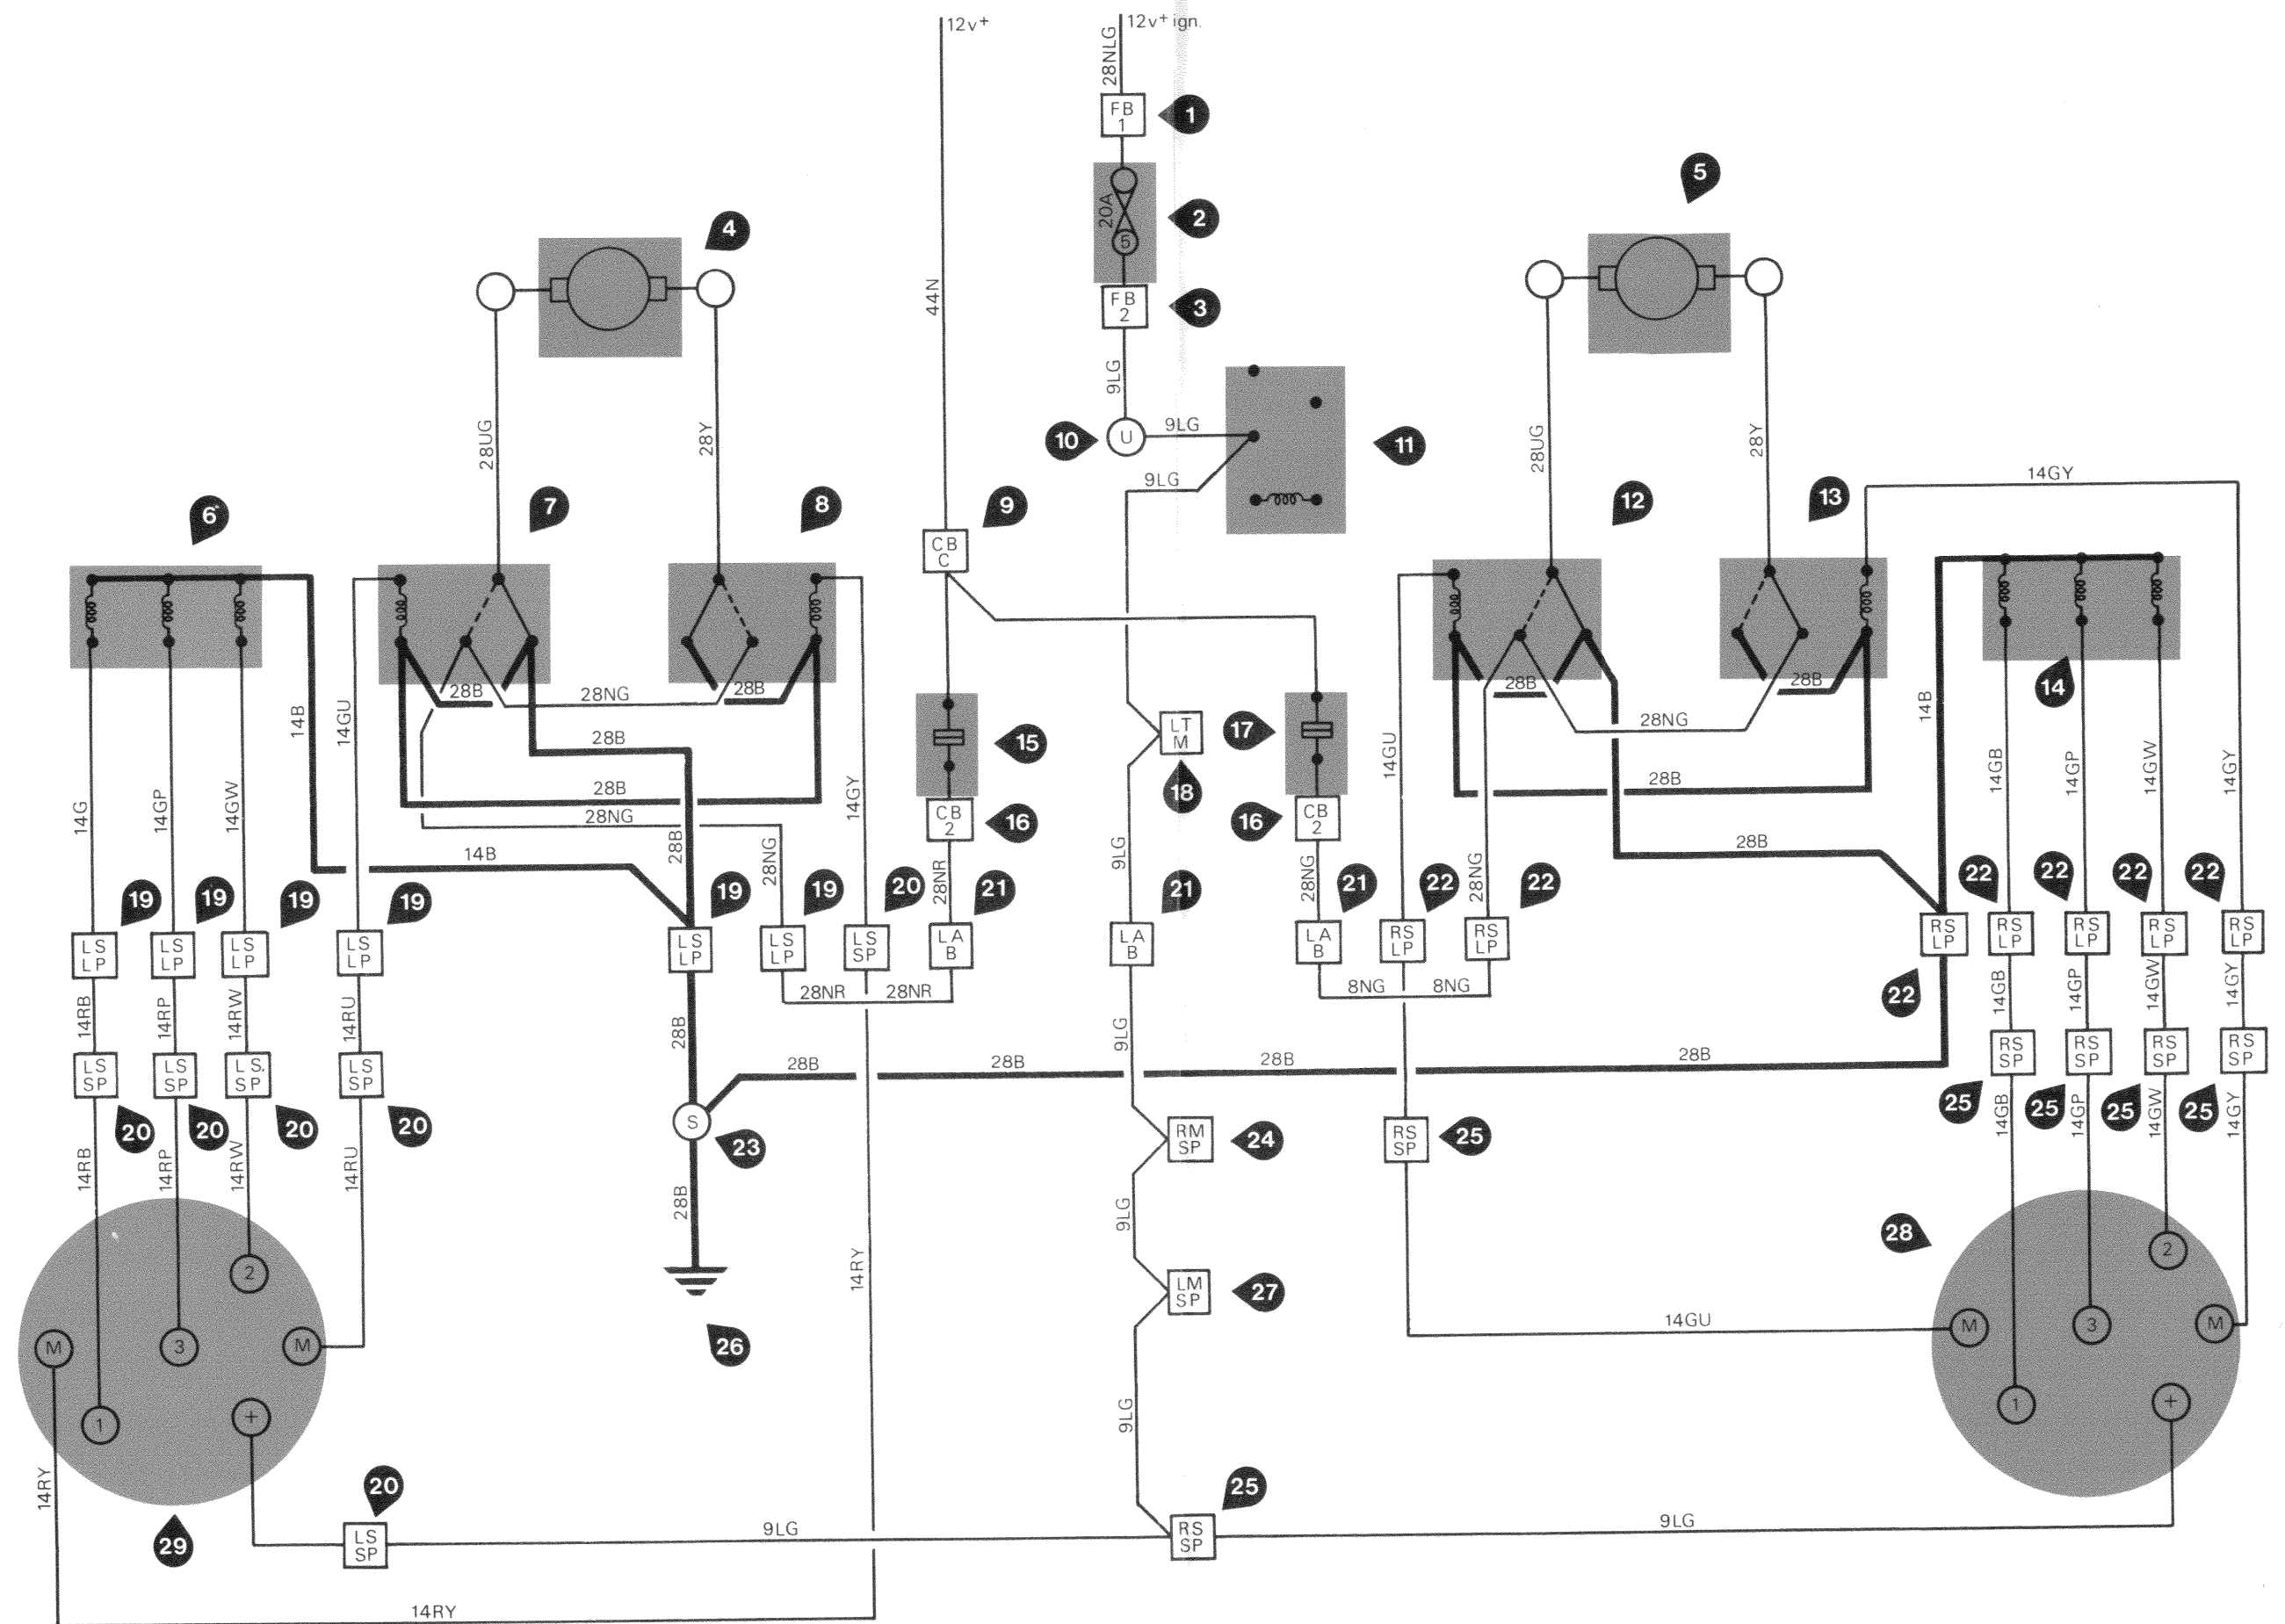

Front seats

**Rolls-Royce and Bentley
Corniche**

            Wiring diagram and component location

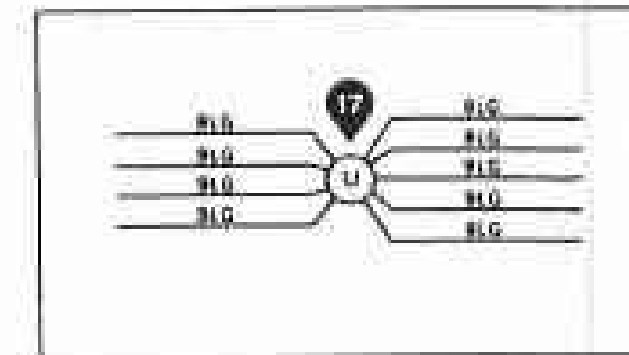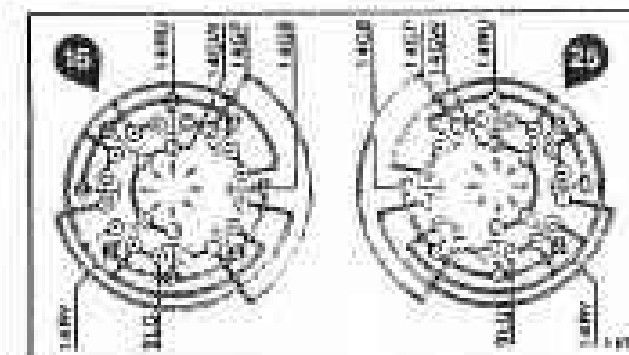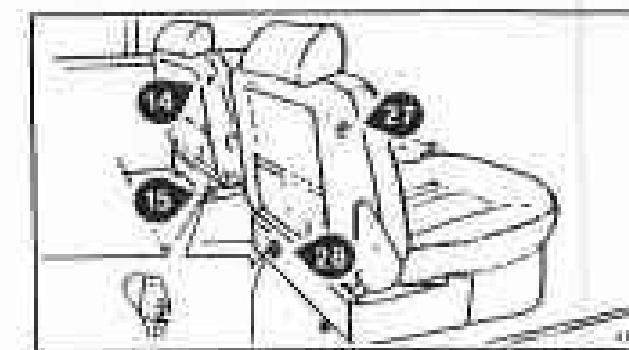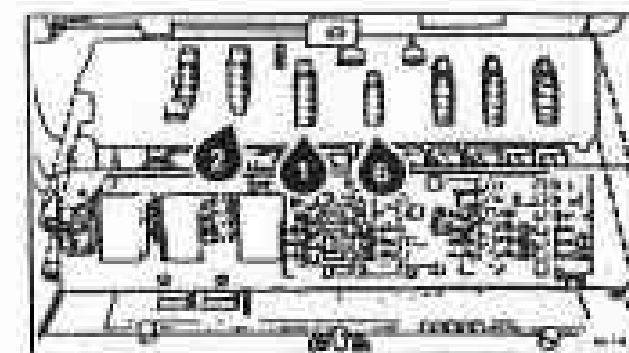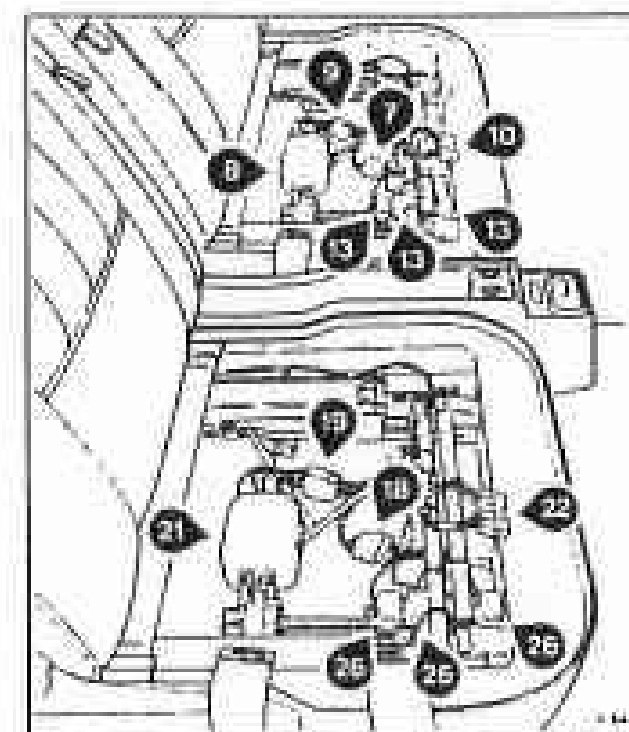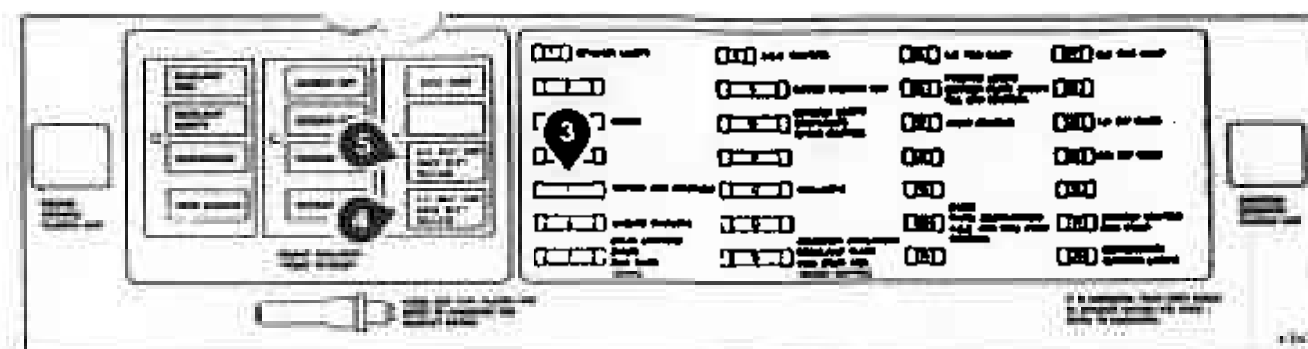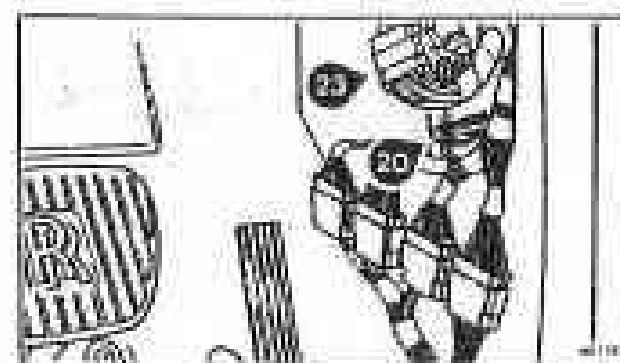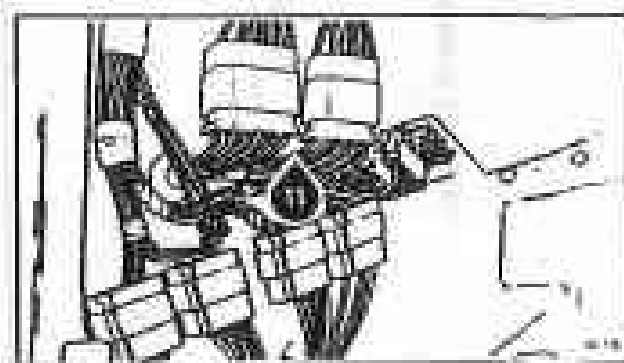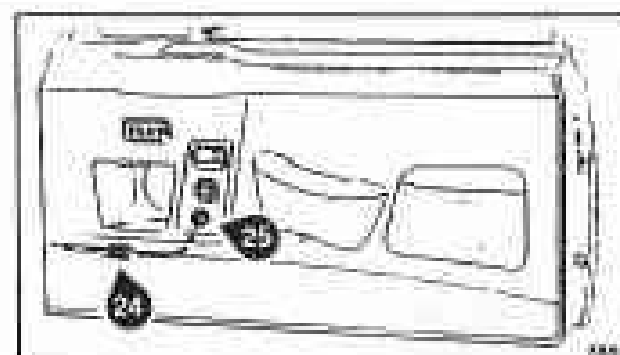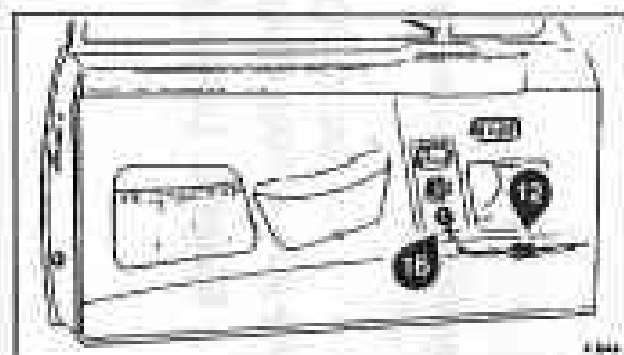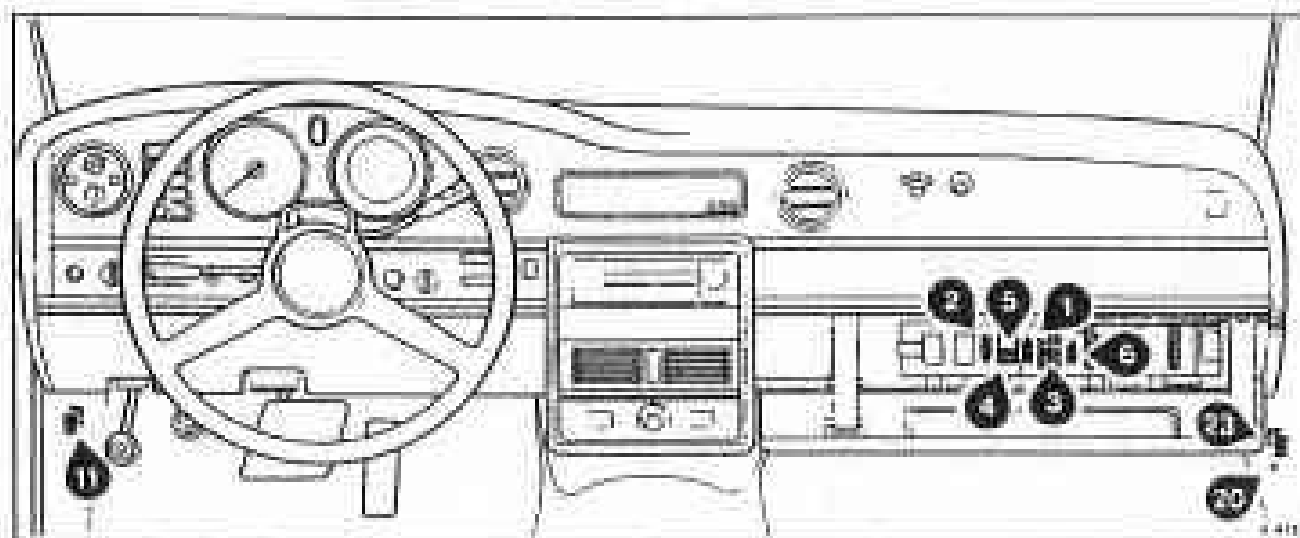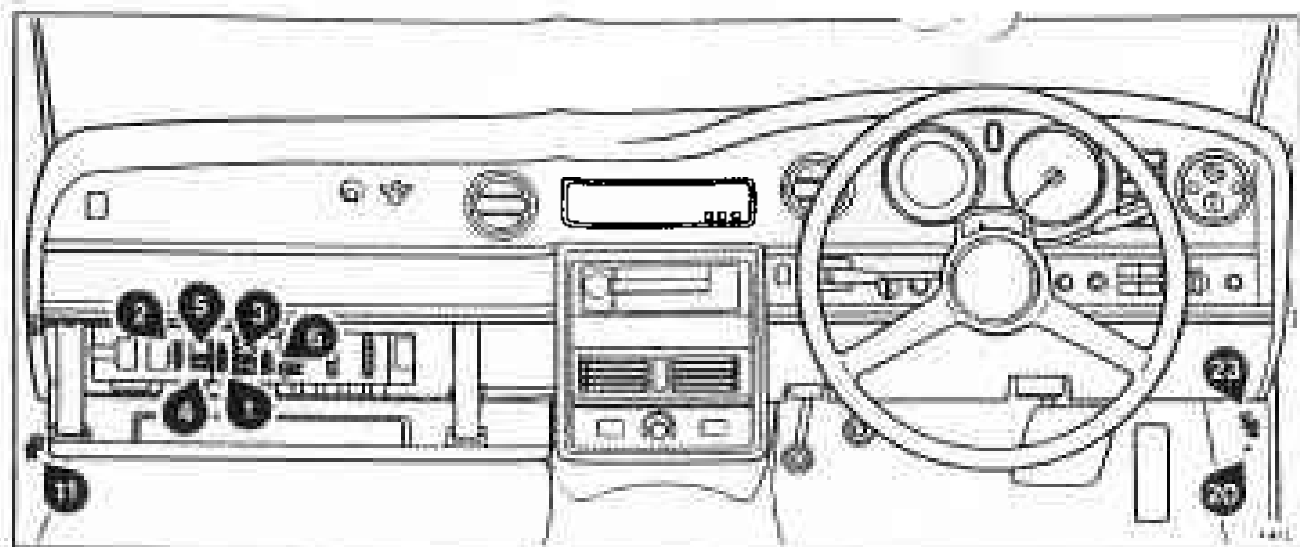

Front seats

**Rolls-Royce and Bentley
Corniche**

Wiring diagram and component location