Centralized door locking system

On Silver Spirit, Silver Spur, and Mulsanne (including Turbo) cars built prior to vehicle identification number (VIN) * SCAZS42A3FCX12001* reference must be made to the illustrations on page M21-2 to determine which component location and wiring diagram to use for a particular car.

Contents

Pages

	Silver Spirit Mulsanne	Silver Spur	Mulsanne Turbo	Bentley Eight	Bentley Turbo R	Corniche/ Continental
Cars prior to vehicle identification number * SCAZS42A3FCX12001*						
Component location	M21-3 or M21-7	M21-3 or M21-7	M21-3 or M21-7	M21-7	—	M21-7
Wiring diagram						
Right-hand drive cars	M21-5 or M21-9	M21-5 or M21-9	M21-5 or M21-9	M21-9	—	M21-11
Left-hand drive cars	M21-5 or M21-9	M21-5 or M21-9	M21-5 or M21-9	M21-9	—	M21-13
Cars from vehicle identification number * SCAZS42A3FCX12001*						
Component location	M21-15	M21-15	M21-15	M21-7	M21-15	M21-13/1
Wiring diagram						
Right-hand drive cars	M21-17	M21-17	M21-17	M21-9	M21-17	M21-13/3
Left-hand drive cars	M21-19	M21-19	M21-19	M21-9	M21-19	M21-13/5

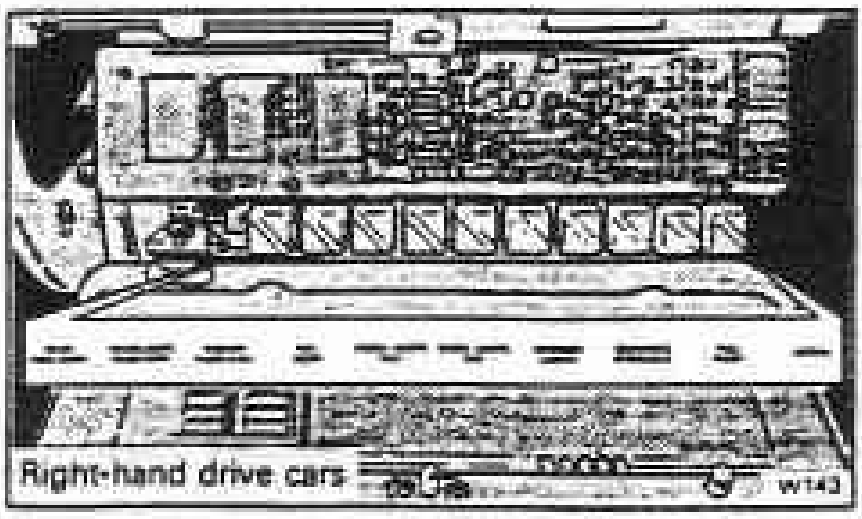

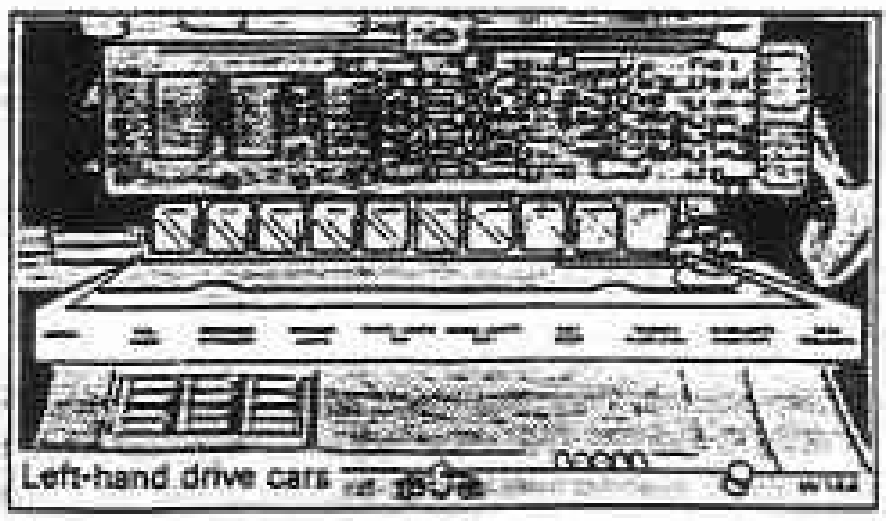

Fig. M21-1 Cars not fitted with Centralized door locking system relays. Refer to pages M21-3 and M21-5

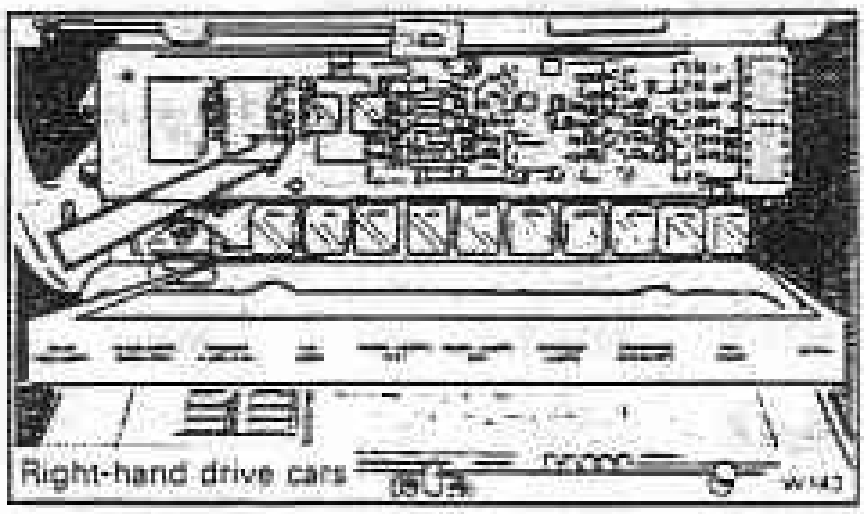

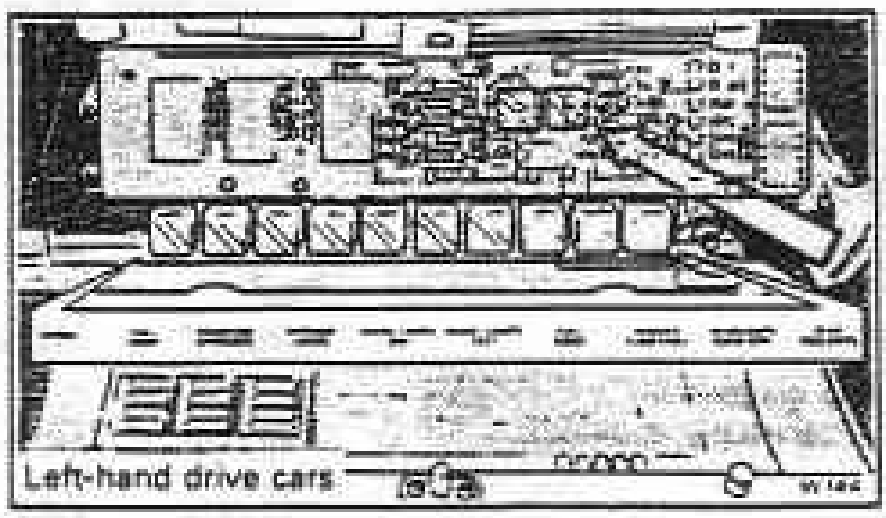

Fig. M21-2 Cars fitted with Centralized door locking system relays. Refer to pages M21-7 and M21-9

Centralized door locking system

Silver Spirit, Silver Spur, and Mulsanne (including Turbo)

Component location

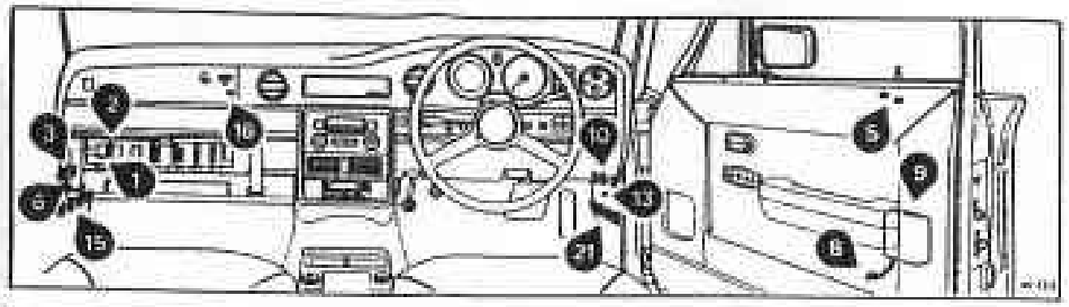

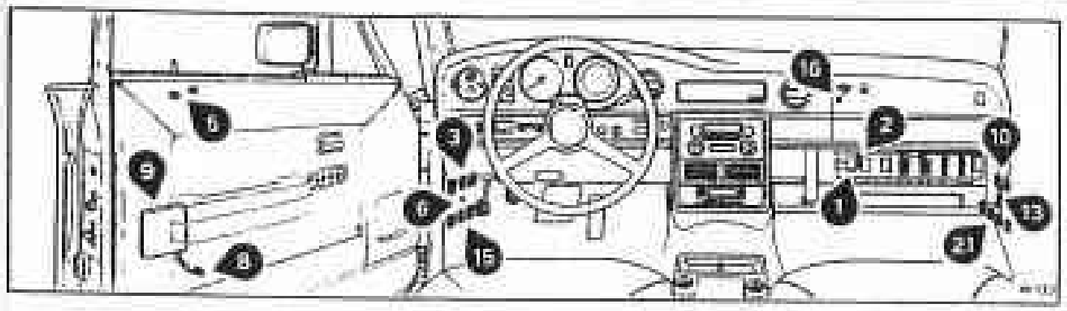

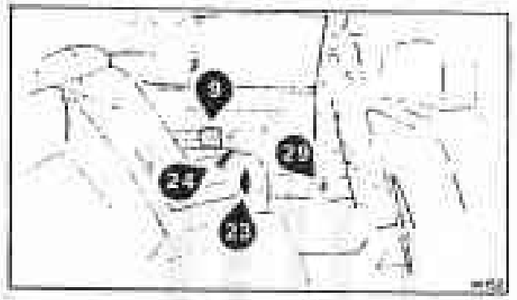

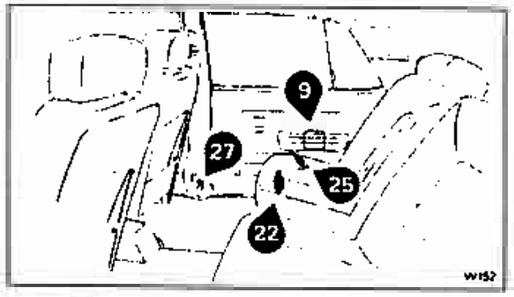

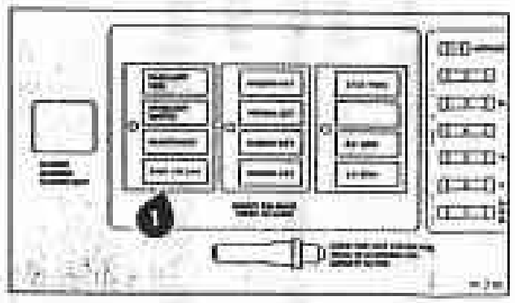

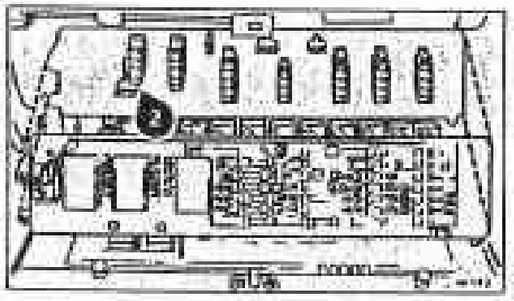

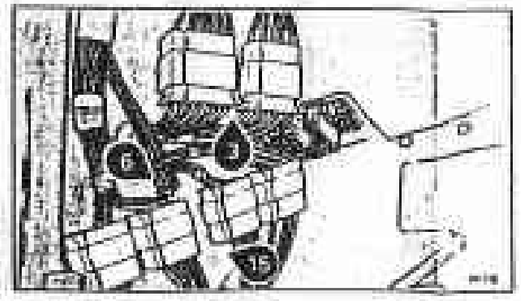

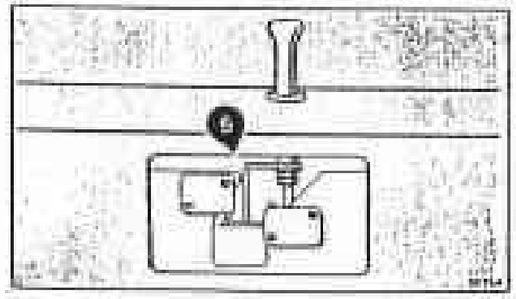

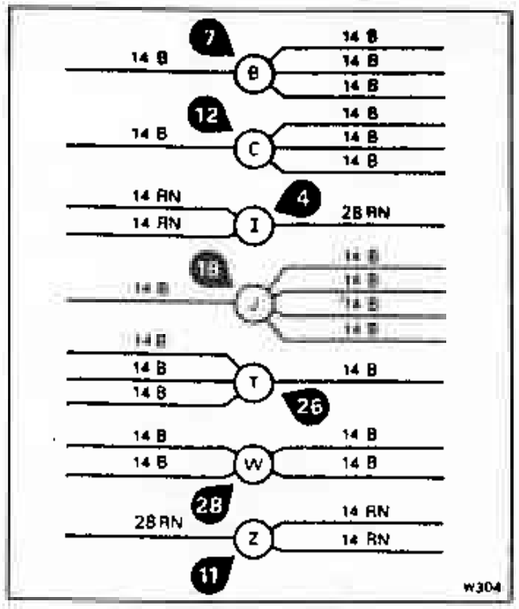
14 B
14 B
14 B
14 B
14 B
14 B
14 B
14 B
14 RN
14 RN
28 RN
14 B
14 B
14 B
14 B
14 B
14 B
14 B
14 B
28 RN
14 RN
14 RN
W304

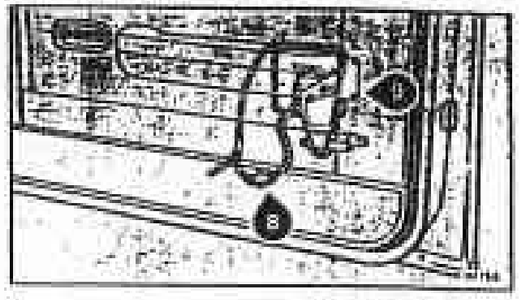

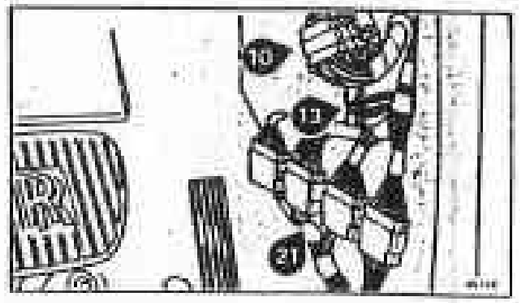

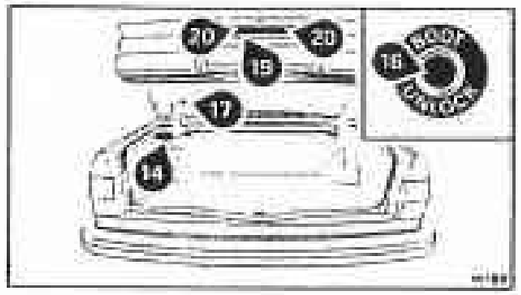

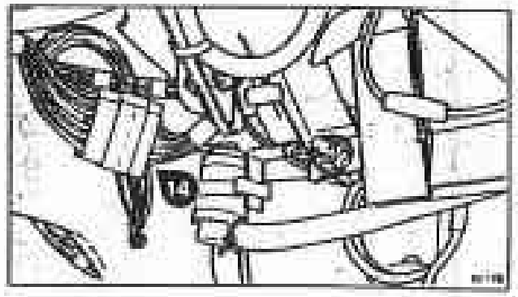

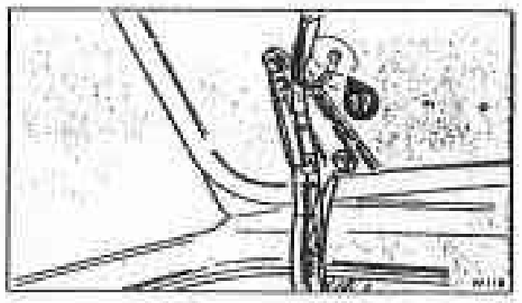

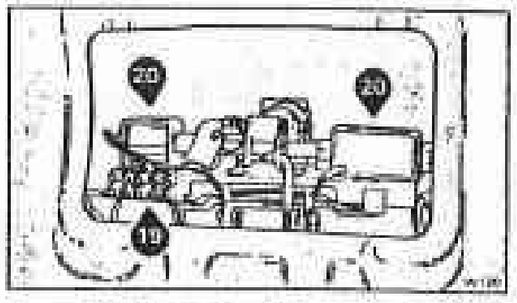

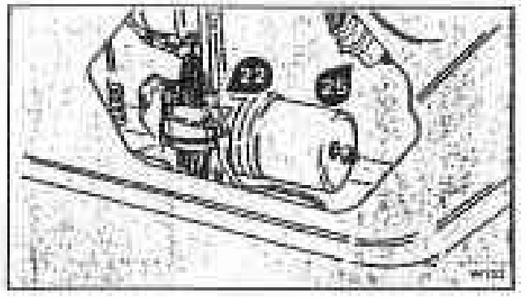

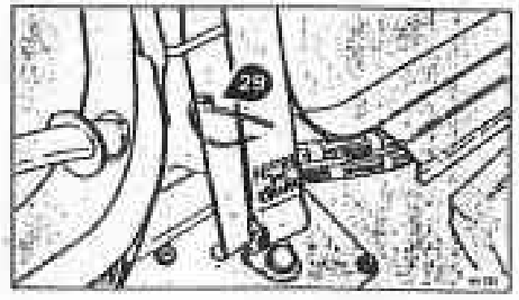

Centralized door locking system

Silver Spirit, Silver Spur, and Mulsanne (including Turbo)

Wiring diagram

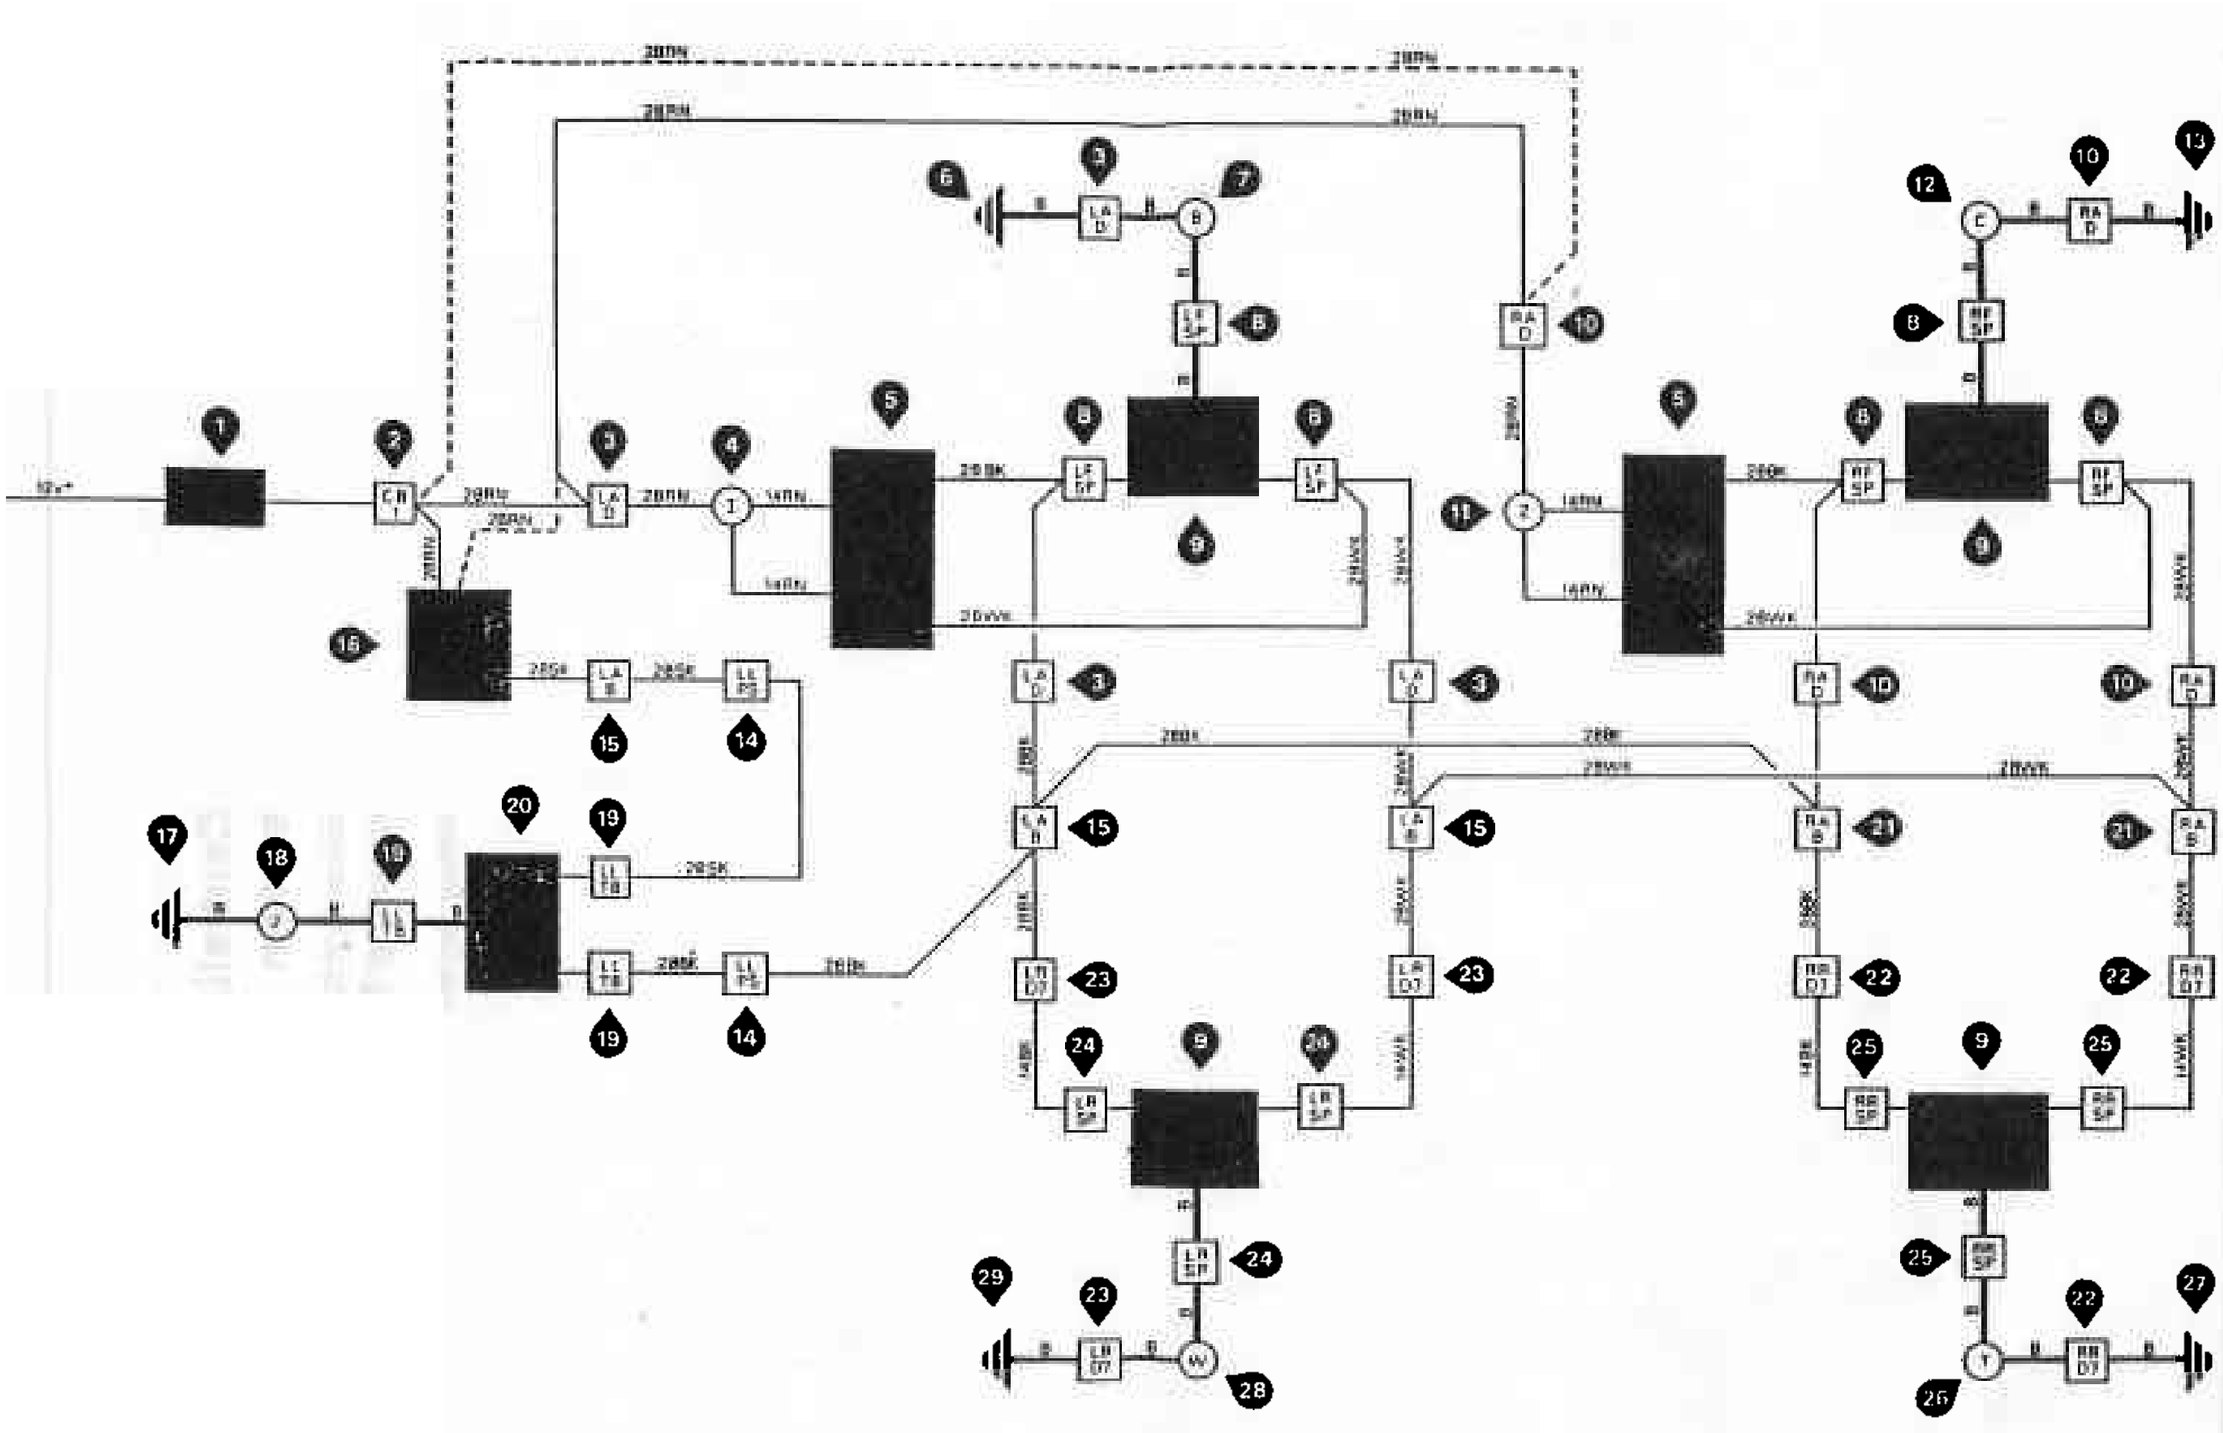

Centralized door locking system

Silver Spirit, Silver Spur, and Mulsanne (including Turbo)

Wiring diagram

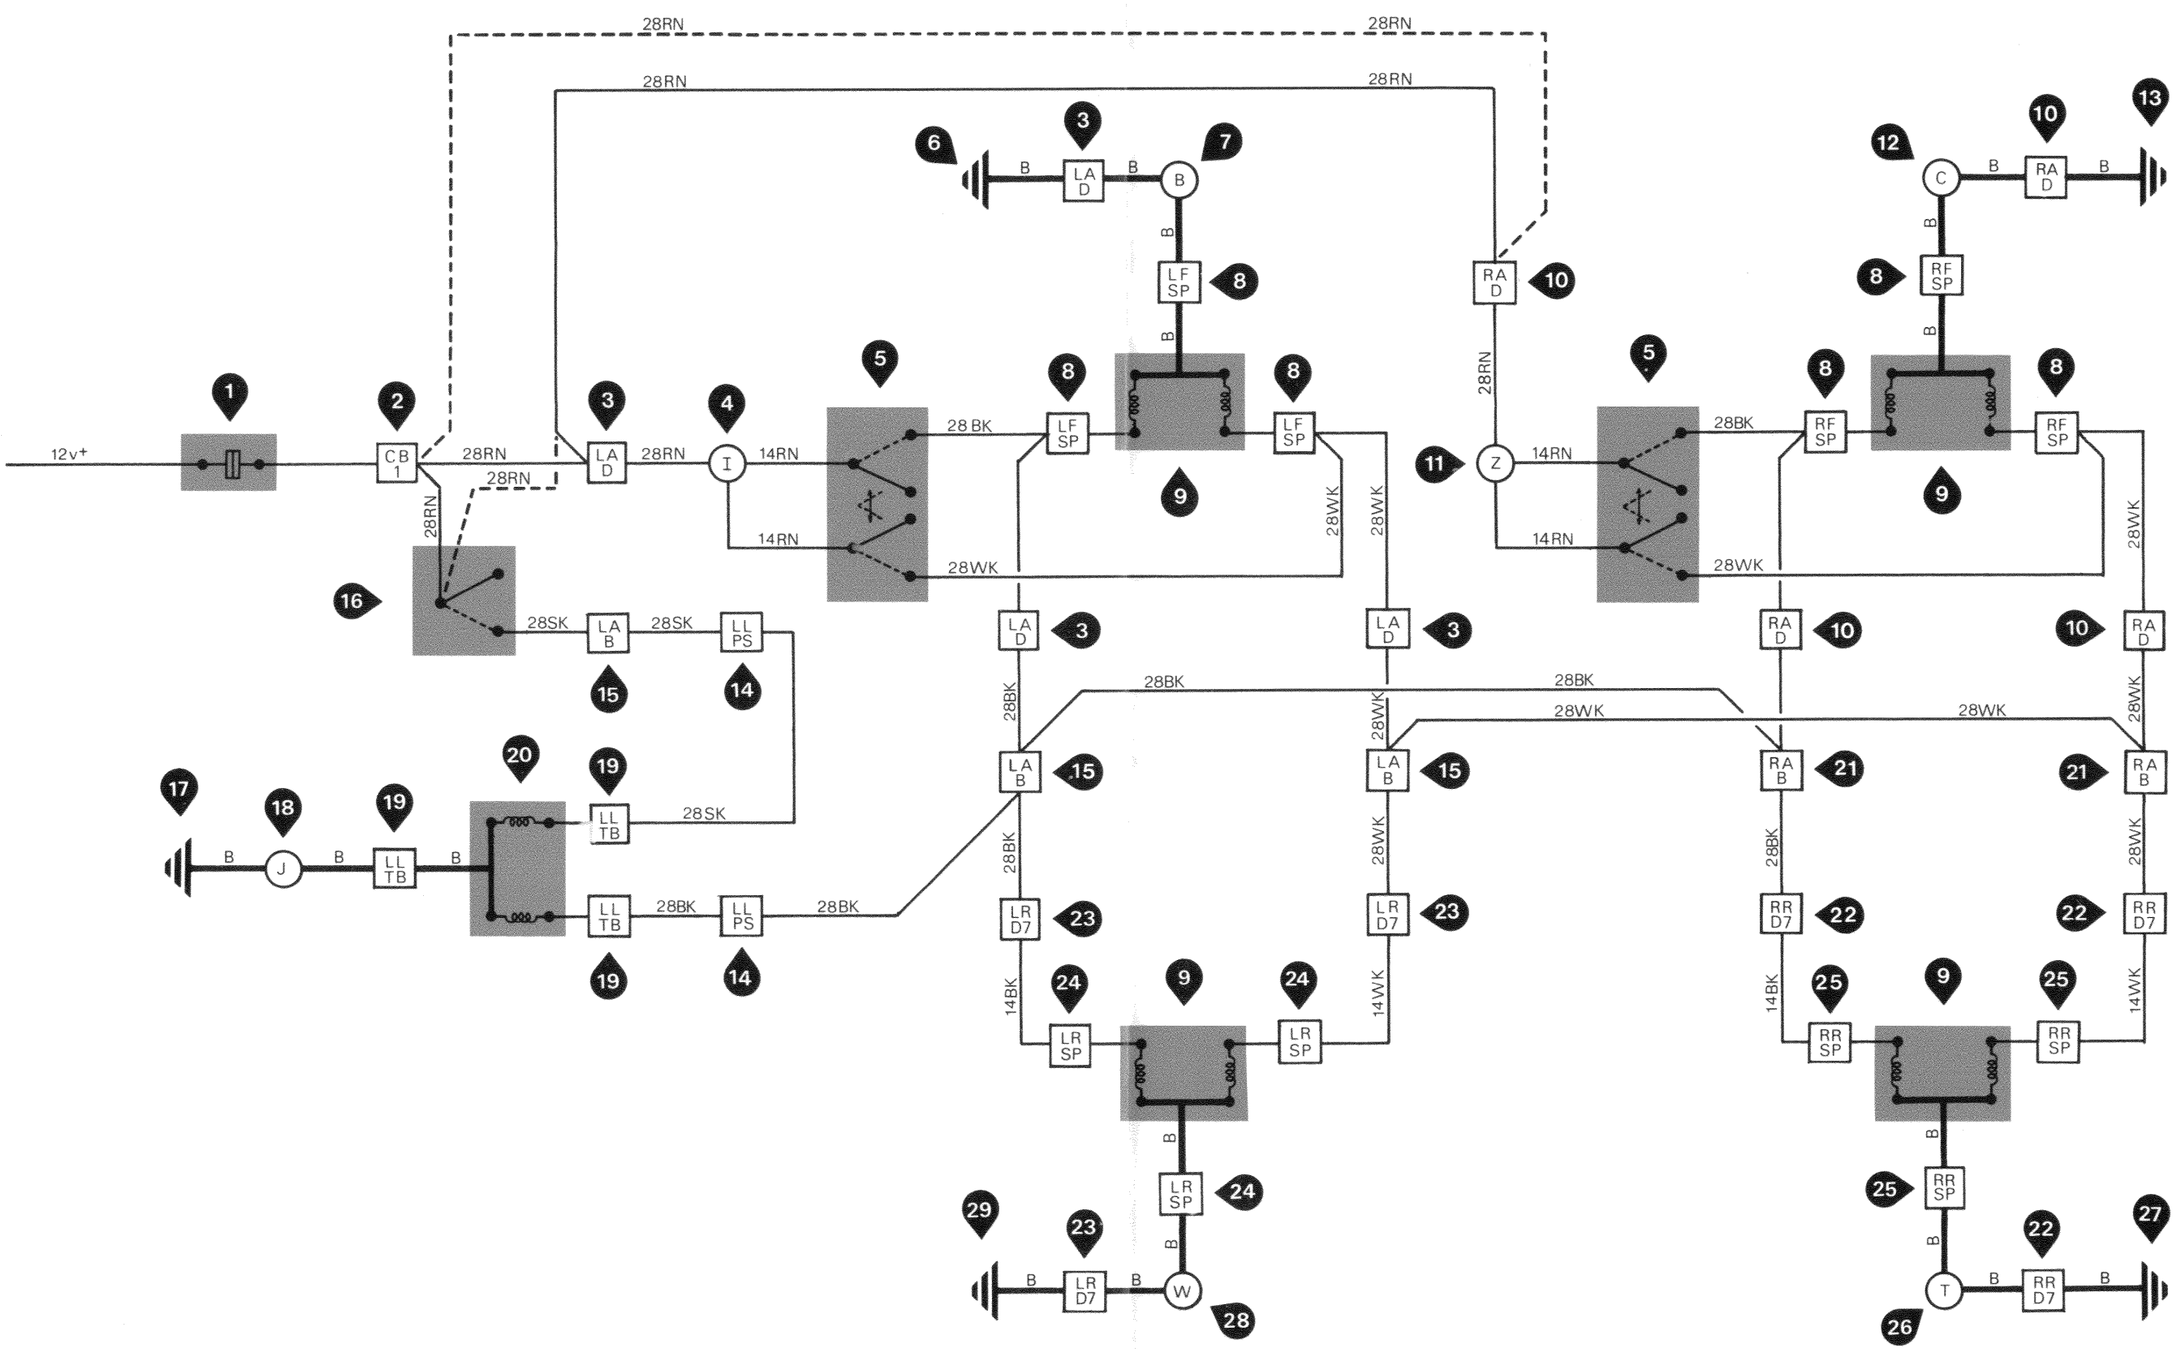
12v+
CB 1
LA D
LA B
LL PS
LL TB
LF SP
RF SP
LR D7
LR SP
RR D7
RR SP
RA D
RA B
28RN
28BK
28WK
28SK
14RN
14BK
14WK
B

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne, (including Turbo), Bentley Eight, and Corniche/Continental

Component location

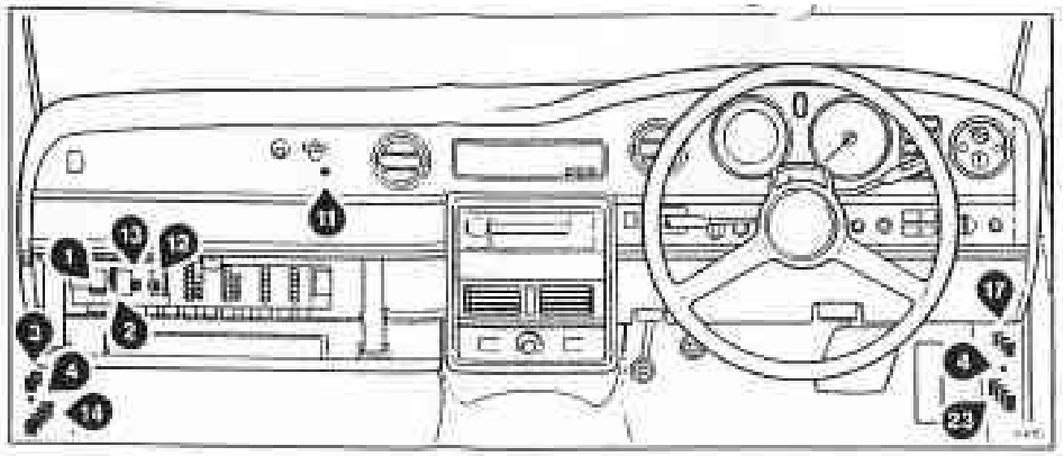

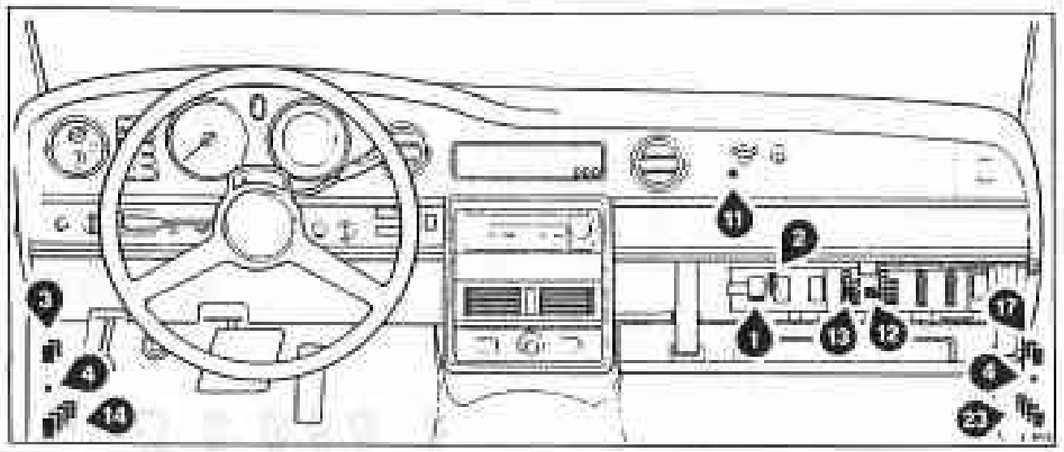

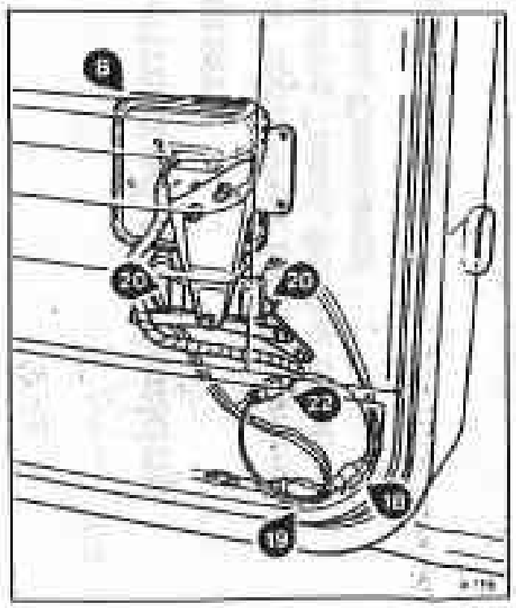

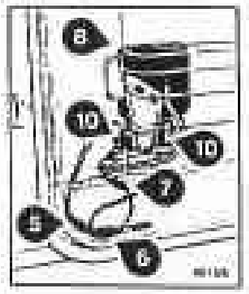

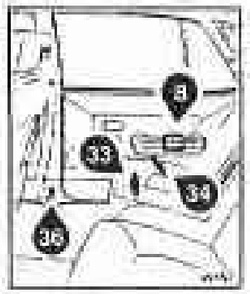

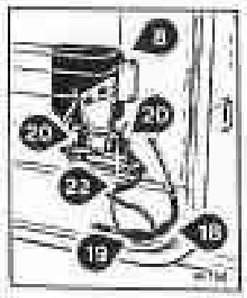

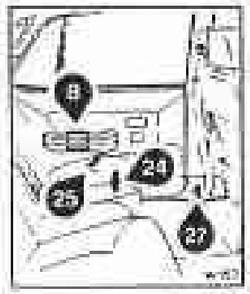

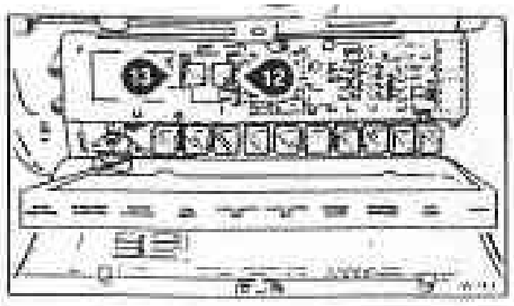

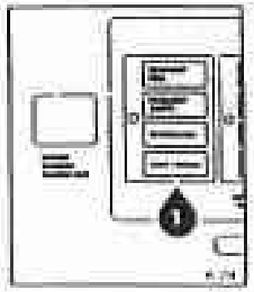

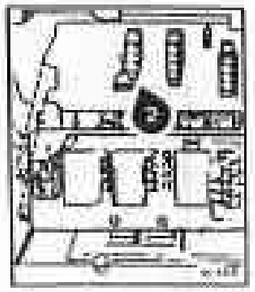

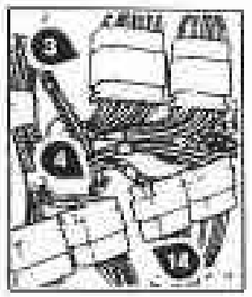

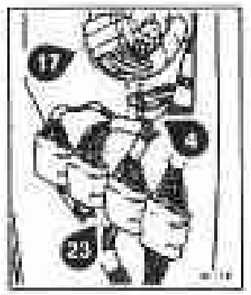

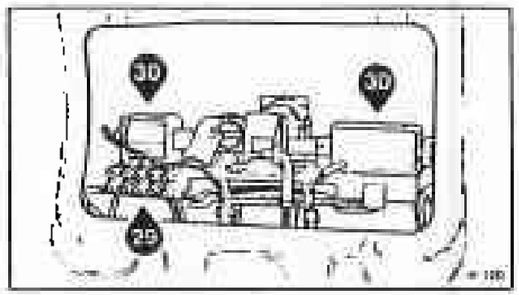

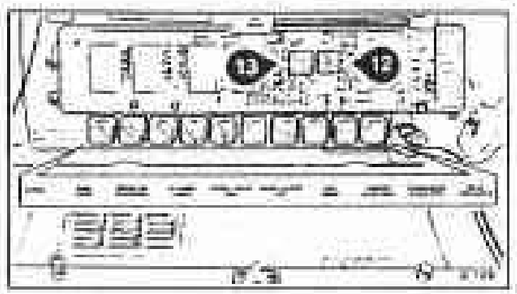

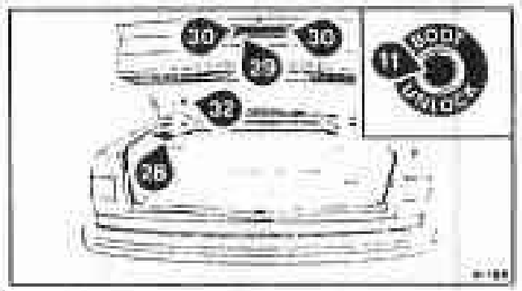

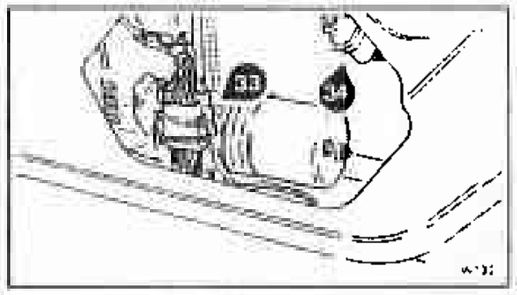

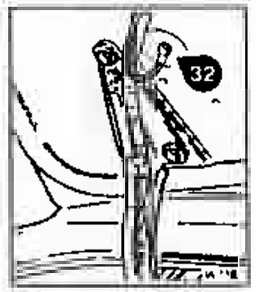

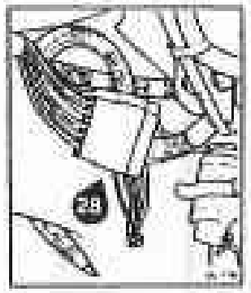

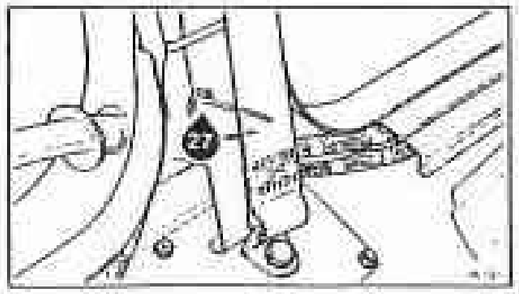

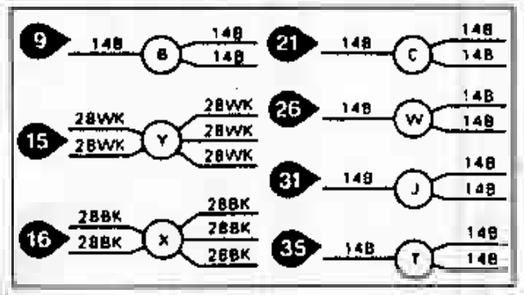
9
14B
B
14B
14B
21
14B
C
14B
14B
15
28WK
28WK
Y
28WK
28WK
28WK
26
14B
W
14B
14B
31
14B
J
14B
14B
16
28BK
28BK
X
28BK
28BK
28BK
35
14B
T
14B
14B

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne, (including Turbo), Bentley Eight, and Corniche/Continental

Component location

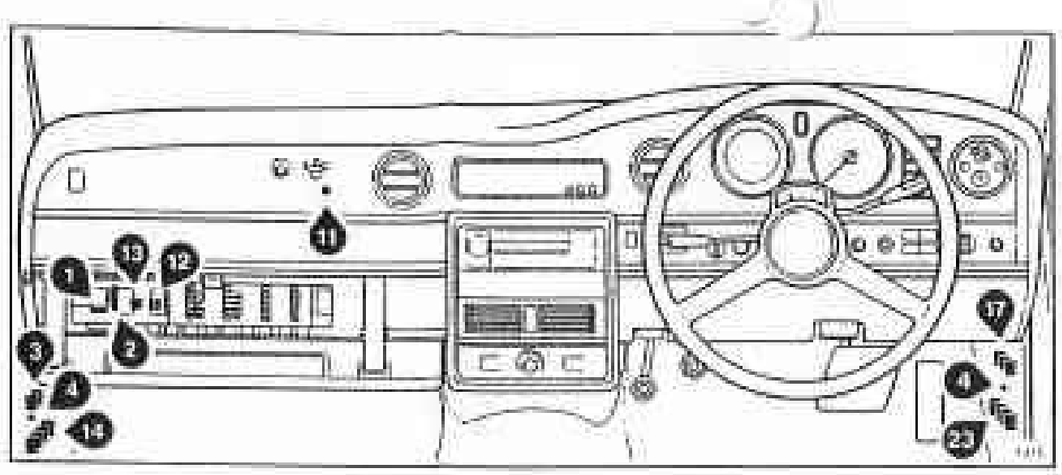

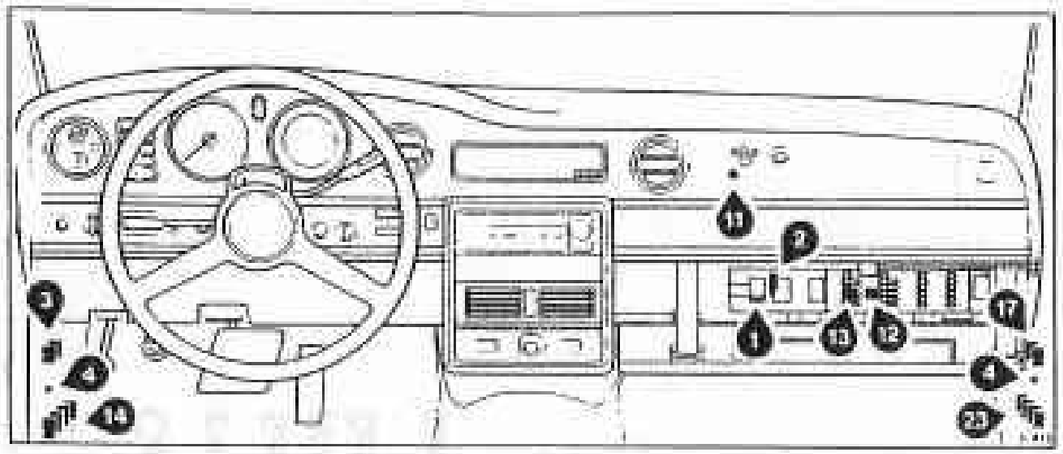

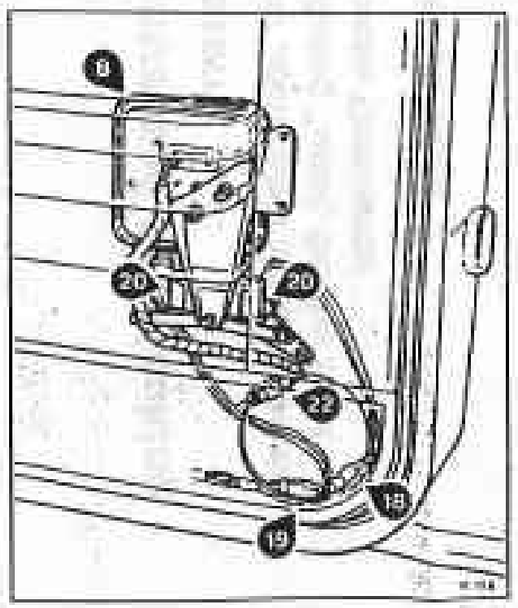

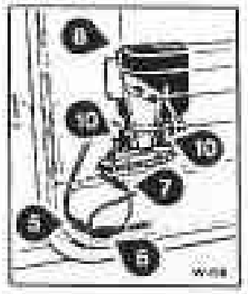

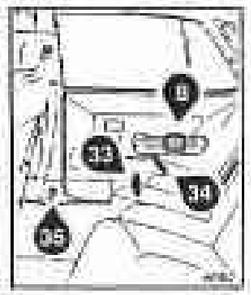

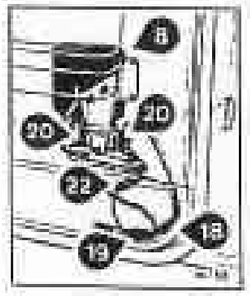

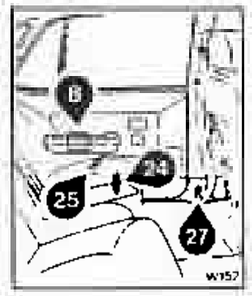

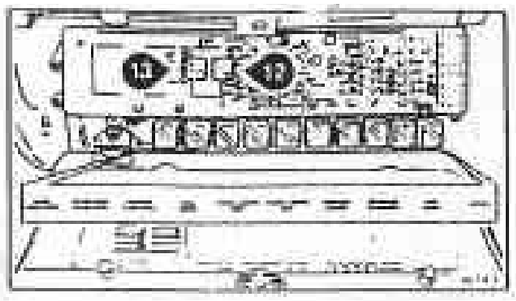

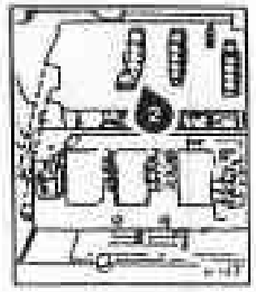

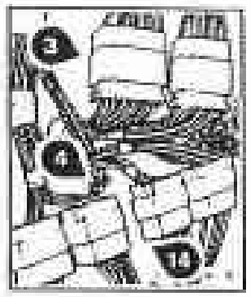

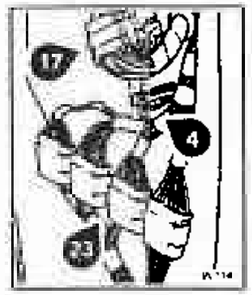

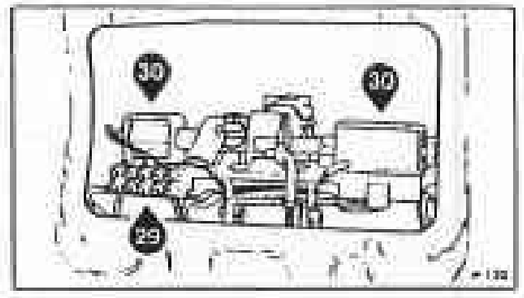

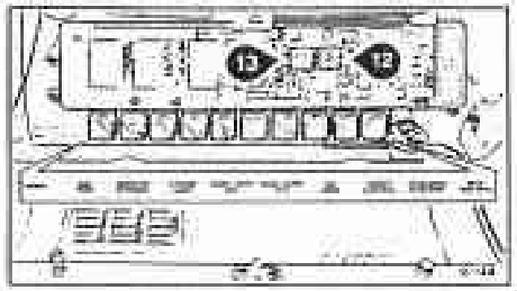

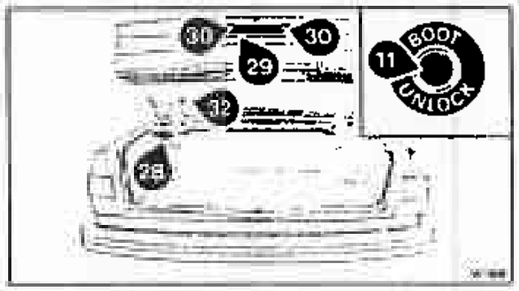
BOOT
UNLOCK

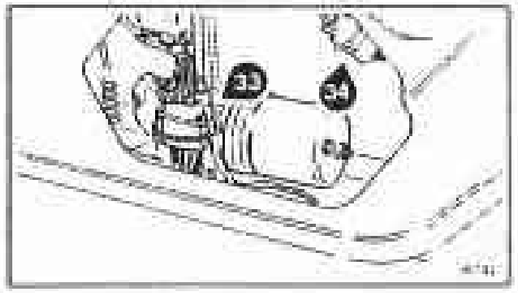

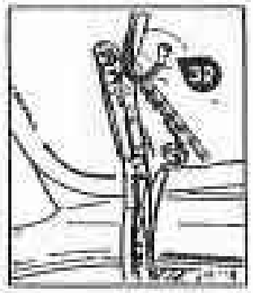

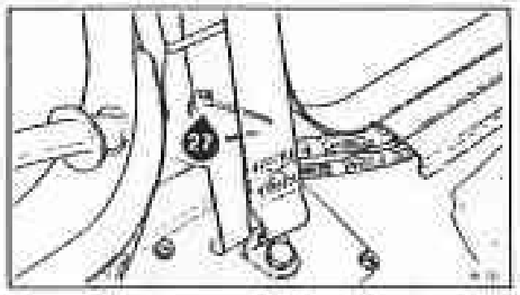

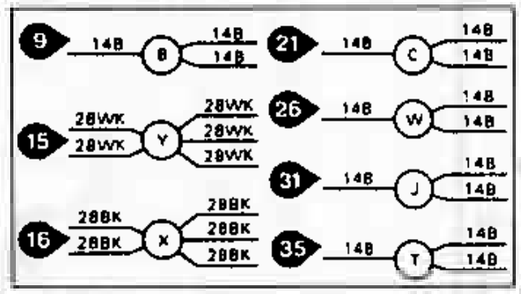
9 14B B 14B 14B
21 14B C 14B 14B
15 28WK 28WK Y 28WK 28WK 28WK
26 14B W 14B 14B
31 14B J 14B 14B
16 28BK 28BK X 28BK 28BK 28BK
35 14B T 14B 14B

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne, (including Turbo), Bentley Eight, and Corniche/Continental

Component location

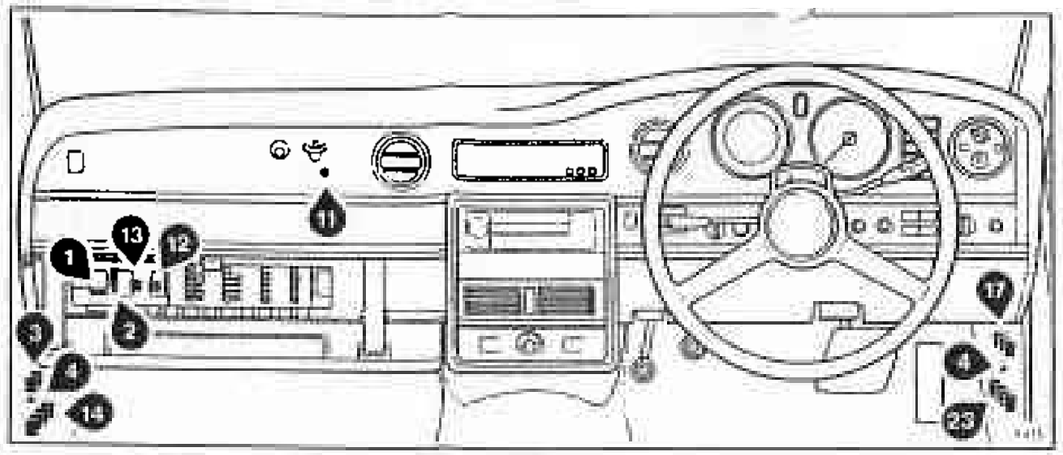

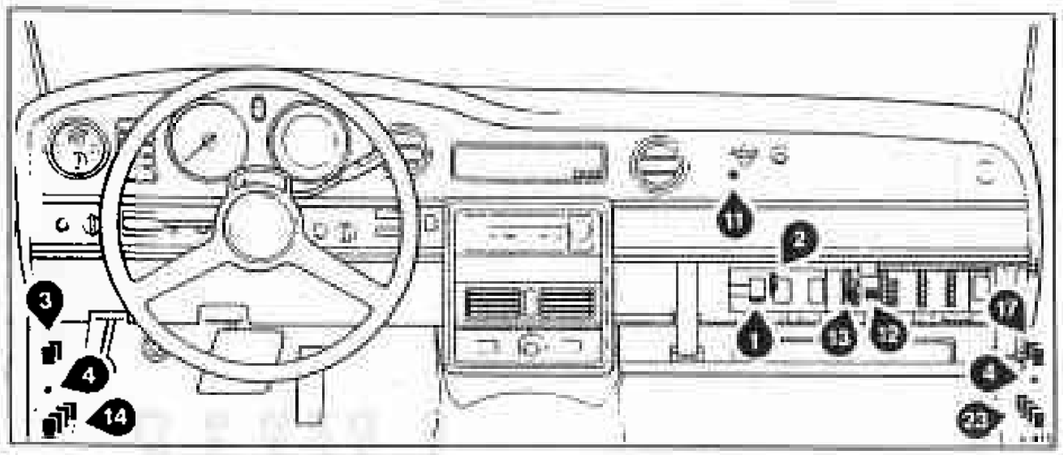

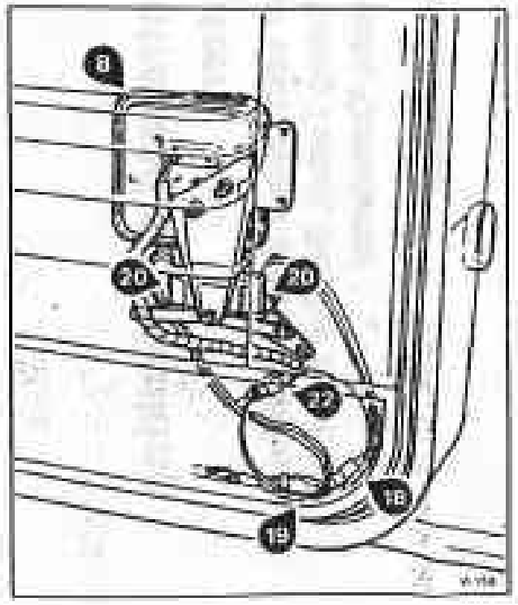

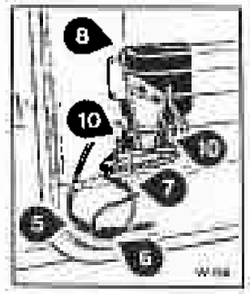

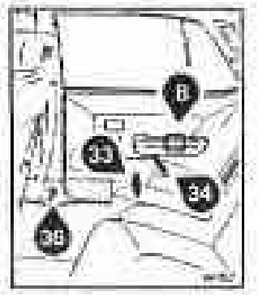

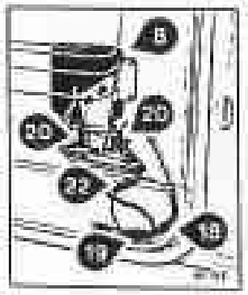

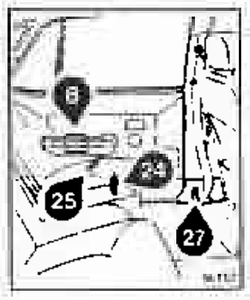

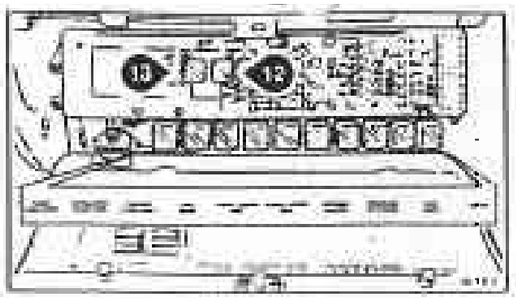

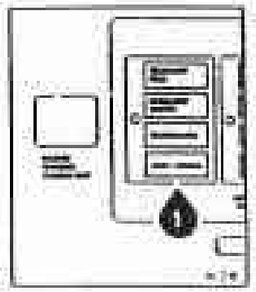

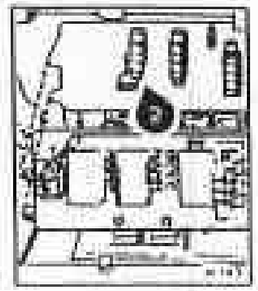

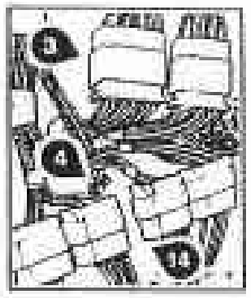

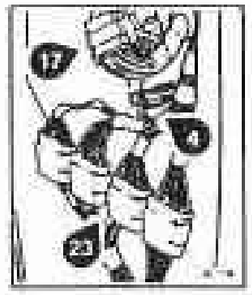

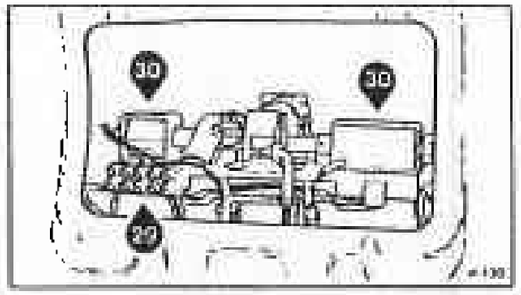

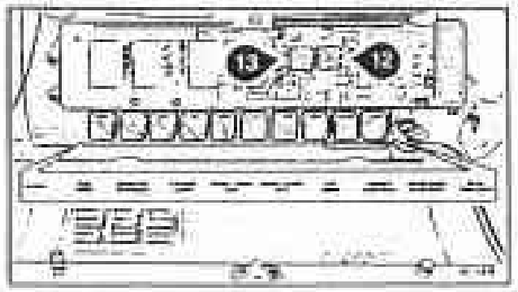

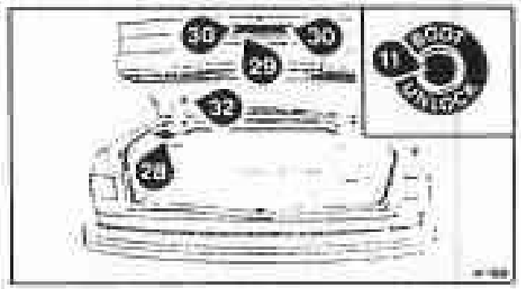

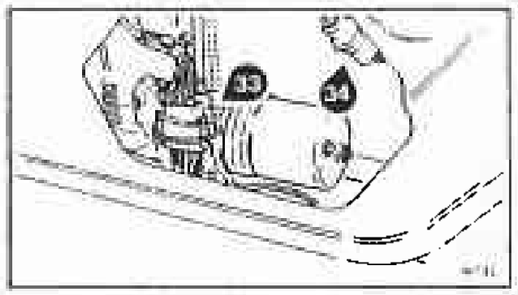

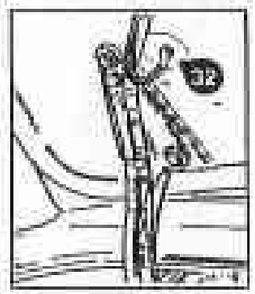

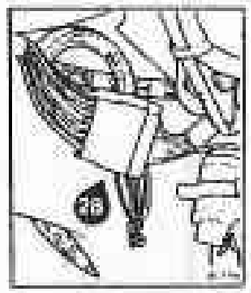

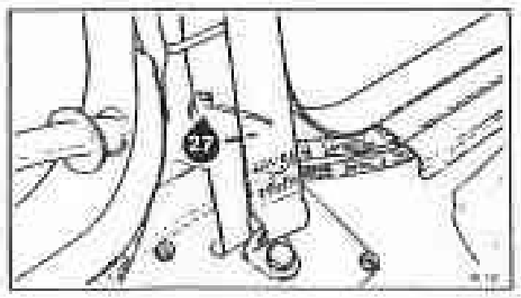

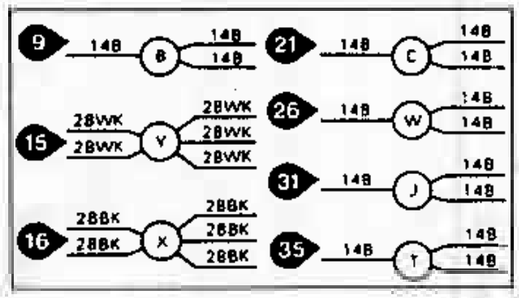
9 14B B 14B 14B
21 14B C 14B 14B
15 28WK Y 28WK 28WK 28WK 28WK
26 14B W 14B 14B
31 14B J 14B 14B
16 28BK X 28BK 28BK 28BK 28BK
35 14B T 14B 14B

CORNICHE

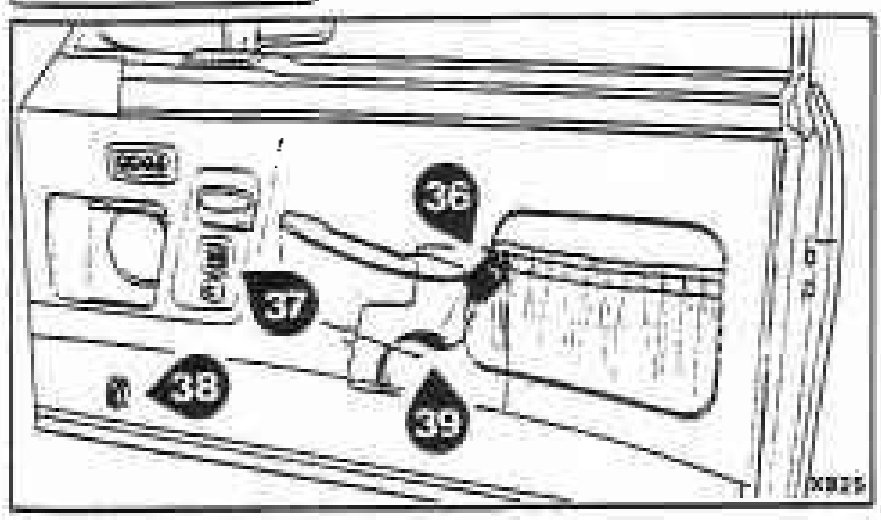
36
37
38
39

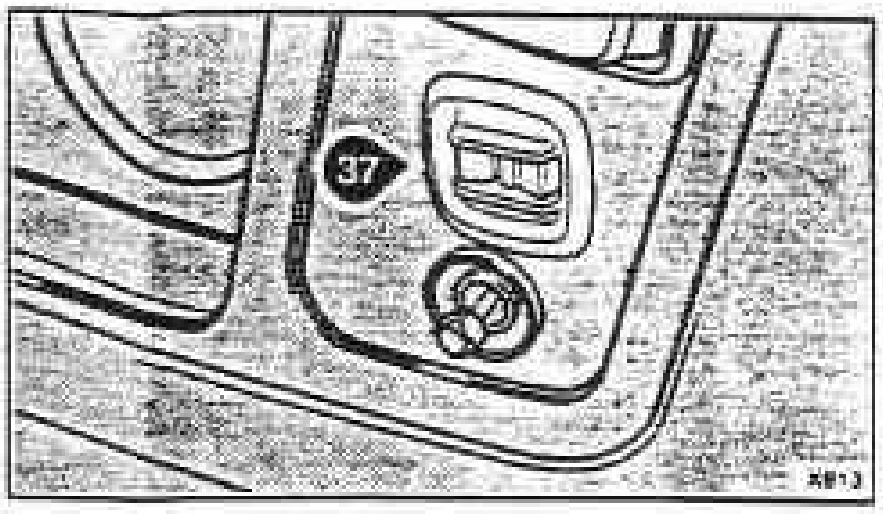
37

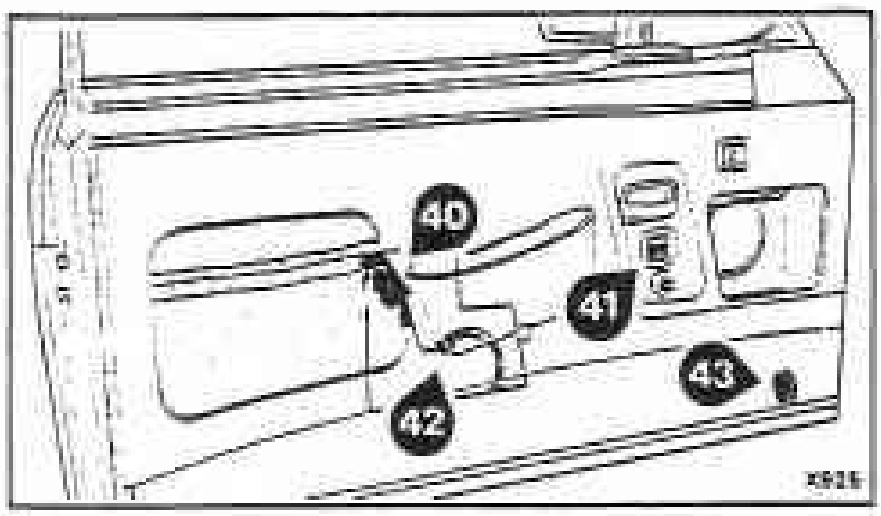
40
41
42
43

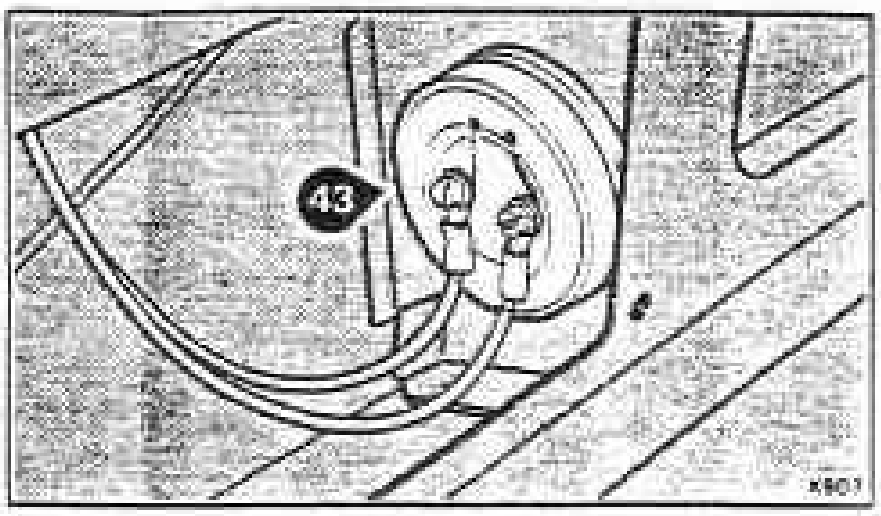
43

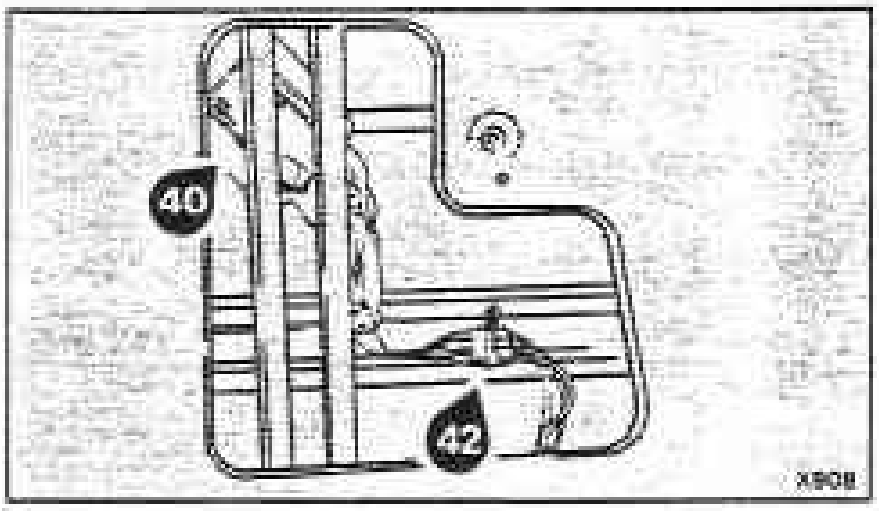
40
42

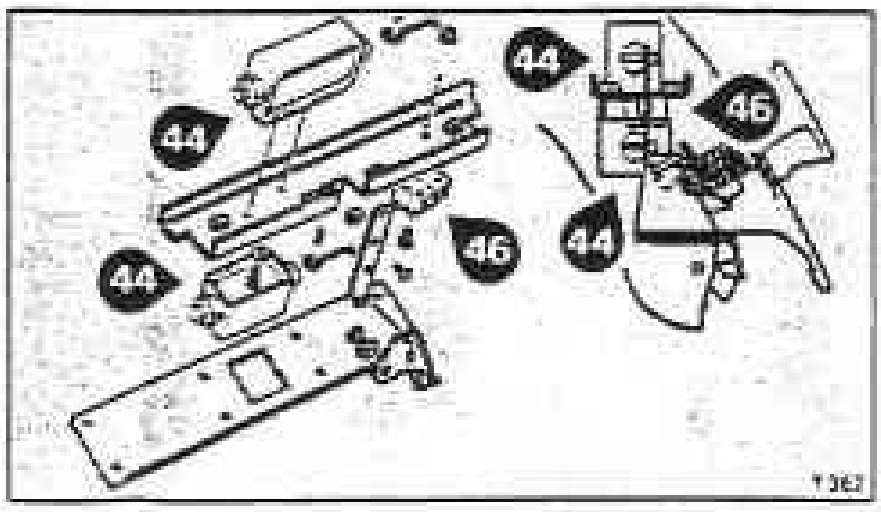
44
44
44
46
46

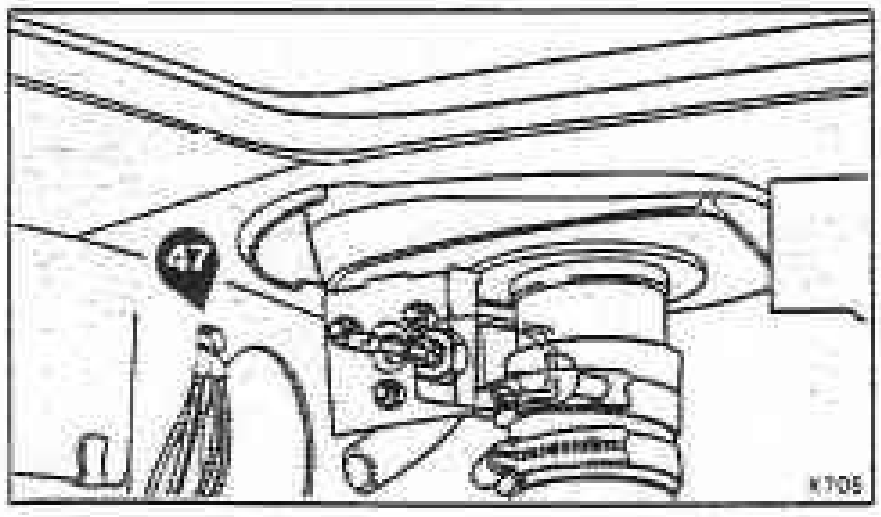
47

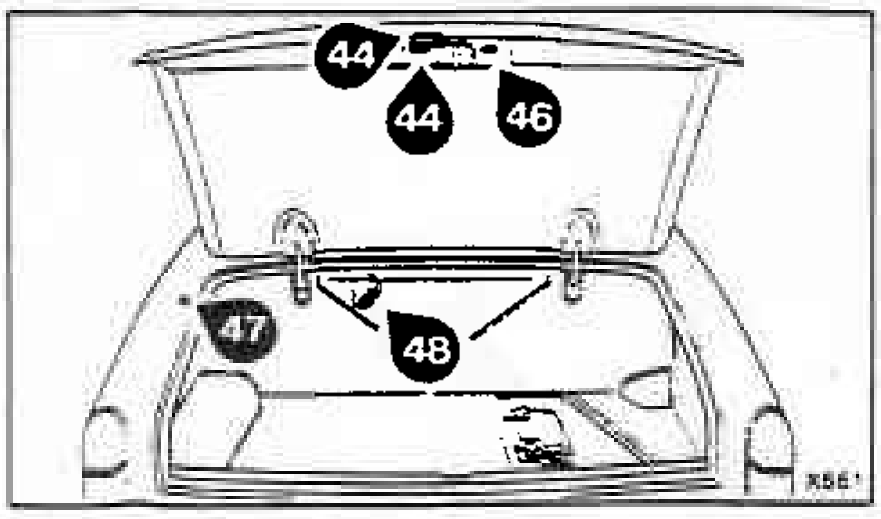
44
44
46
47
48

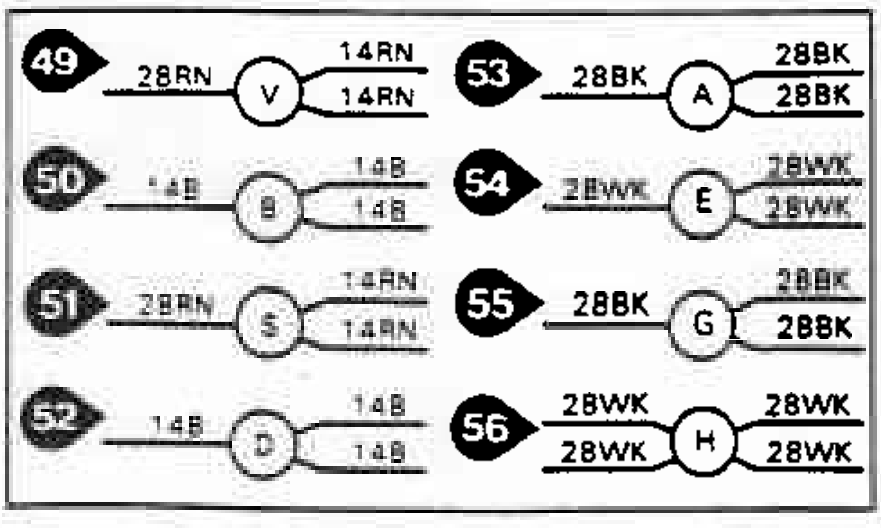
49 28RN V 14RN 14RN
50 14B B 14B 14B
51 28RN S 14RN 14RN
52 14B D 14B 14B
53 28BK A 28BK 28BK
54 28WK E 28WK 28WK
55 28BK G 28BK 28BK
56 28WK H 28WK 28WK 28WK

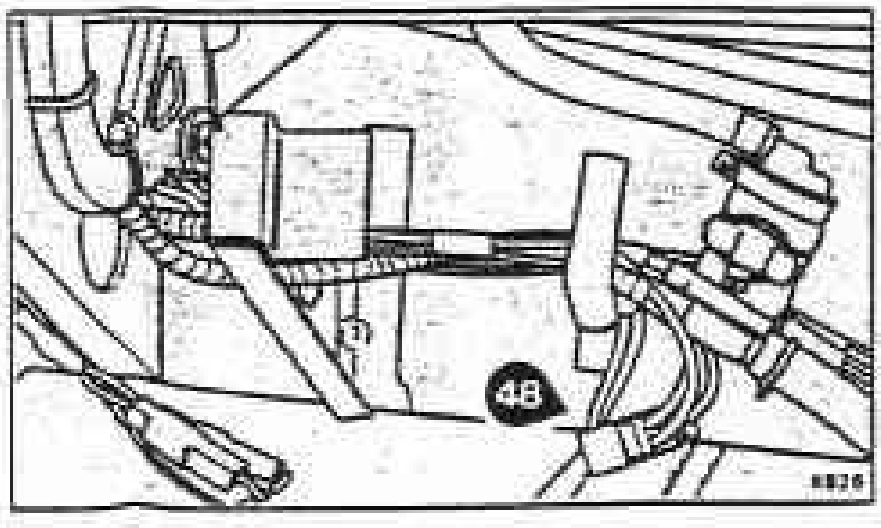
48

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Bentley Eight

Wiring diagram

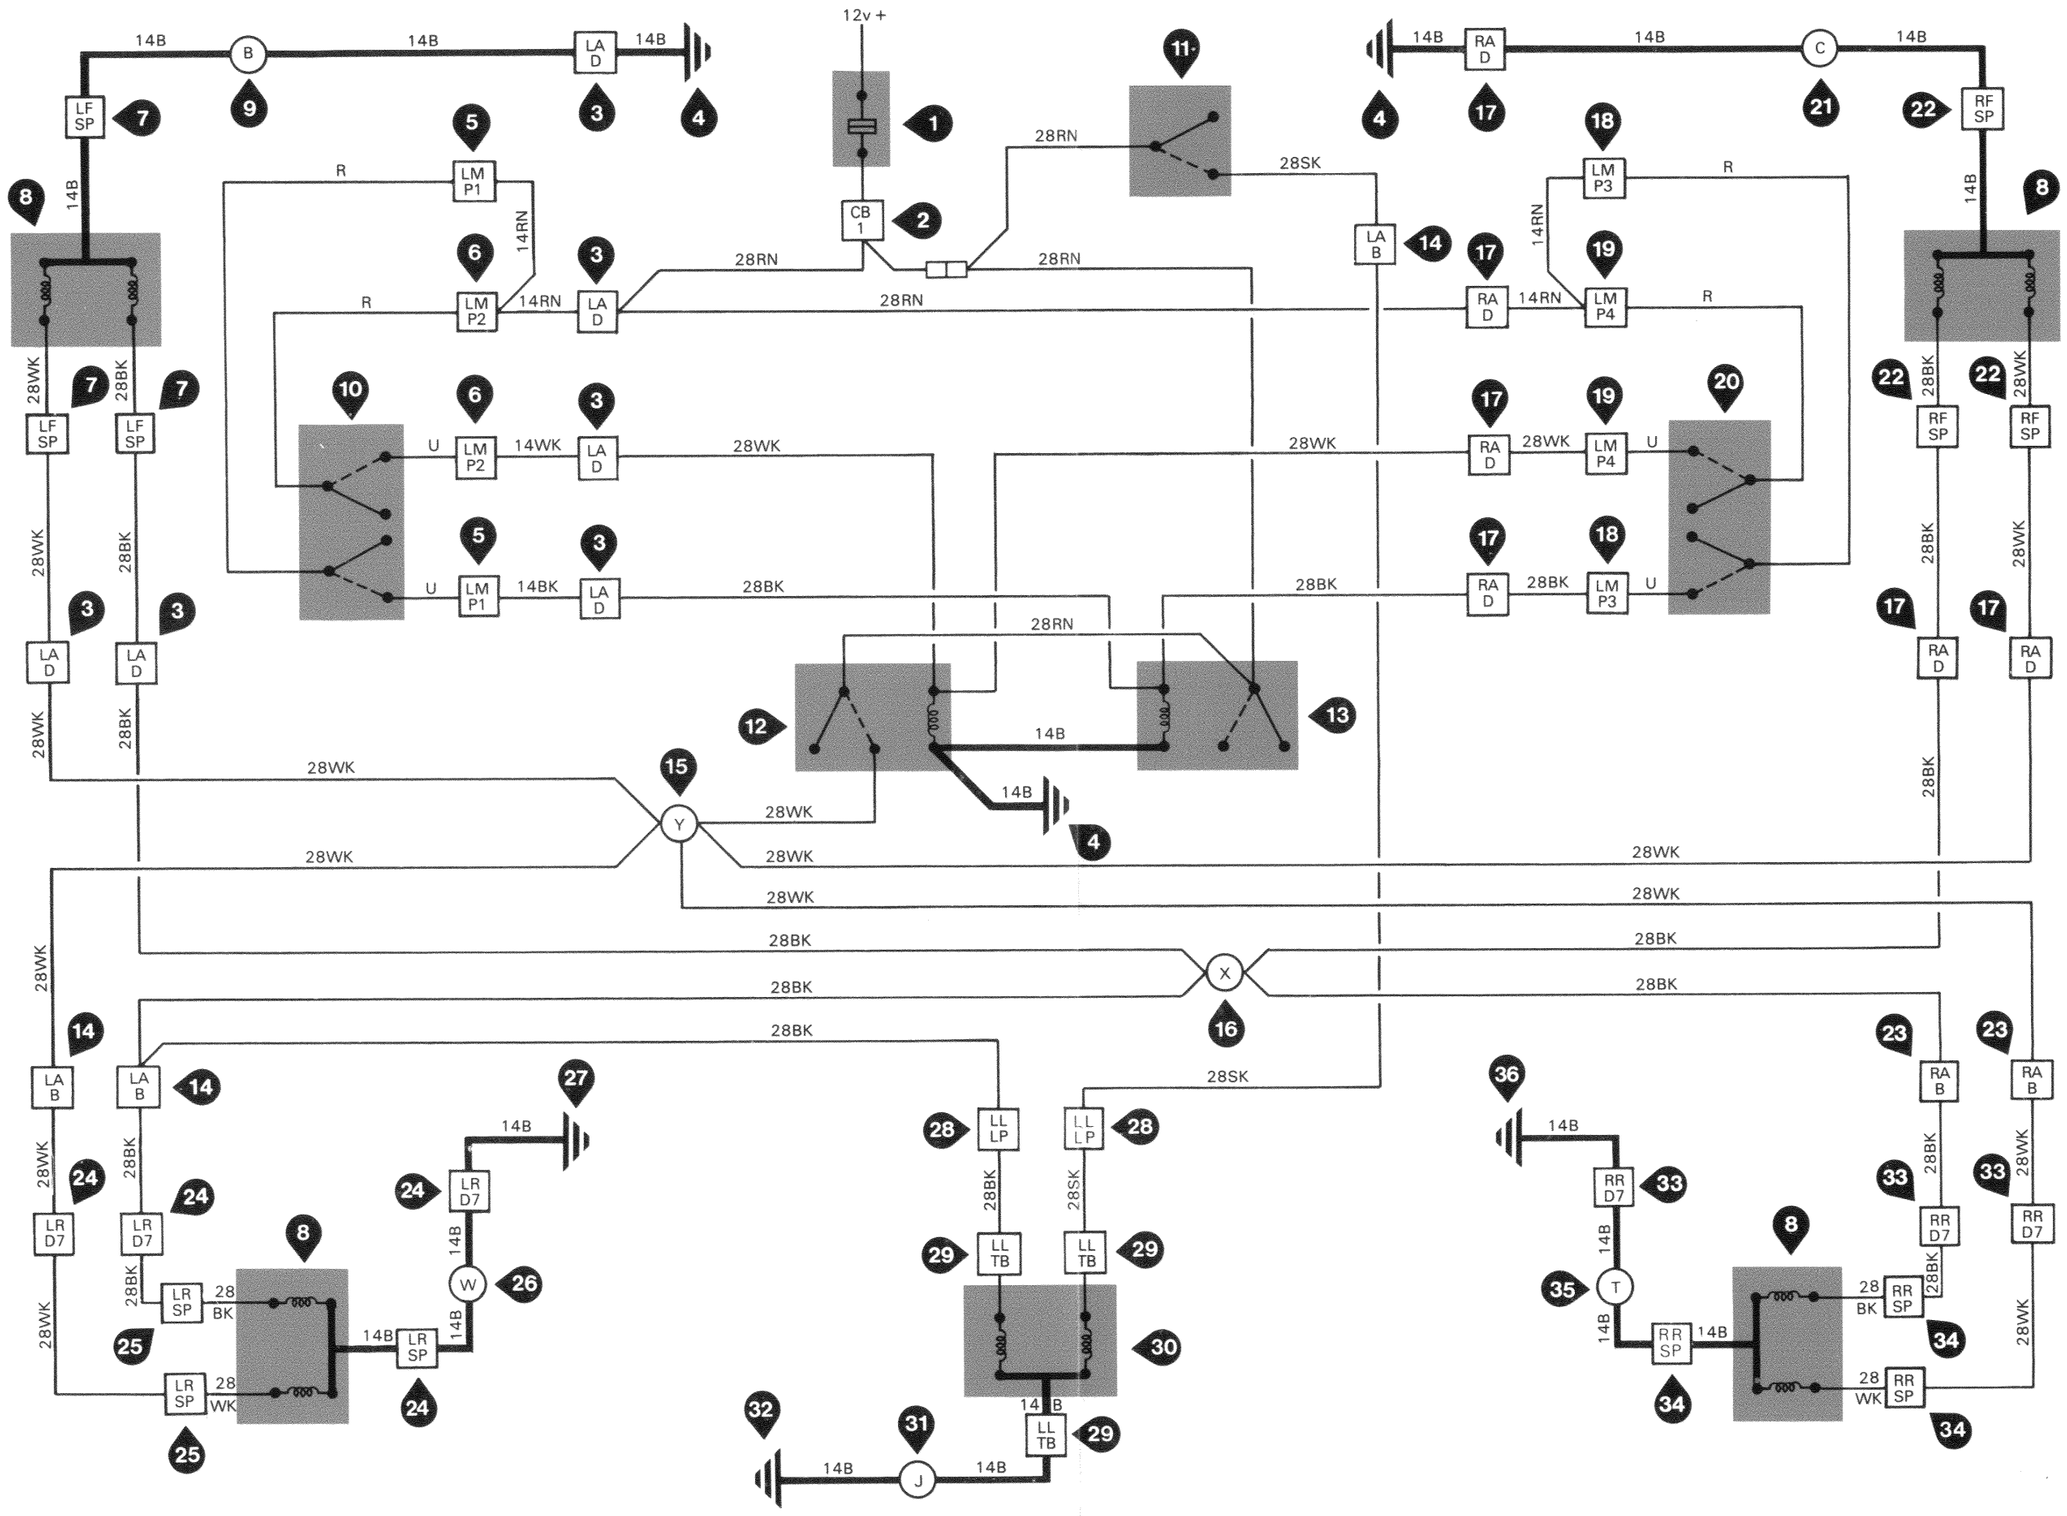
12v +
CB 1
LF SP
LA D
LM P1
LM P2
LM P3
LM P4
RA D
RF SP
LA B
RA B
LR D7
LR SP
LL LP
LL TB
RR D7
RR SP
14B
28WK
28BK
28RN
28SK
14RN
14WK
14BK
R
U

Centralized door locking system

Corniche/Continental

Right-hand drive cars

Wiring diagram

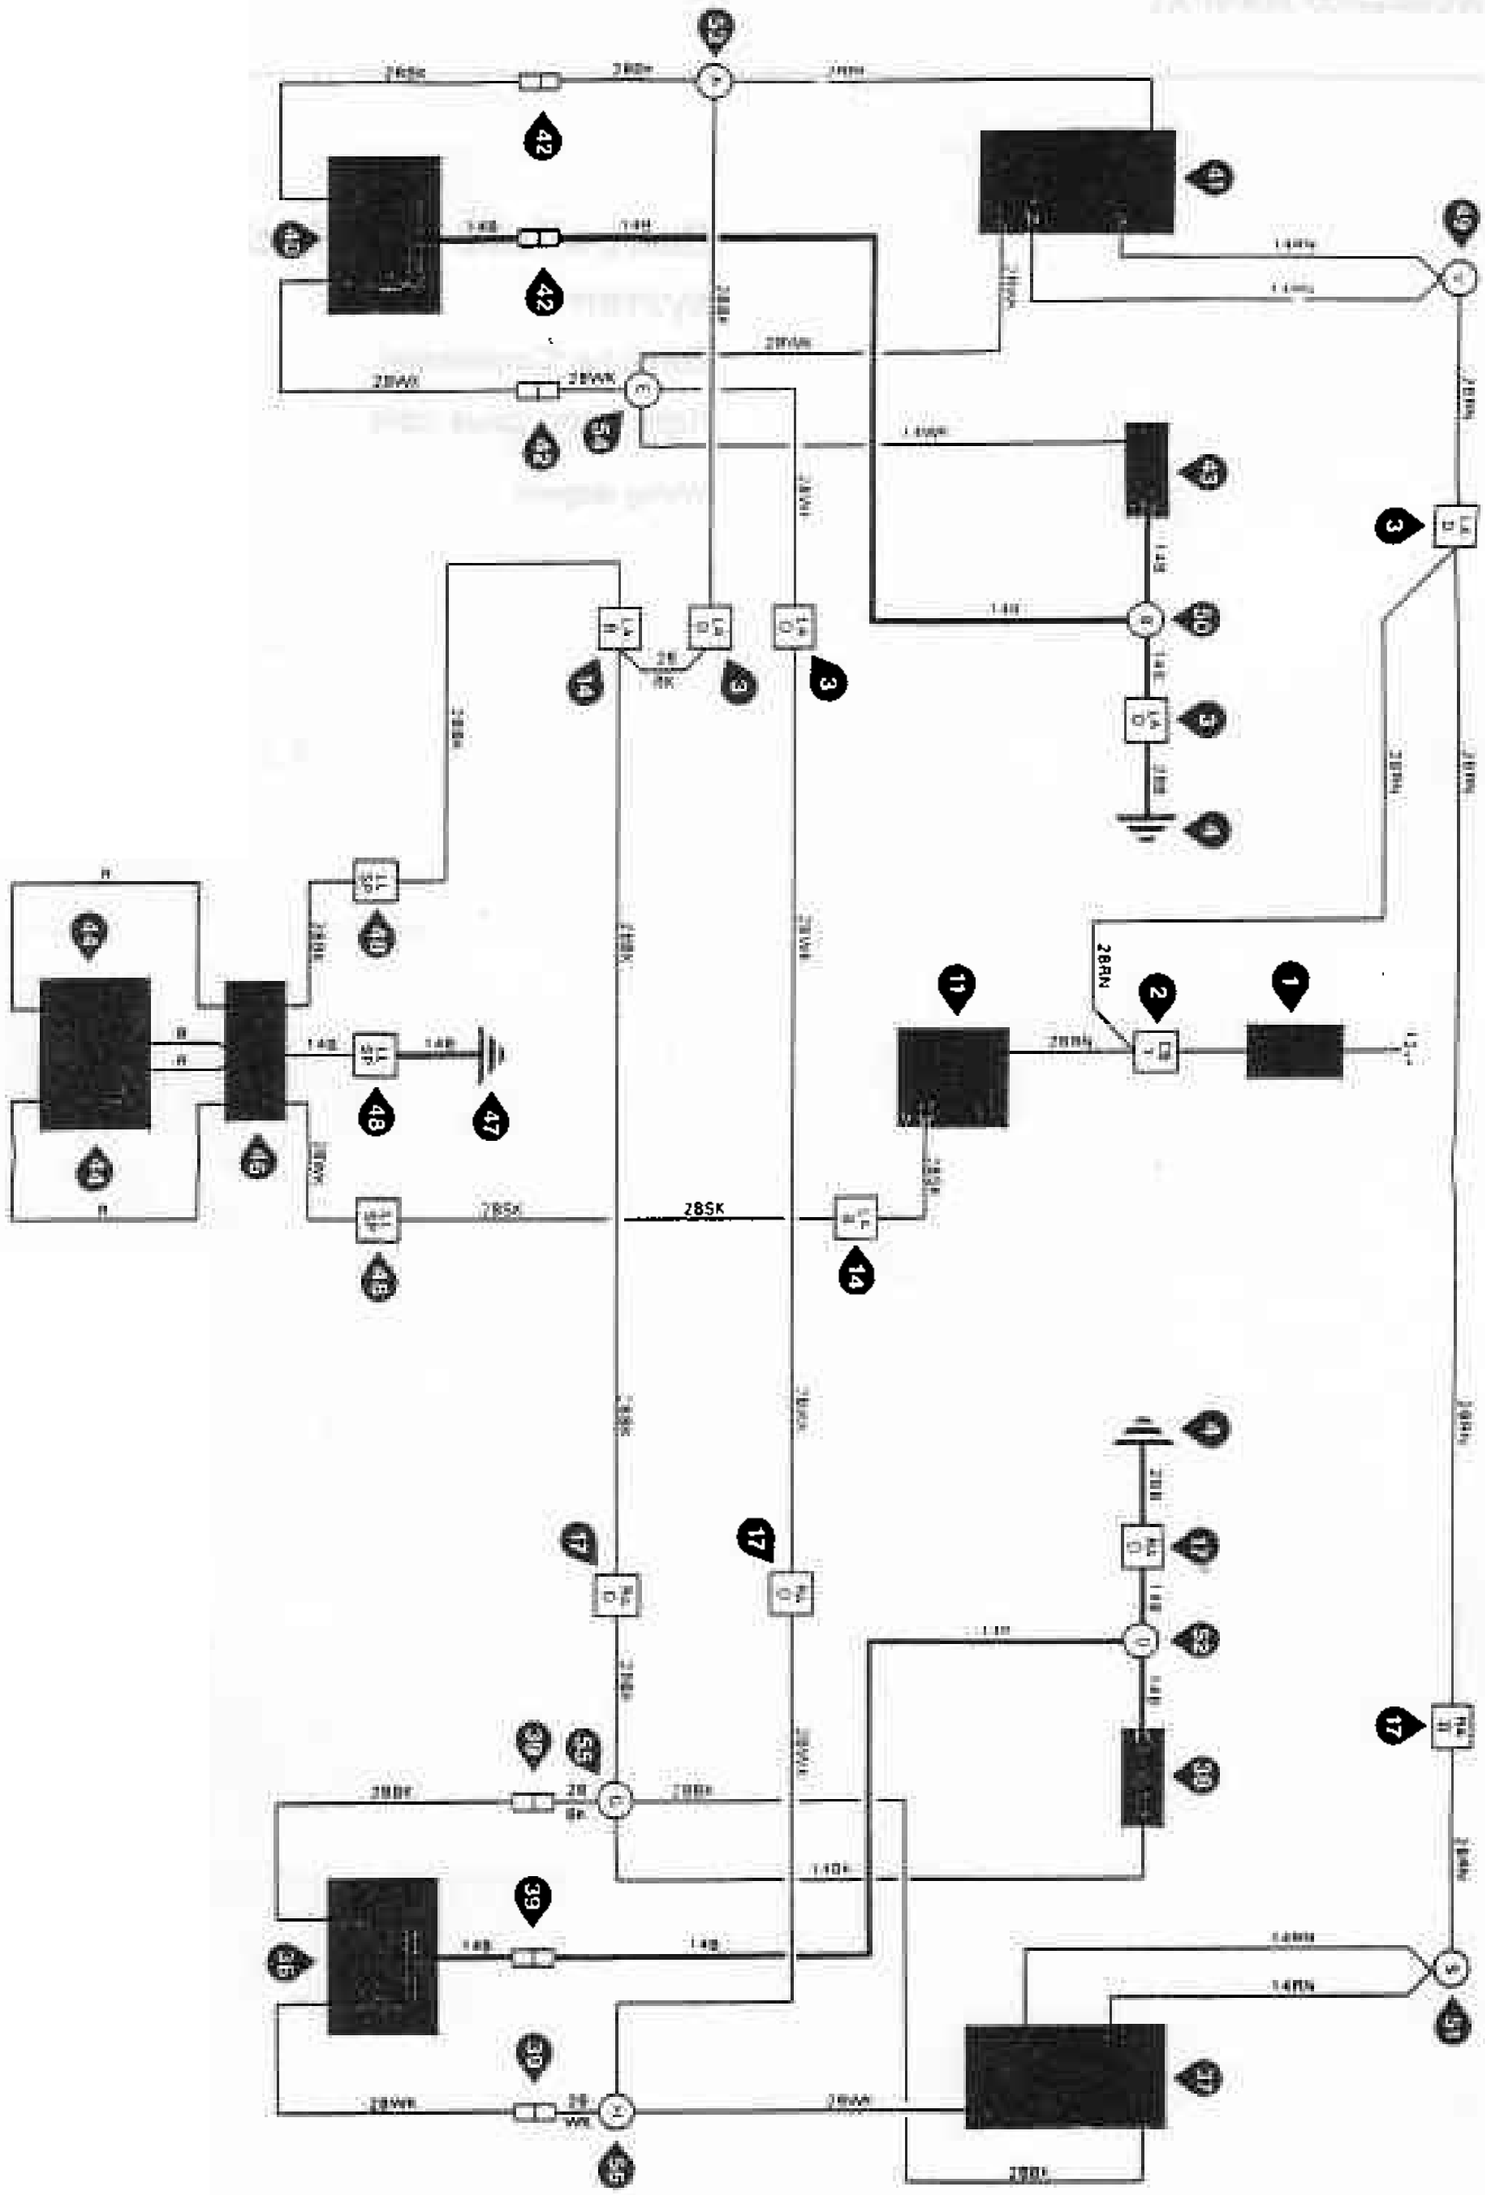
28SK
28RN

Centralized door locking system

Corniche/Continental

Left-hand drive cars

Wiring diagram

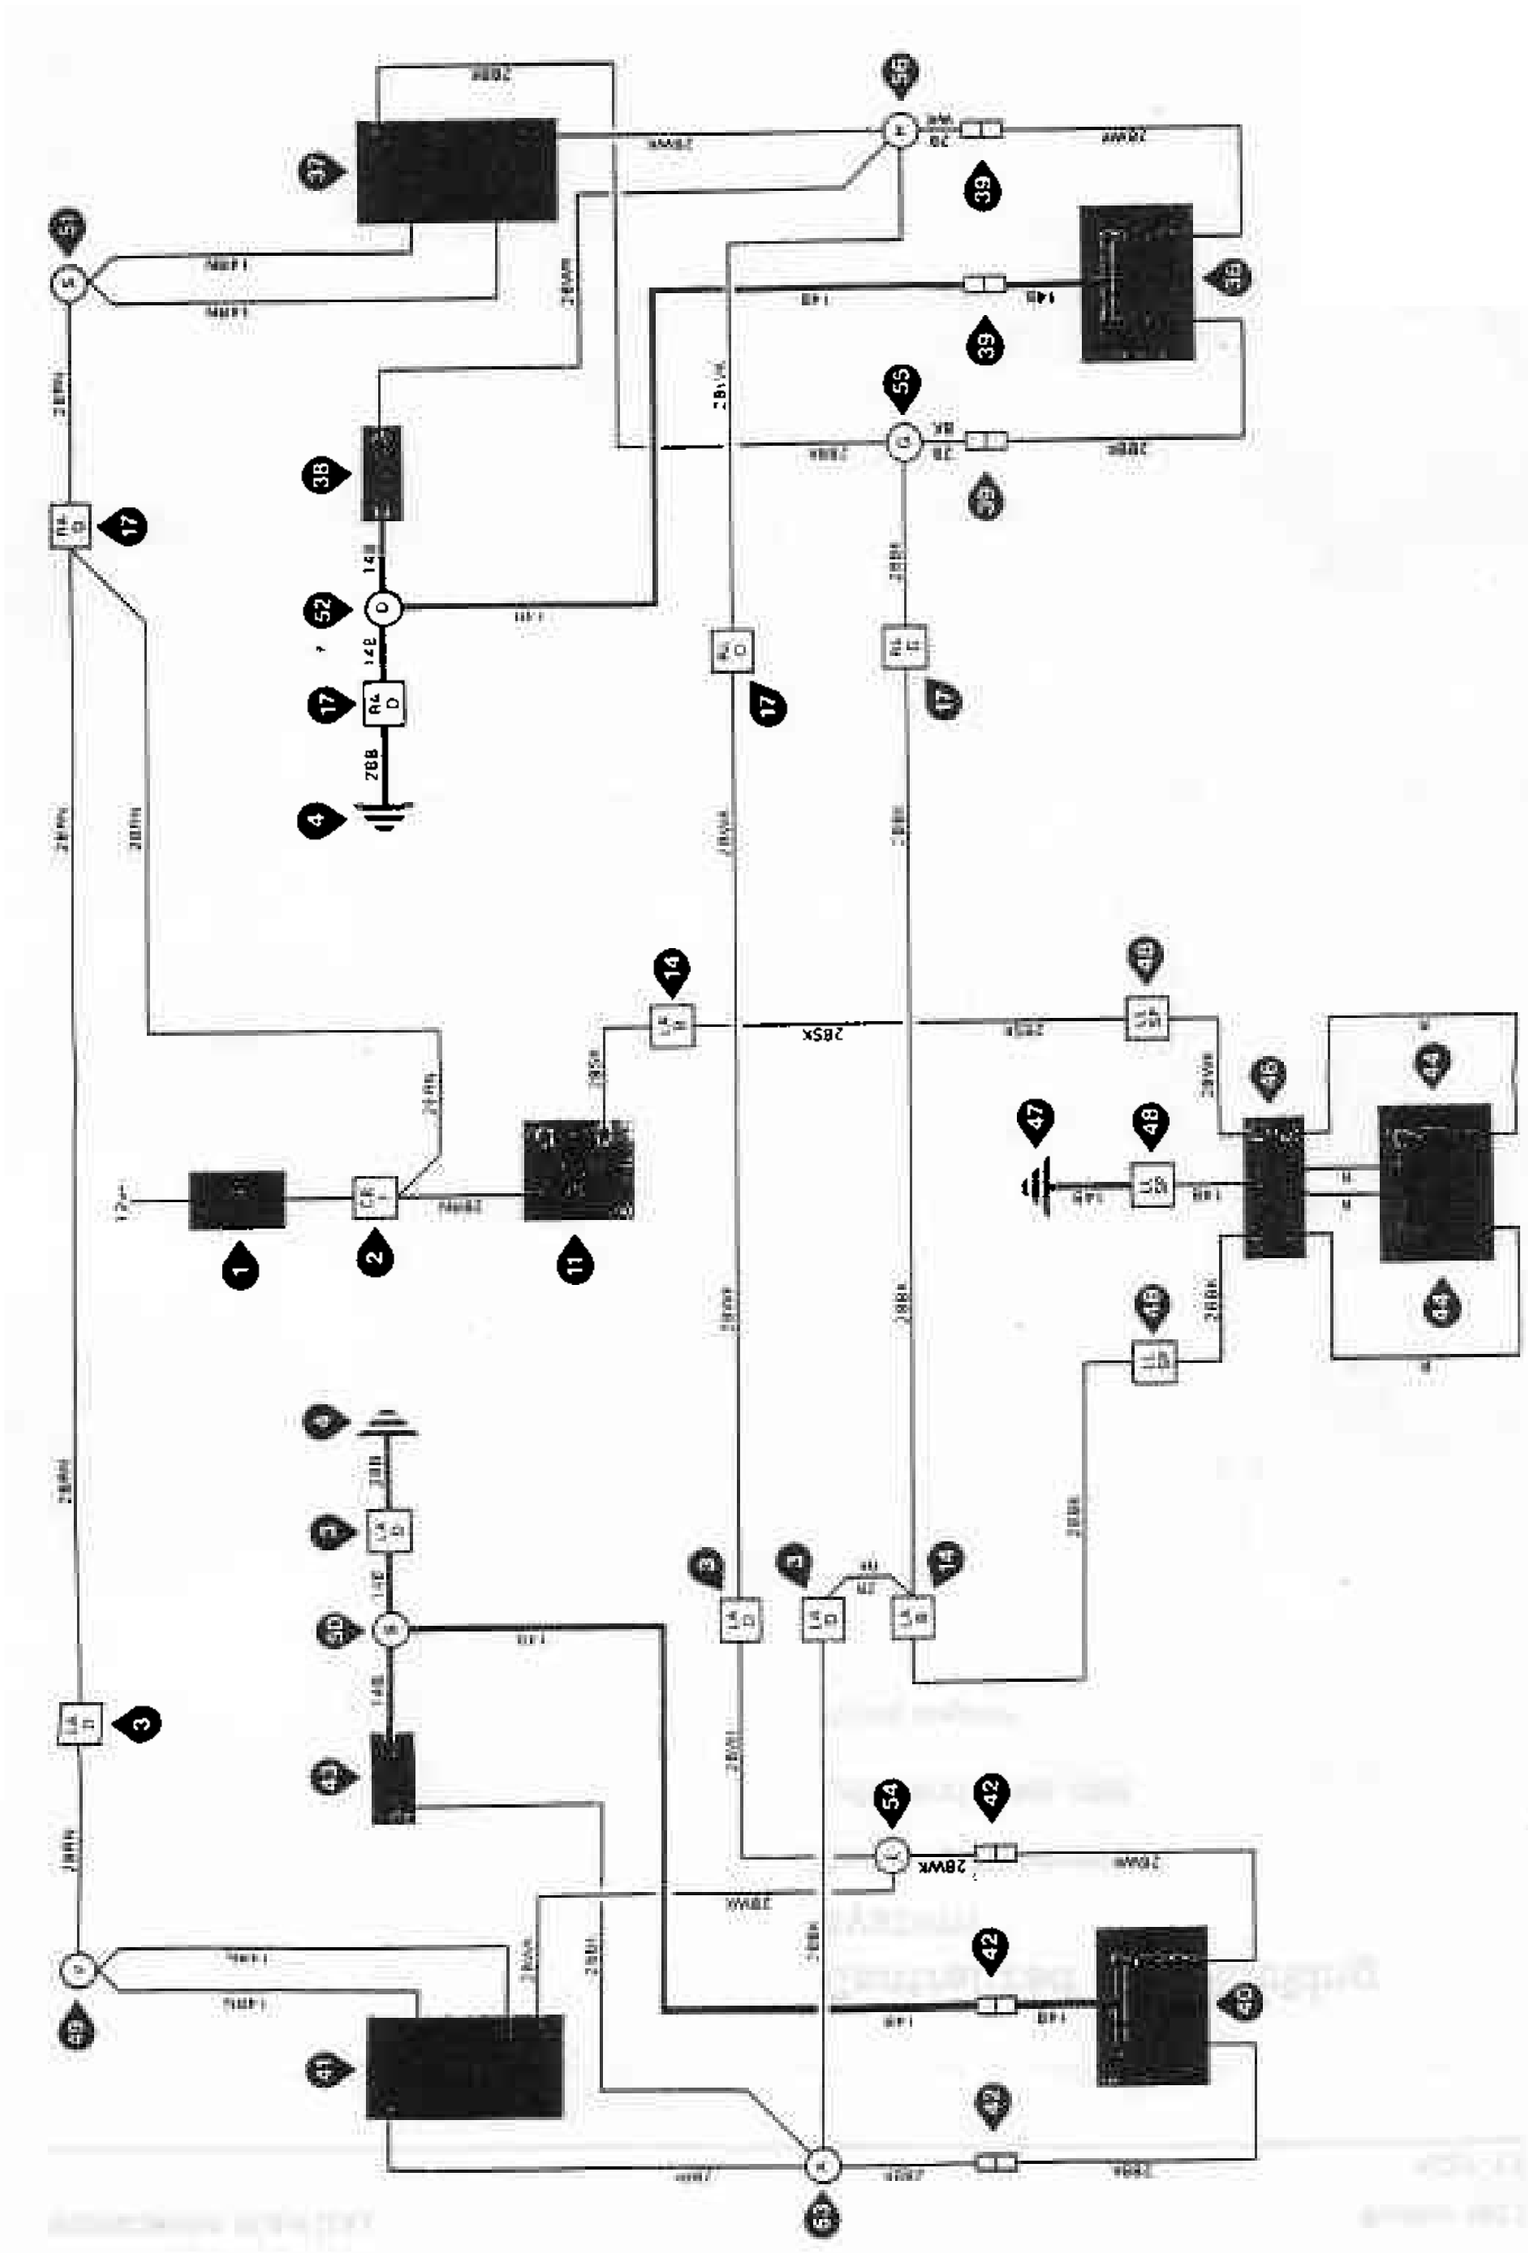

Centralized door locking system

Corniche/Continental

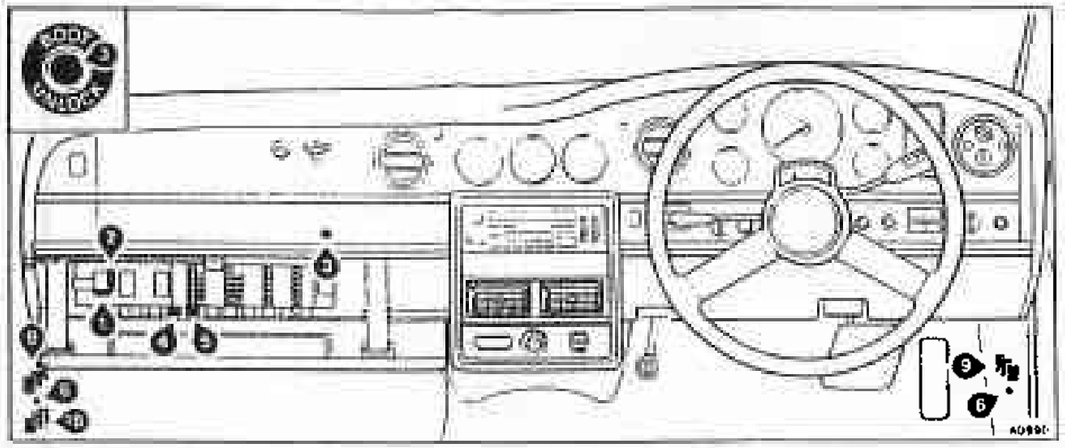

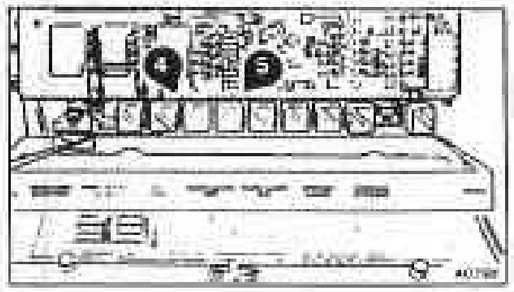

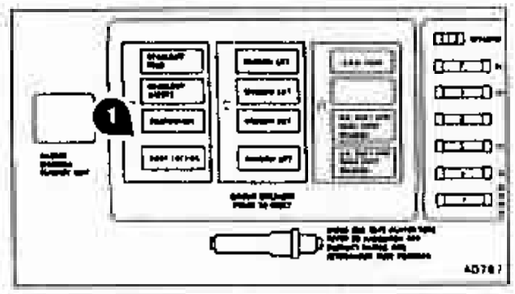

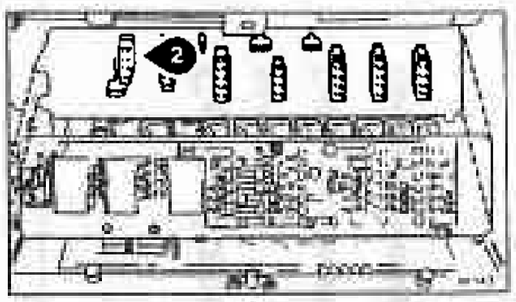

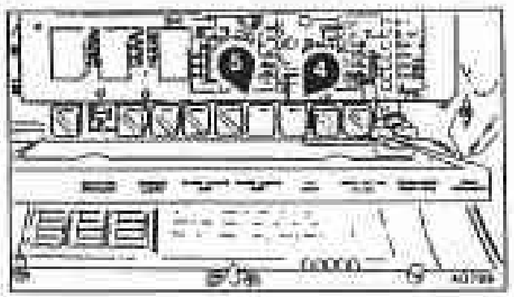

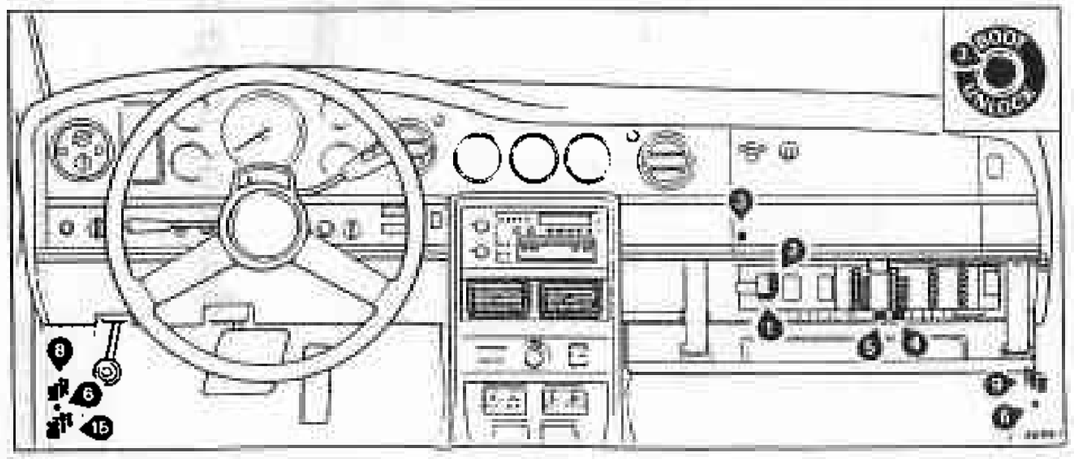

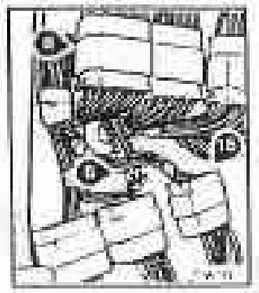

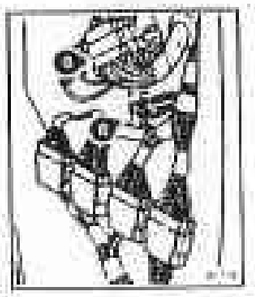

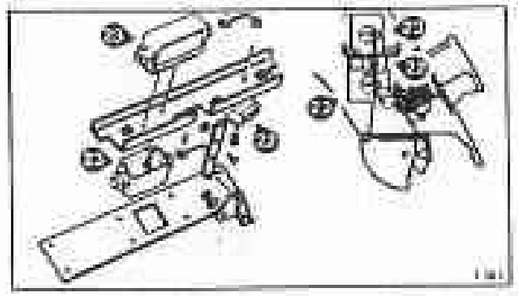

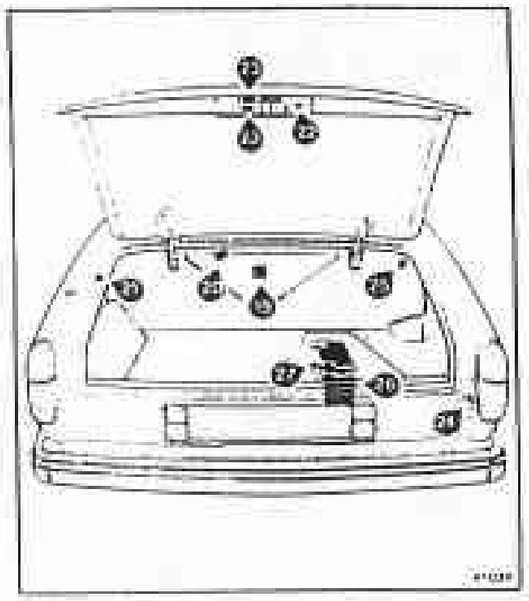

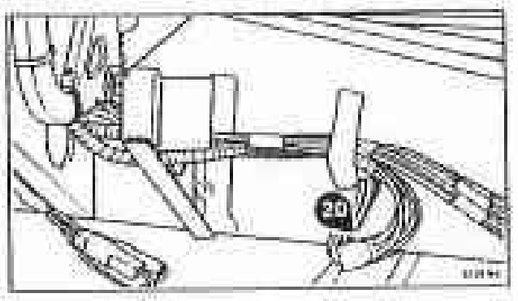

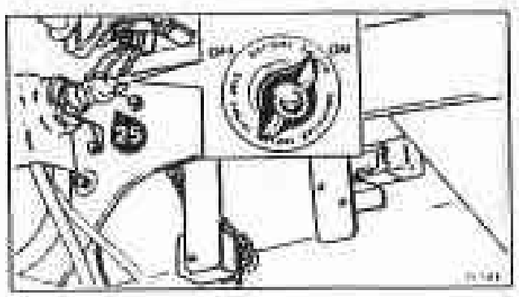

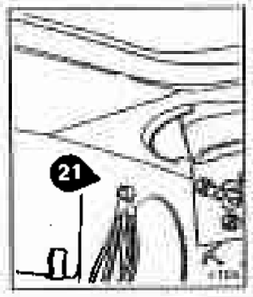

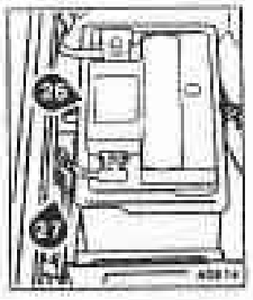

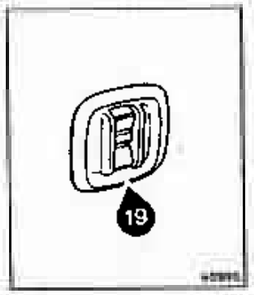

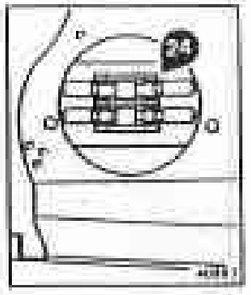

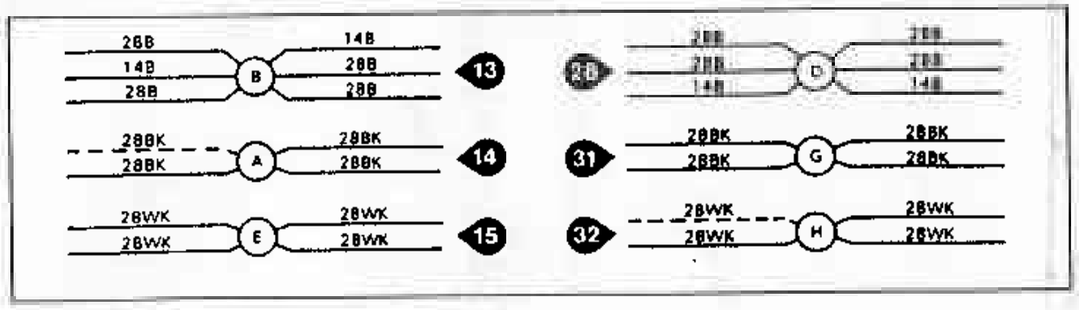
26B
14B
28B
B
14B
28B
28B
13
28BK
28BK
A
28BK
28BK
14
28WK
28WK
E
28WK
28WK
15
28B
28B
14B
D
28B
28B
14B
28BK
28BK
G
28BK
28BK
28WK
28WK
H
28WK
28WK

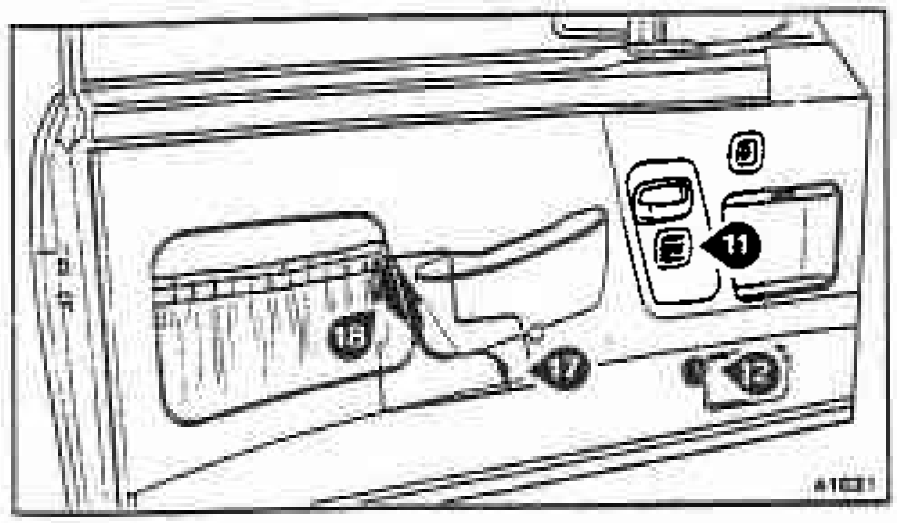
11
16
17
13
A1031

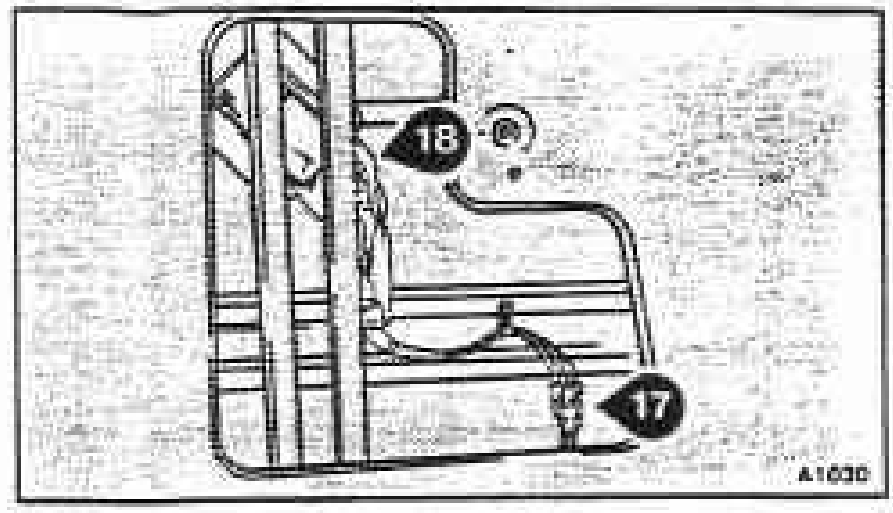
18
17
A1030

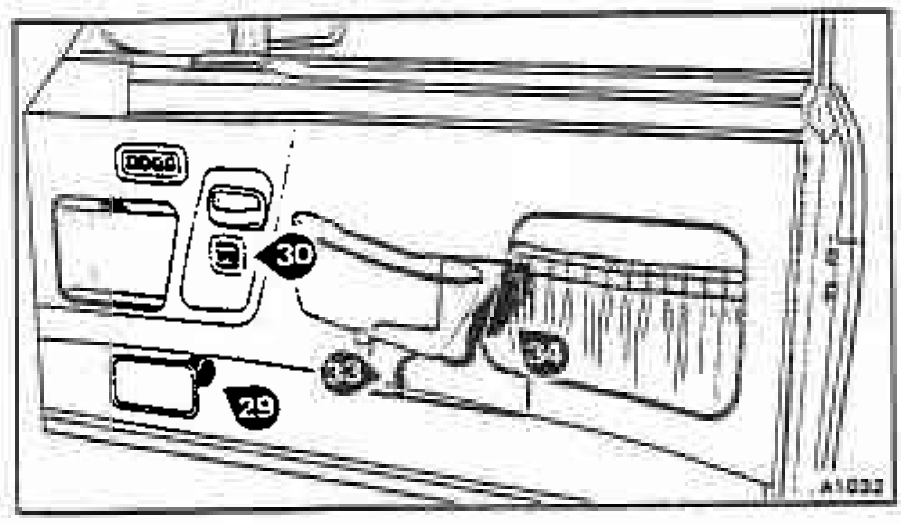
30
33
34
29
A1032

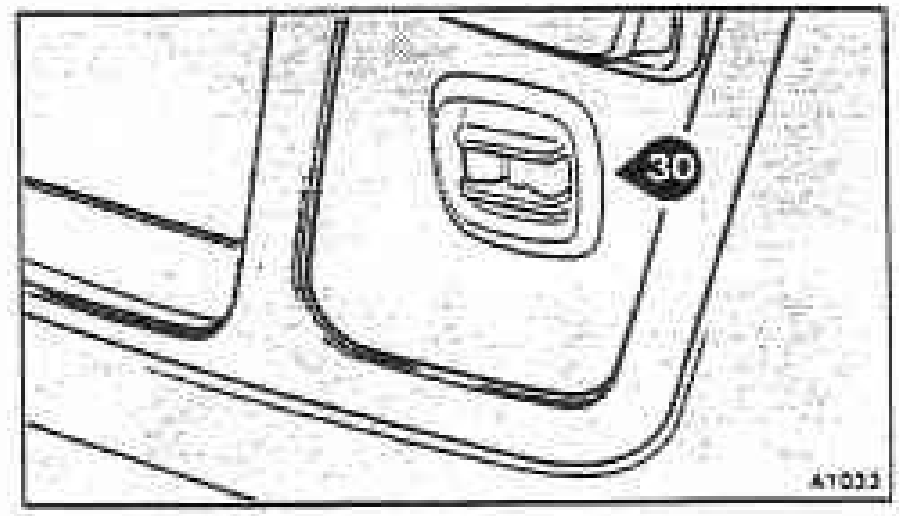
30
A1033

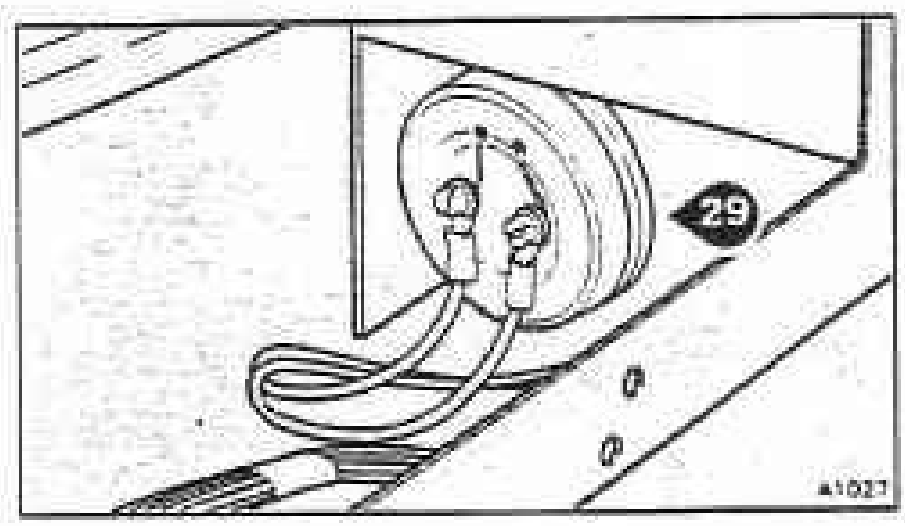
29
A1027

Centralized door locking system

Corniche/Continental

Right-hand drive cars

Wiring diagram

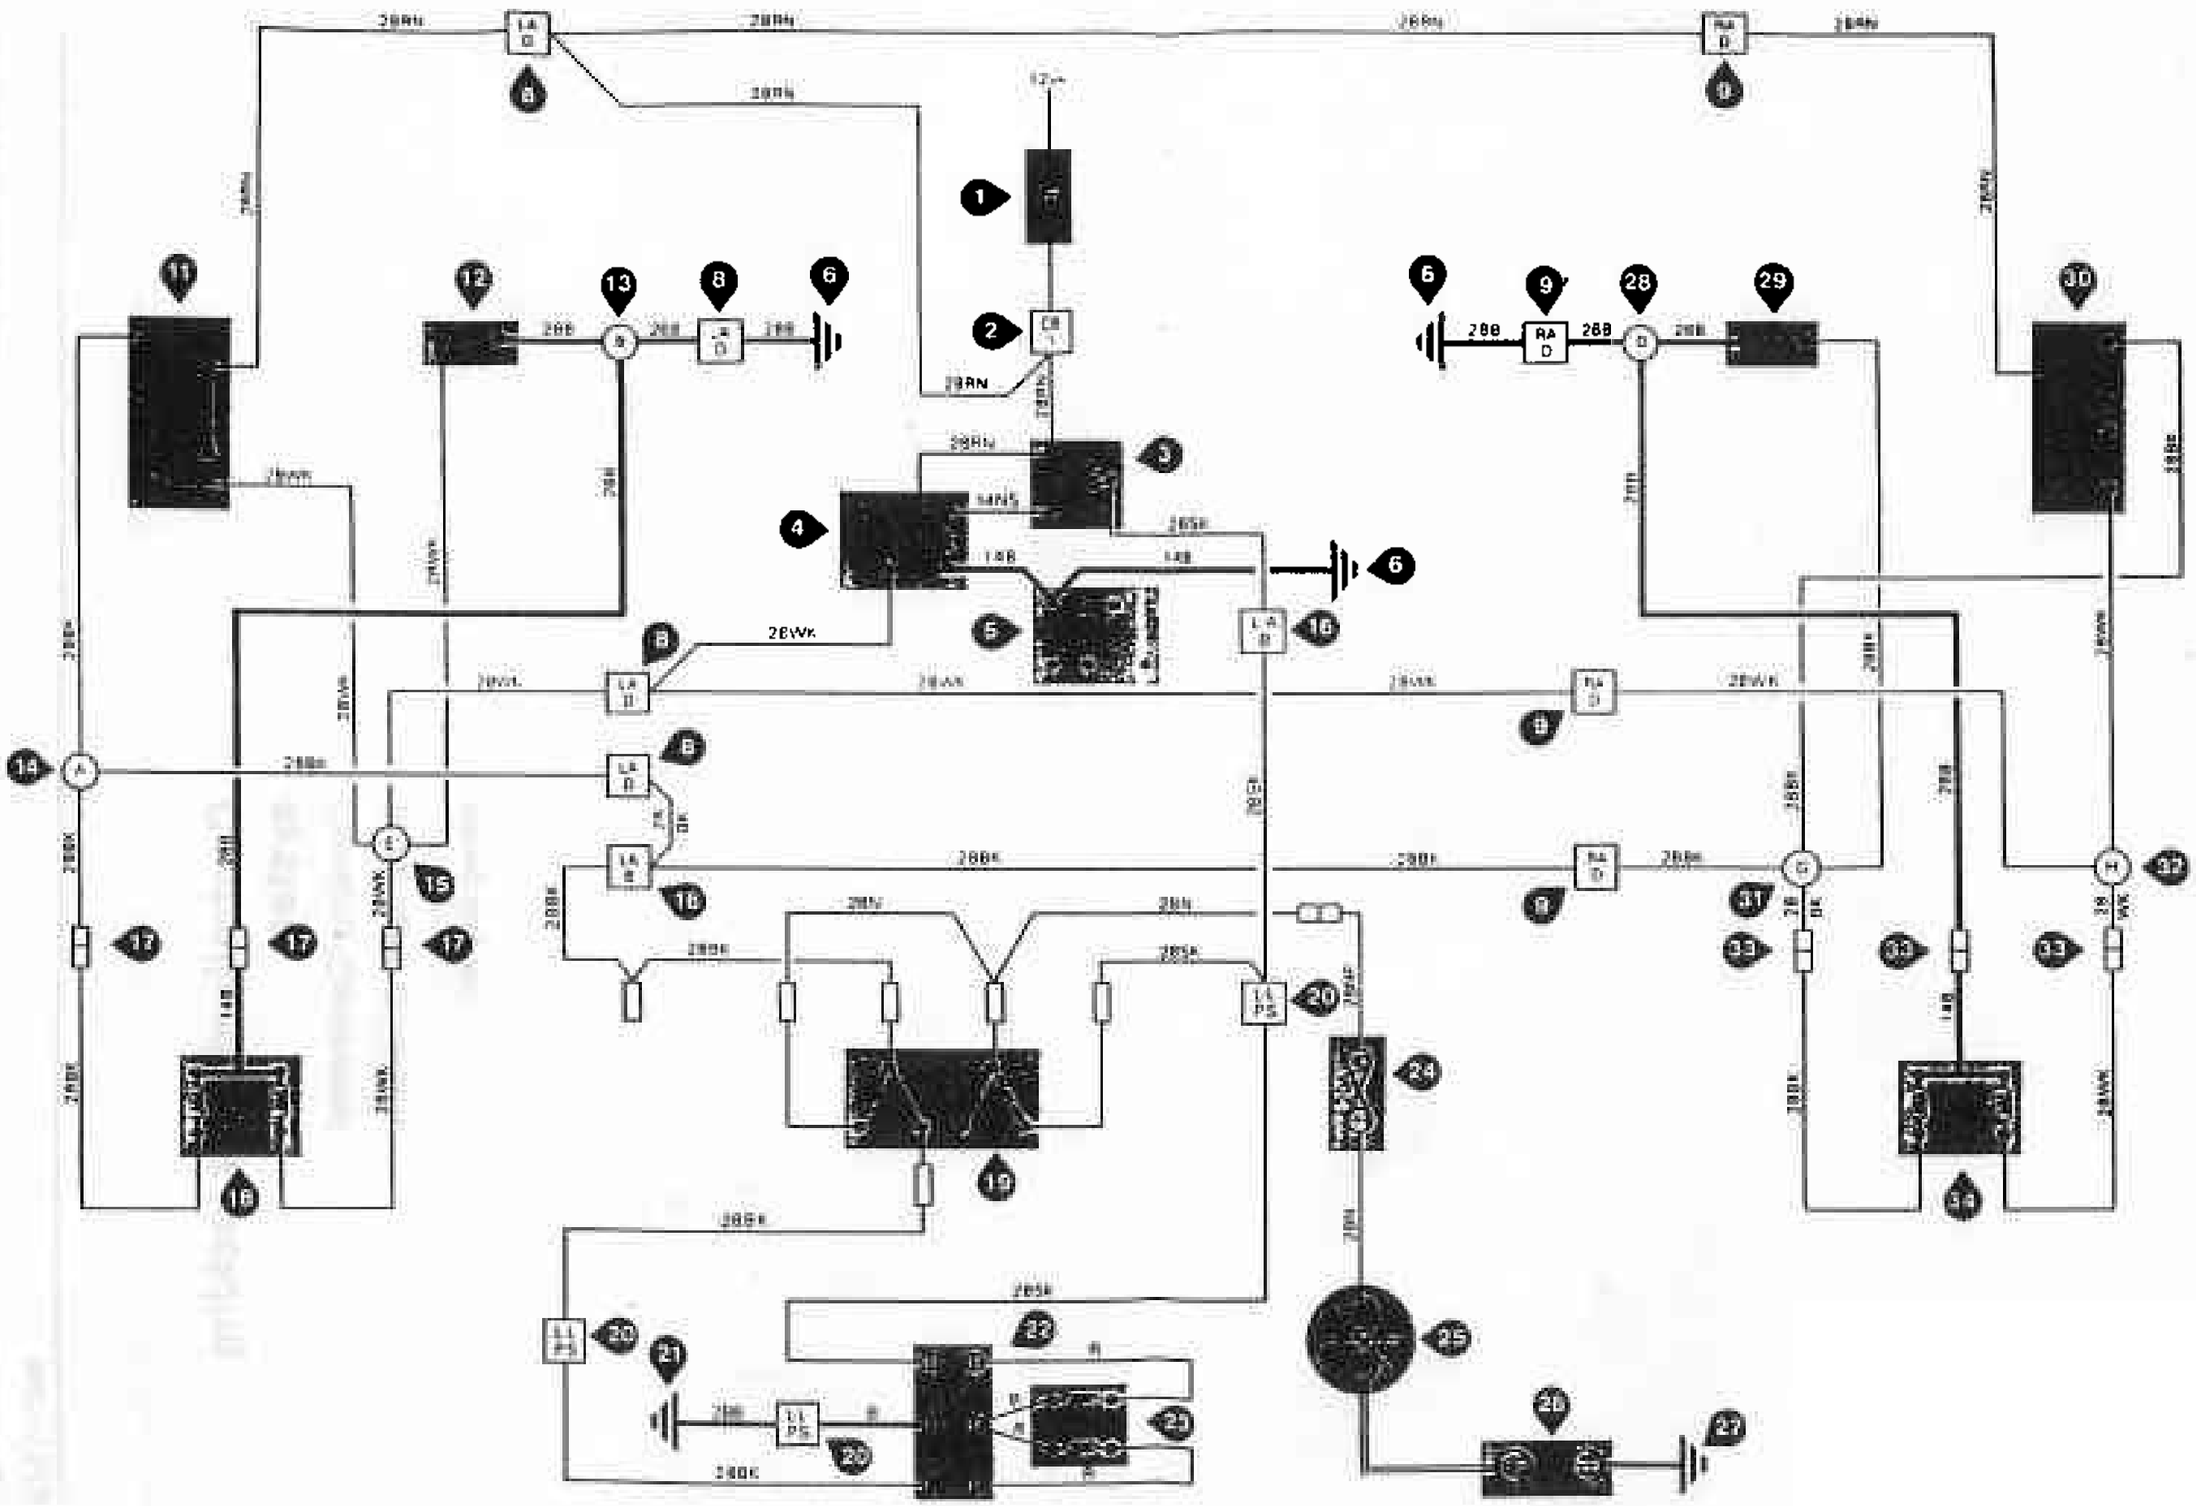

Centralized door locking system

Corniche/Continental

Left-hand drive cars

Wiring diagram

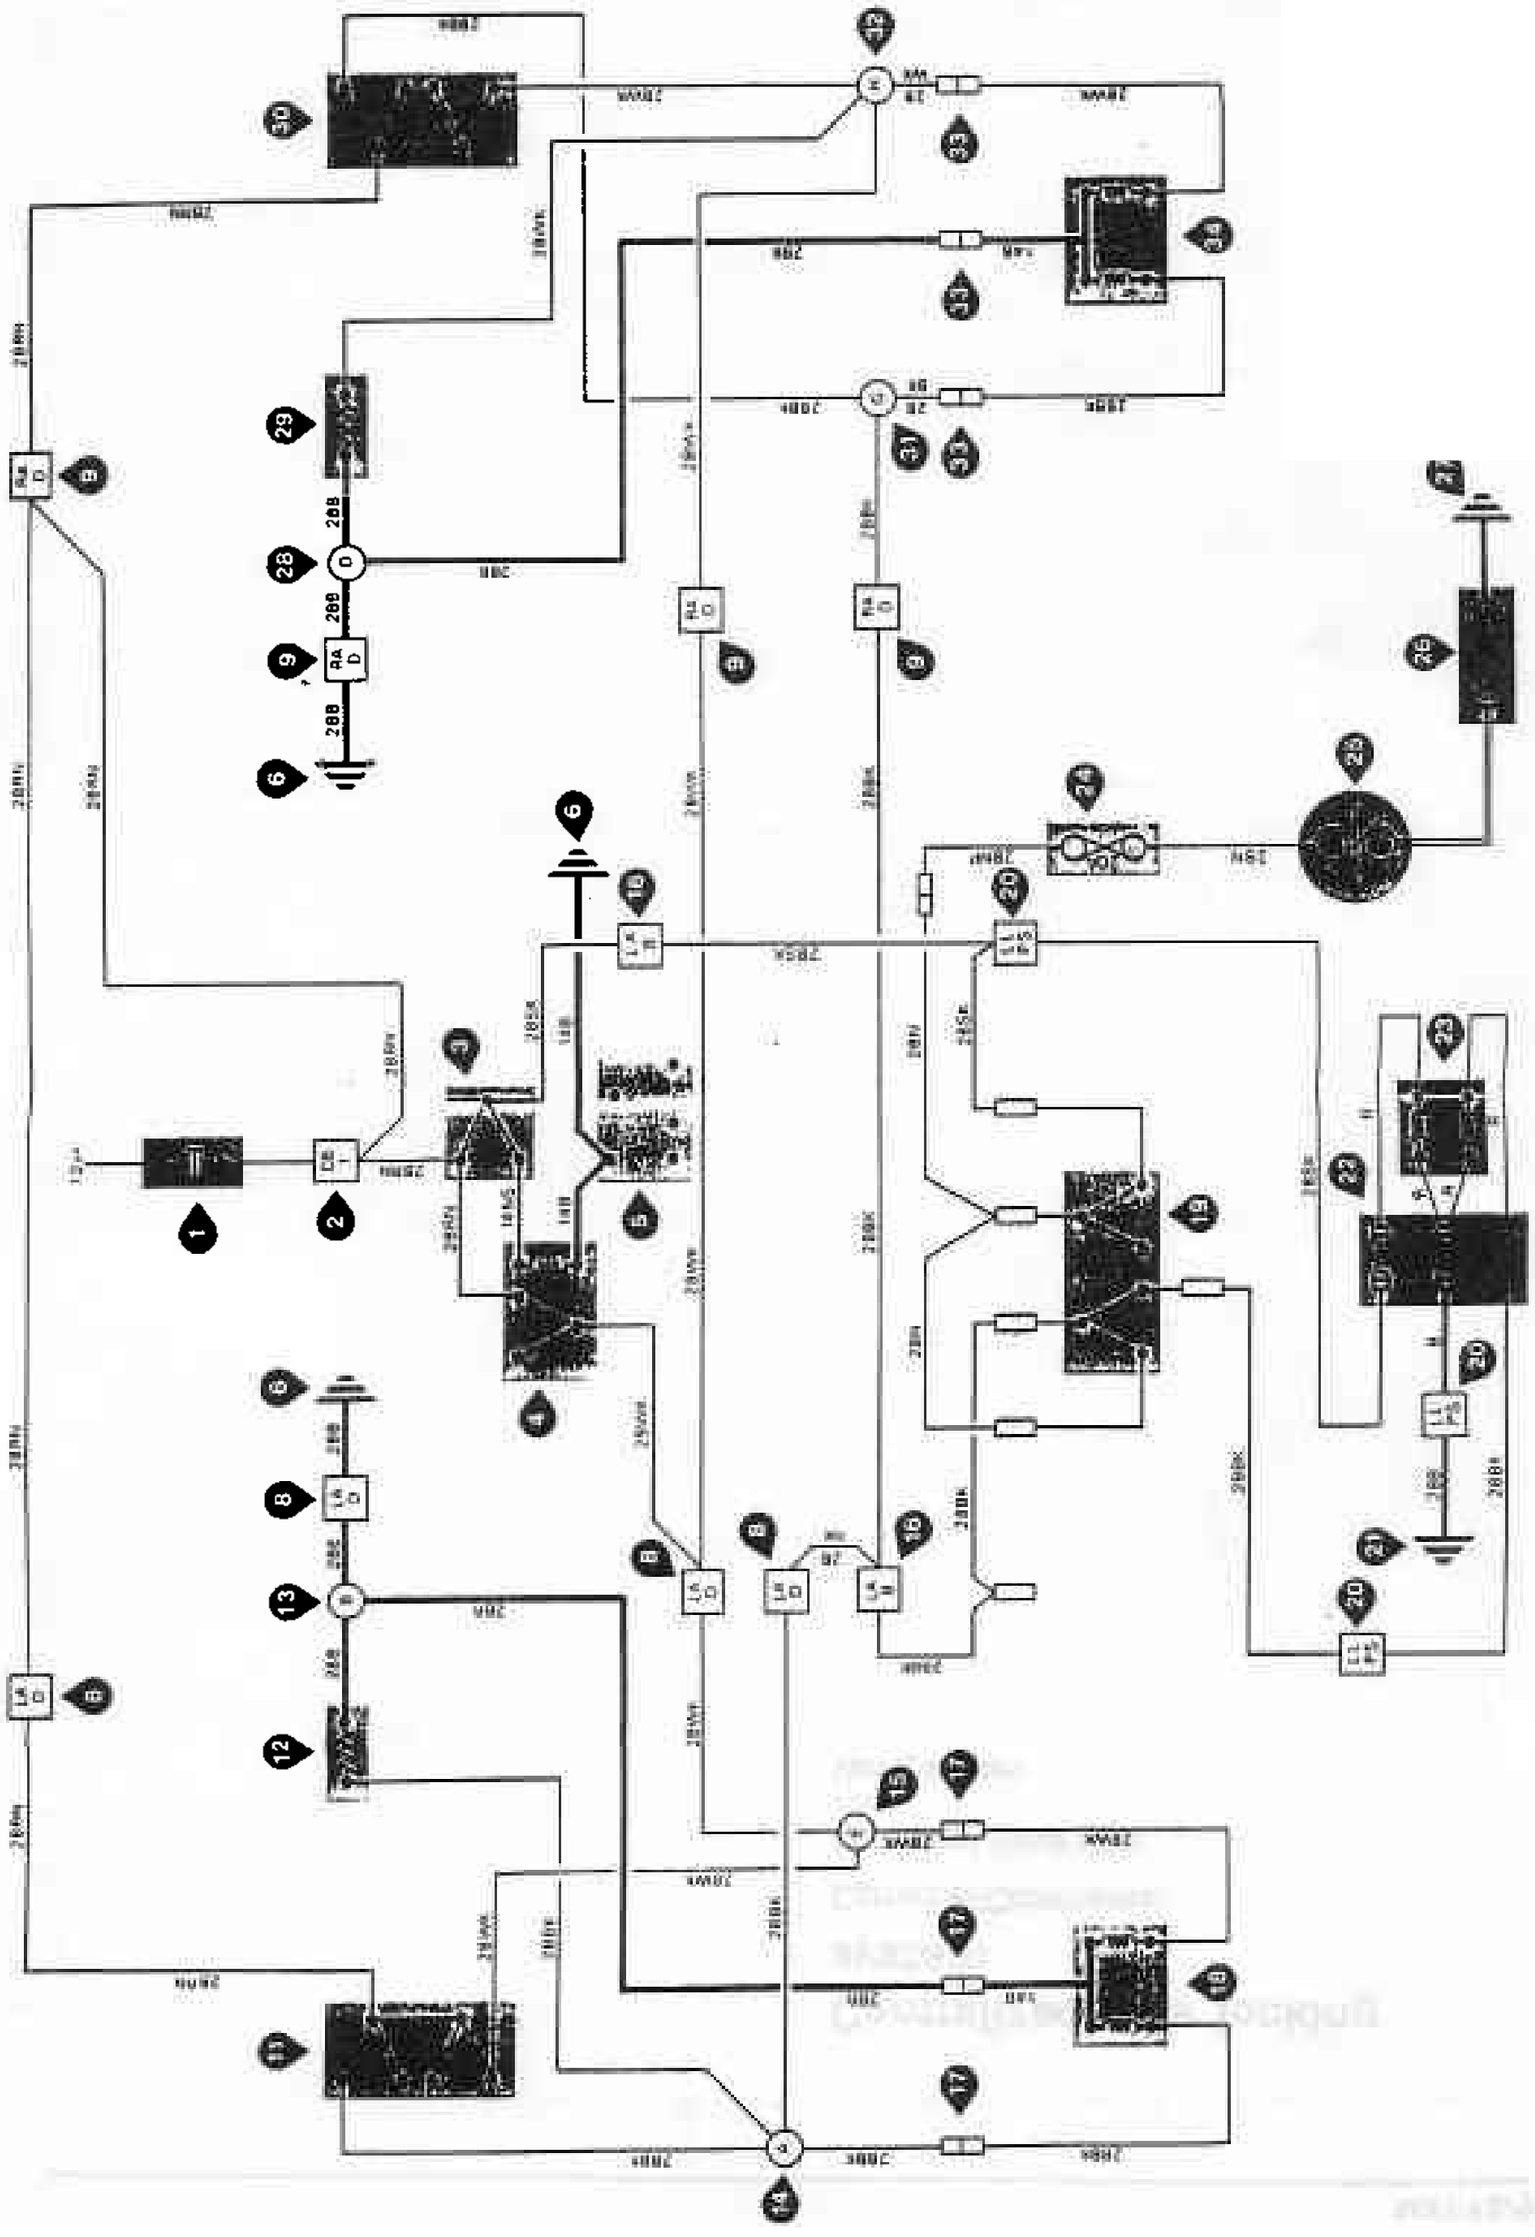

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Turbo R

Component location

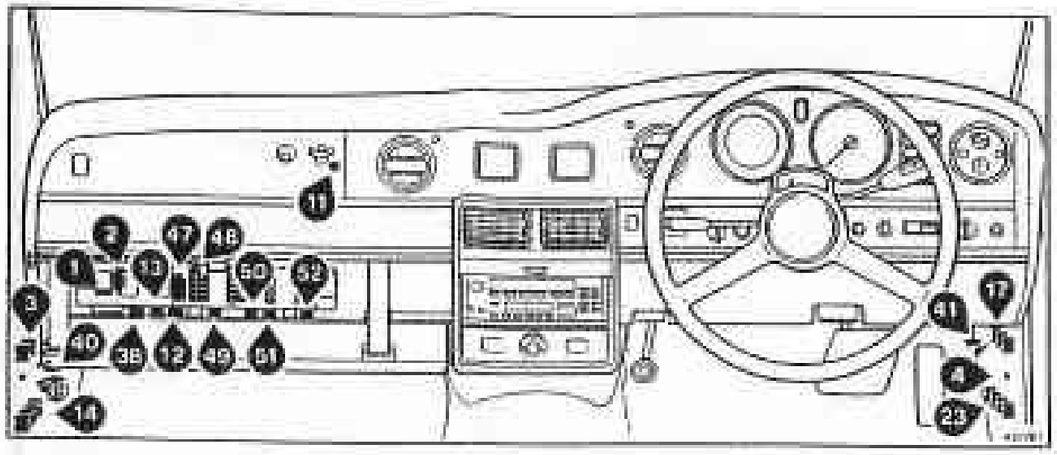

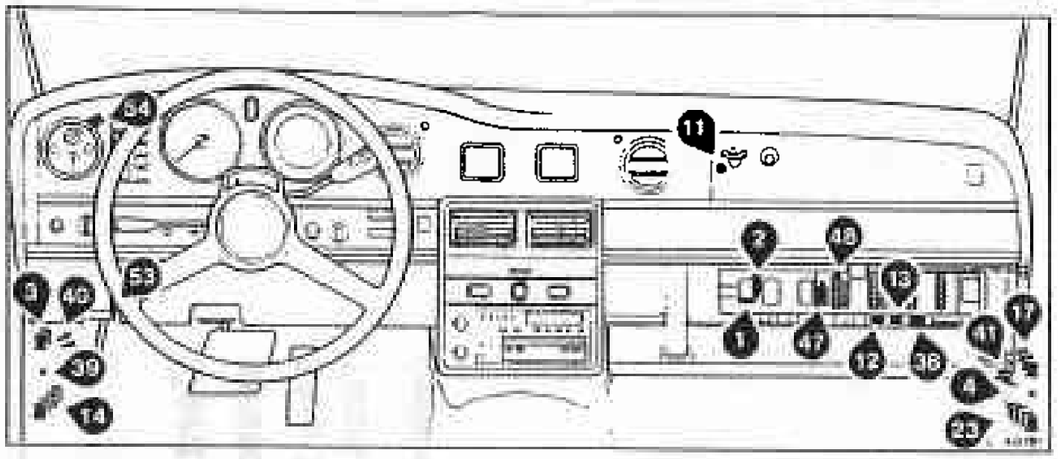

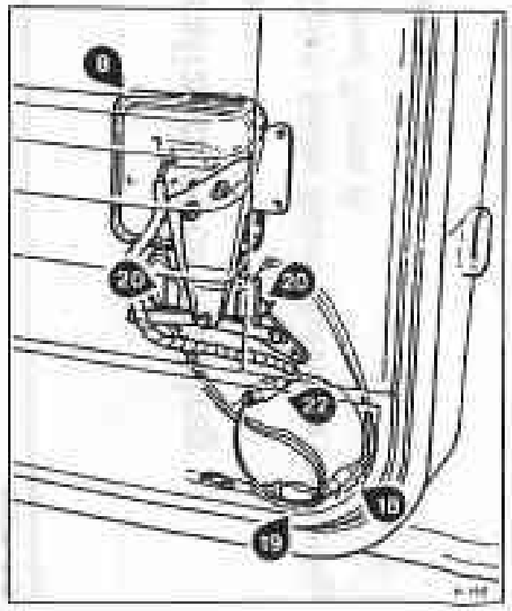

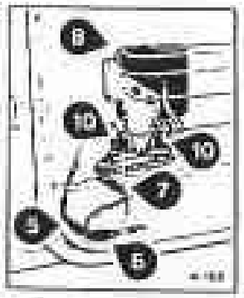

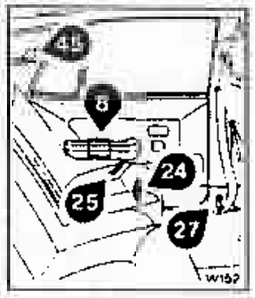

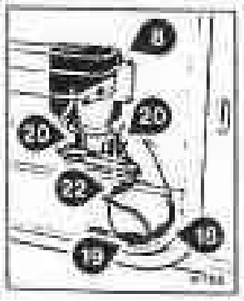

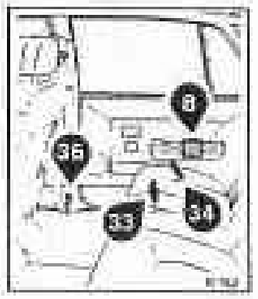

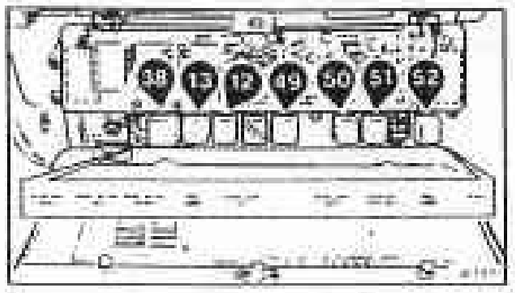

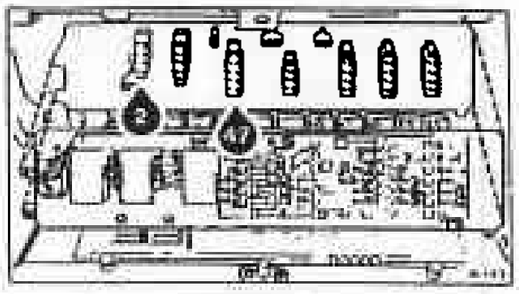

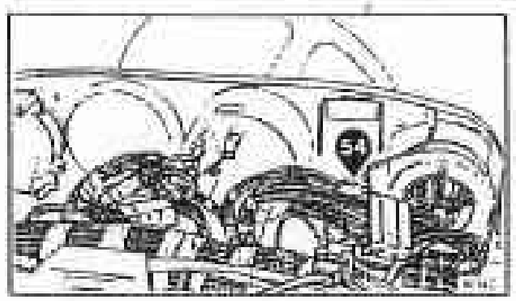

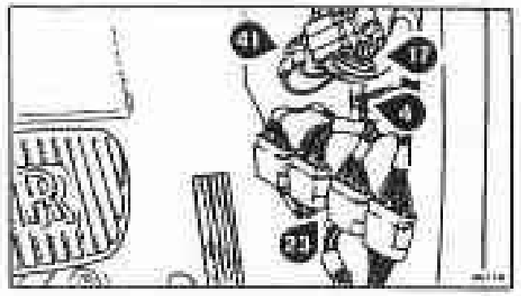

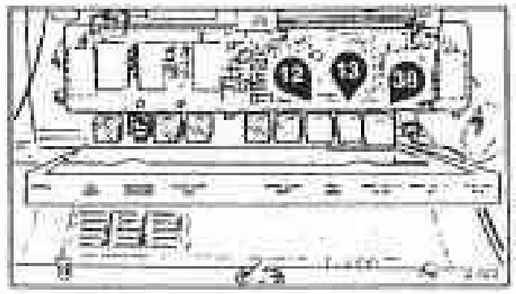

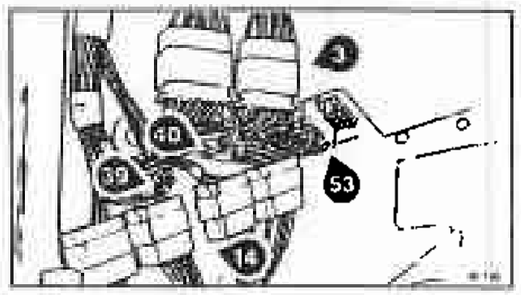

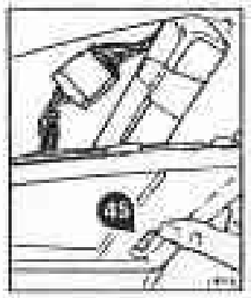

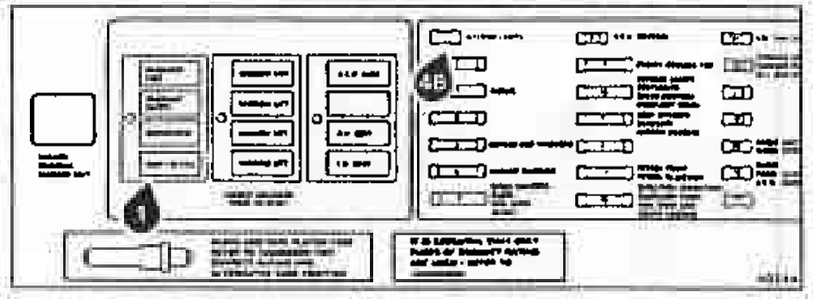

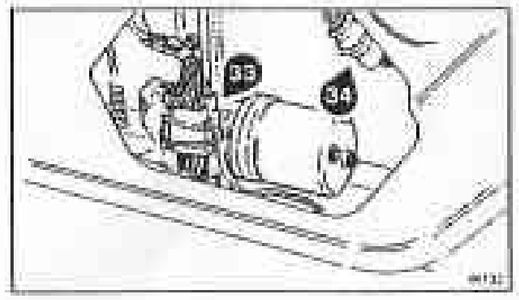

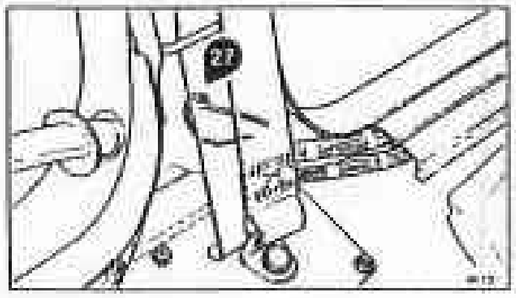

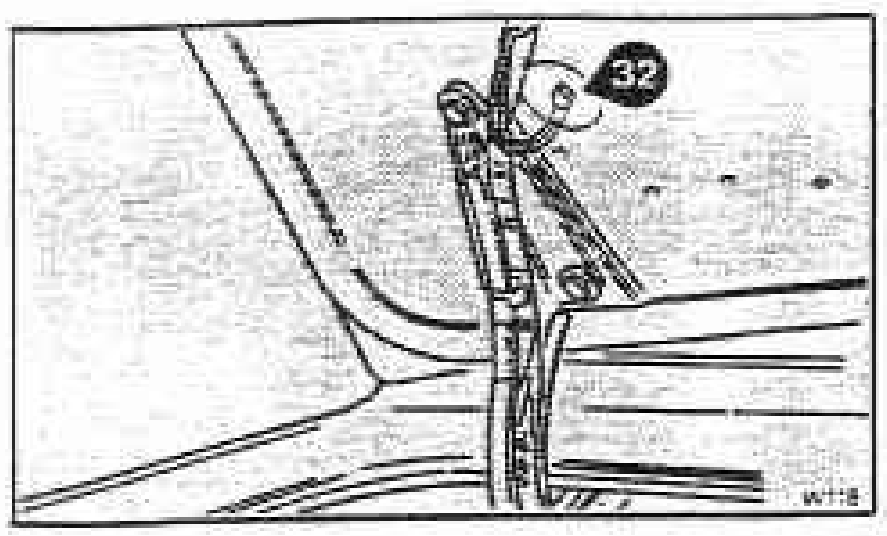
32
W118

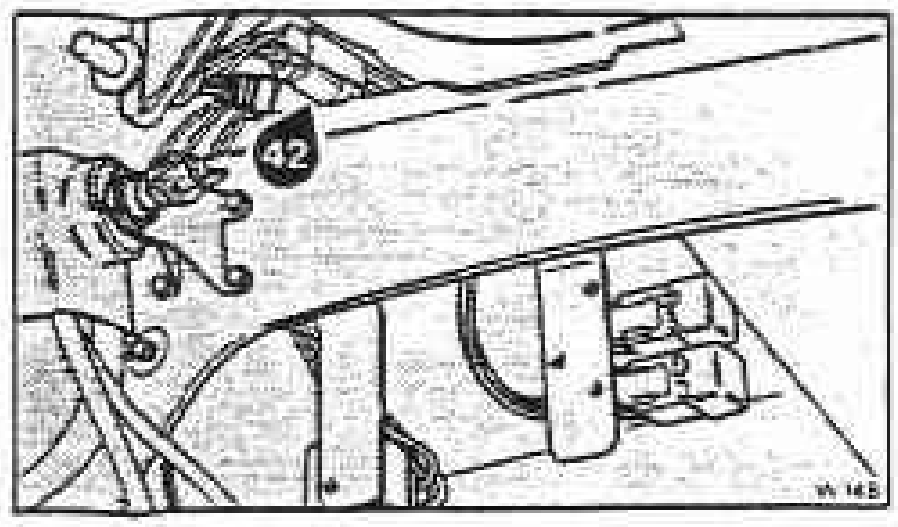
42
W 145

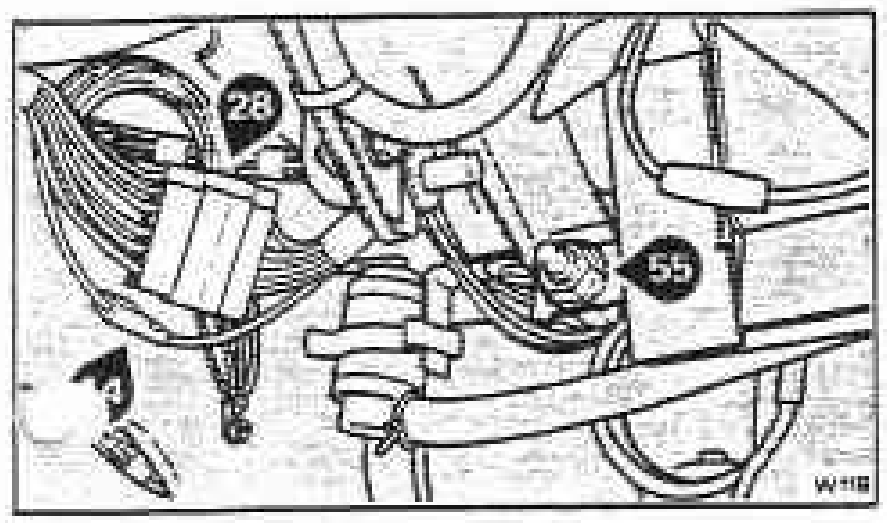
28
55
W118

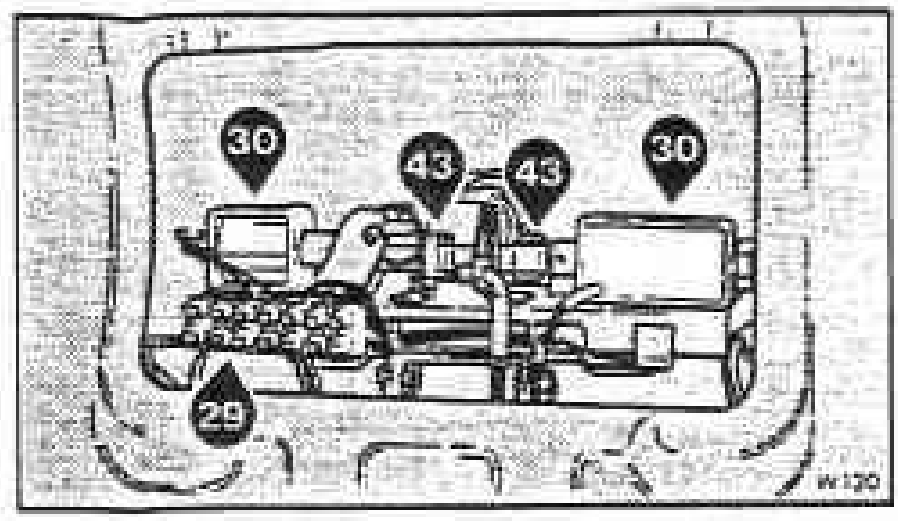
30
43
43
30
29
W120

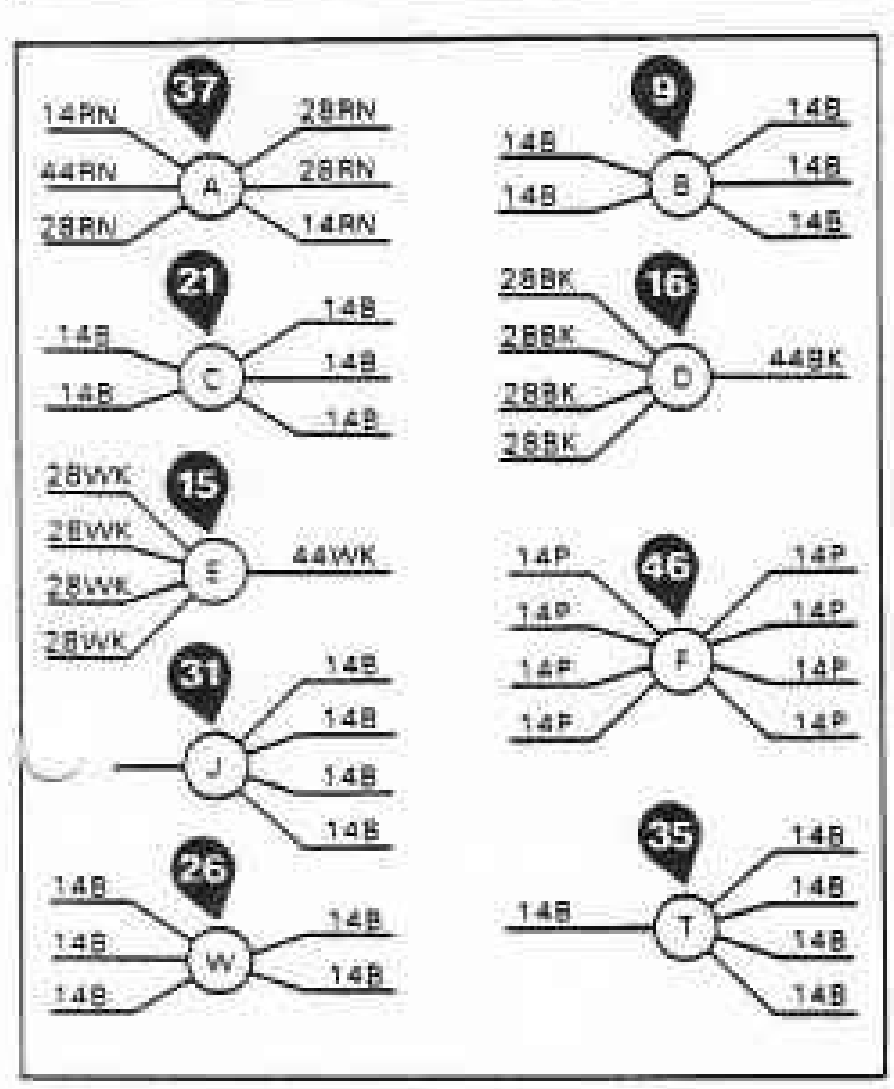
37
14RN
44RN
28RN
28RN
28RN
14RN
A
9
14B
14B
14B
14B
14B
14B
B
21
14B
14B
14B
14B
14B
14B
C
16
28BK
28BK
28BK
28BK
44BK
D
15
28WK
28WK
28WK
28WK
44WK
E
46
14P
14P
14P
14P
14P
14P
14P
14P
F
31
14B
14B
14B
14B
J
26
14B
14B
14B
14B
14B
W
35
14B
14B
14B
14B
14B
T

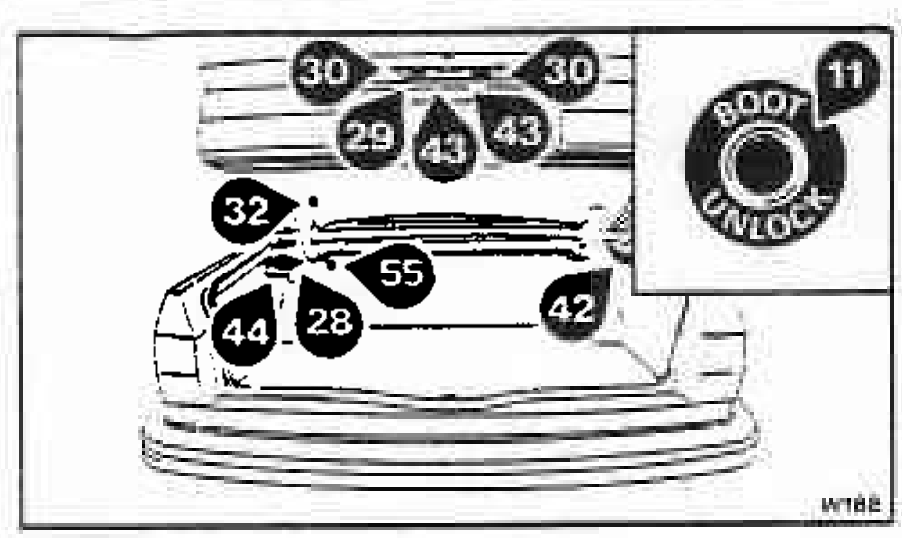
30
30
29
43
43
32
55
44
28
42
11
BOOT
UNLOCK
W188

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Turbo R

Right-hand drive cars

Wiring diagram

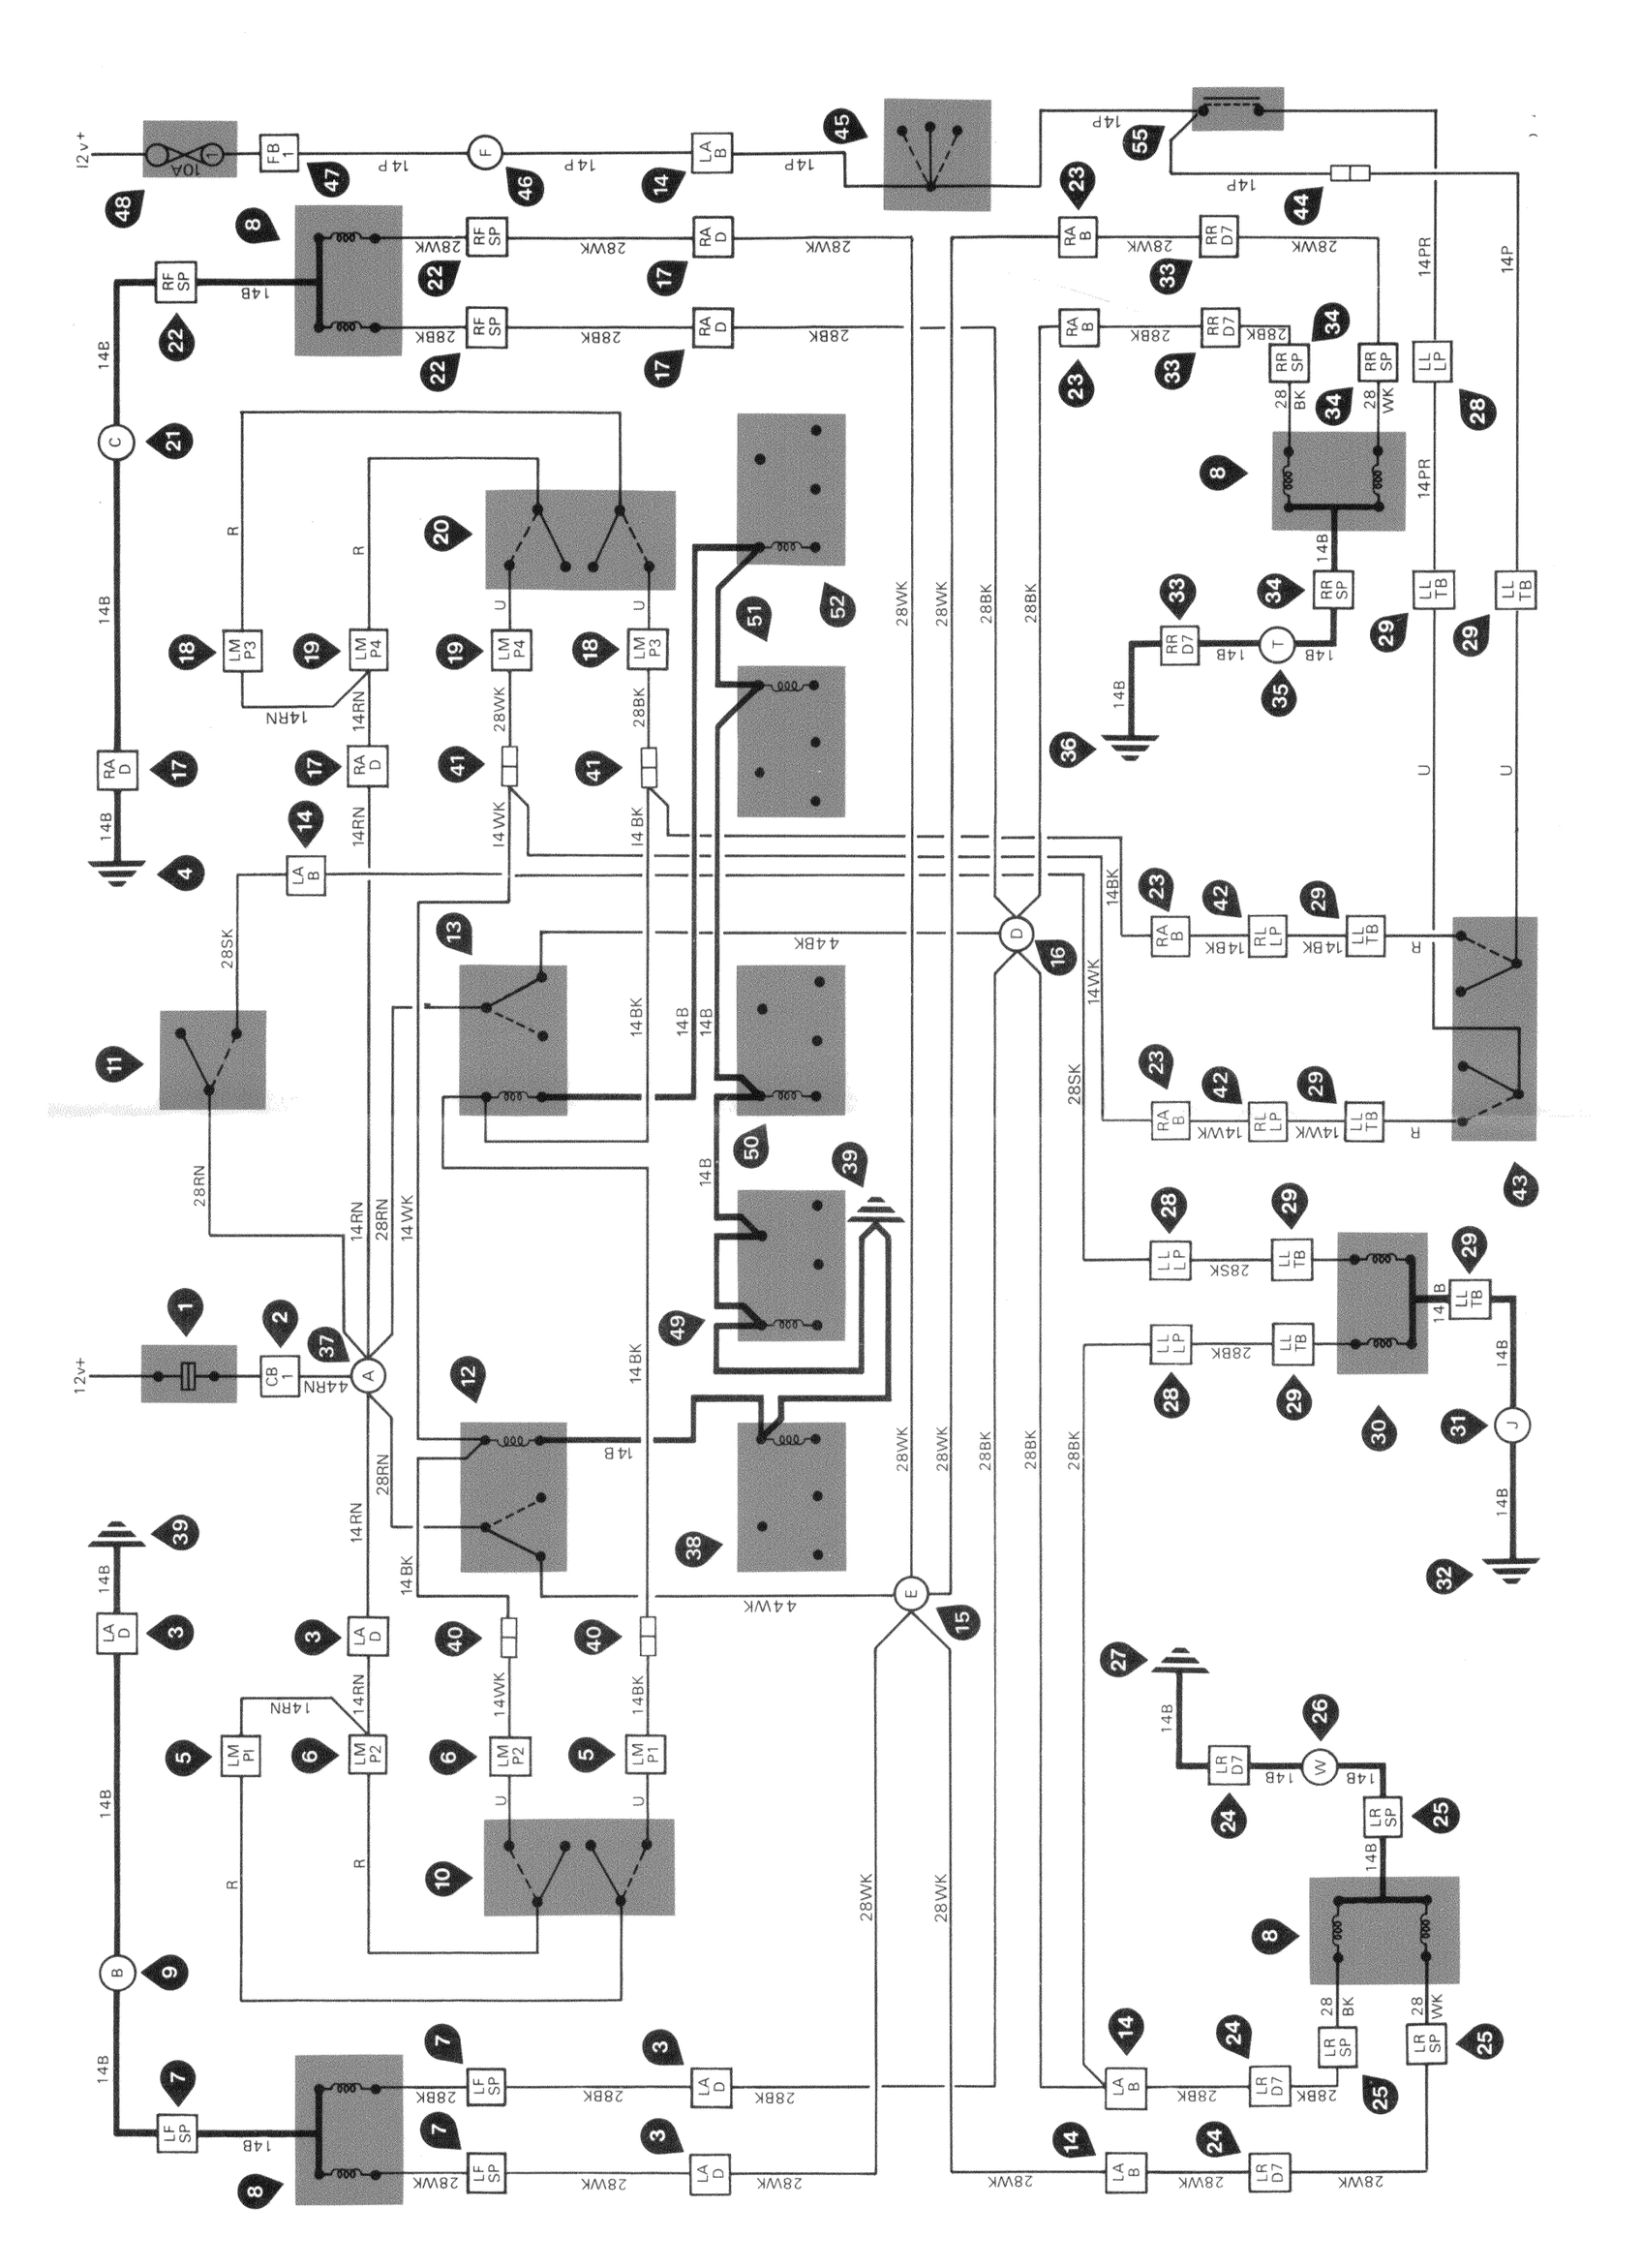
12v+
10A
FB 1
F
LA B
RF SP
RA D
RA B
RR D7
RR SP
LL LP
LL TB
LM P3
LM P4
LM P1
LM P2
LA D
LF SP
LR D7
LR SP
RL LP
CB 1
14B
14P
14PR
14RN
14RB
14BK
14WK
28WK
28BK
28SK
28RN
44RN
44BK
44WK
R
U

Centralized door locking system

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Turbo R

Left-hand drive cars
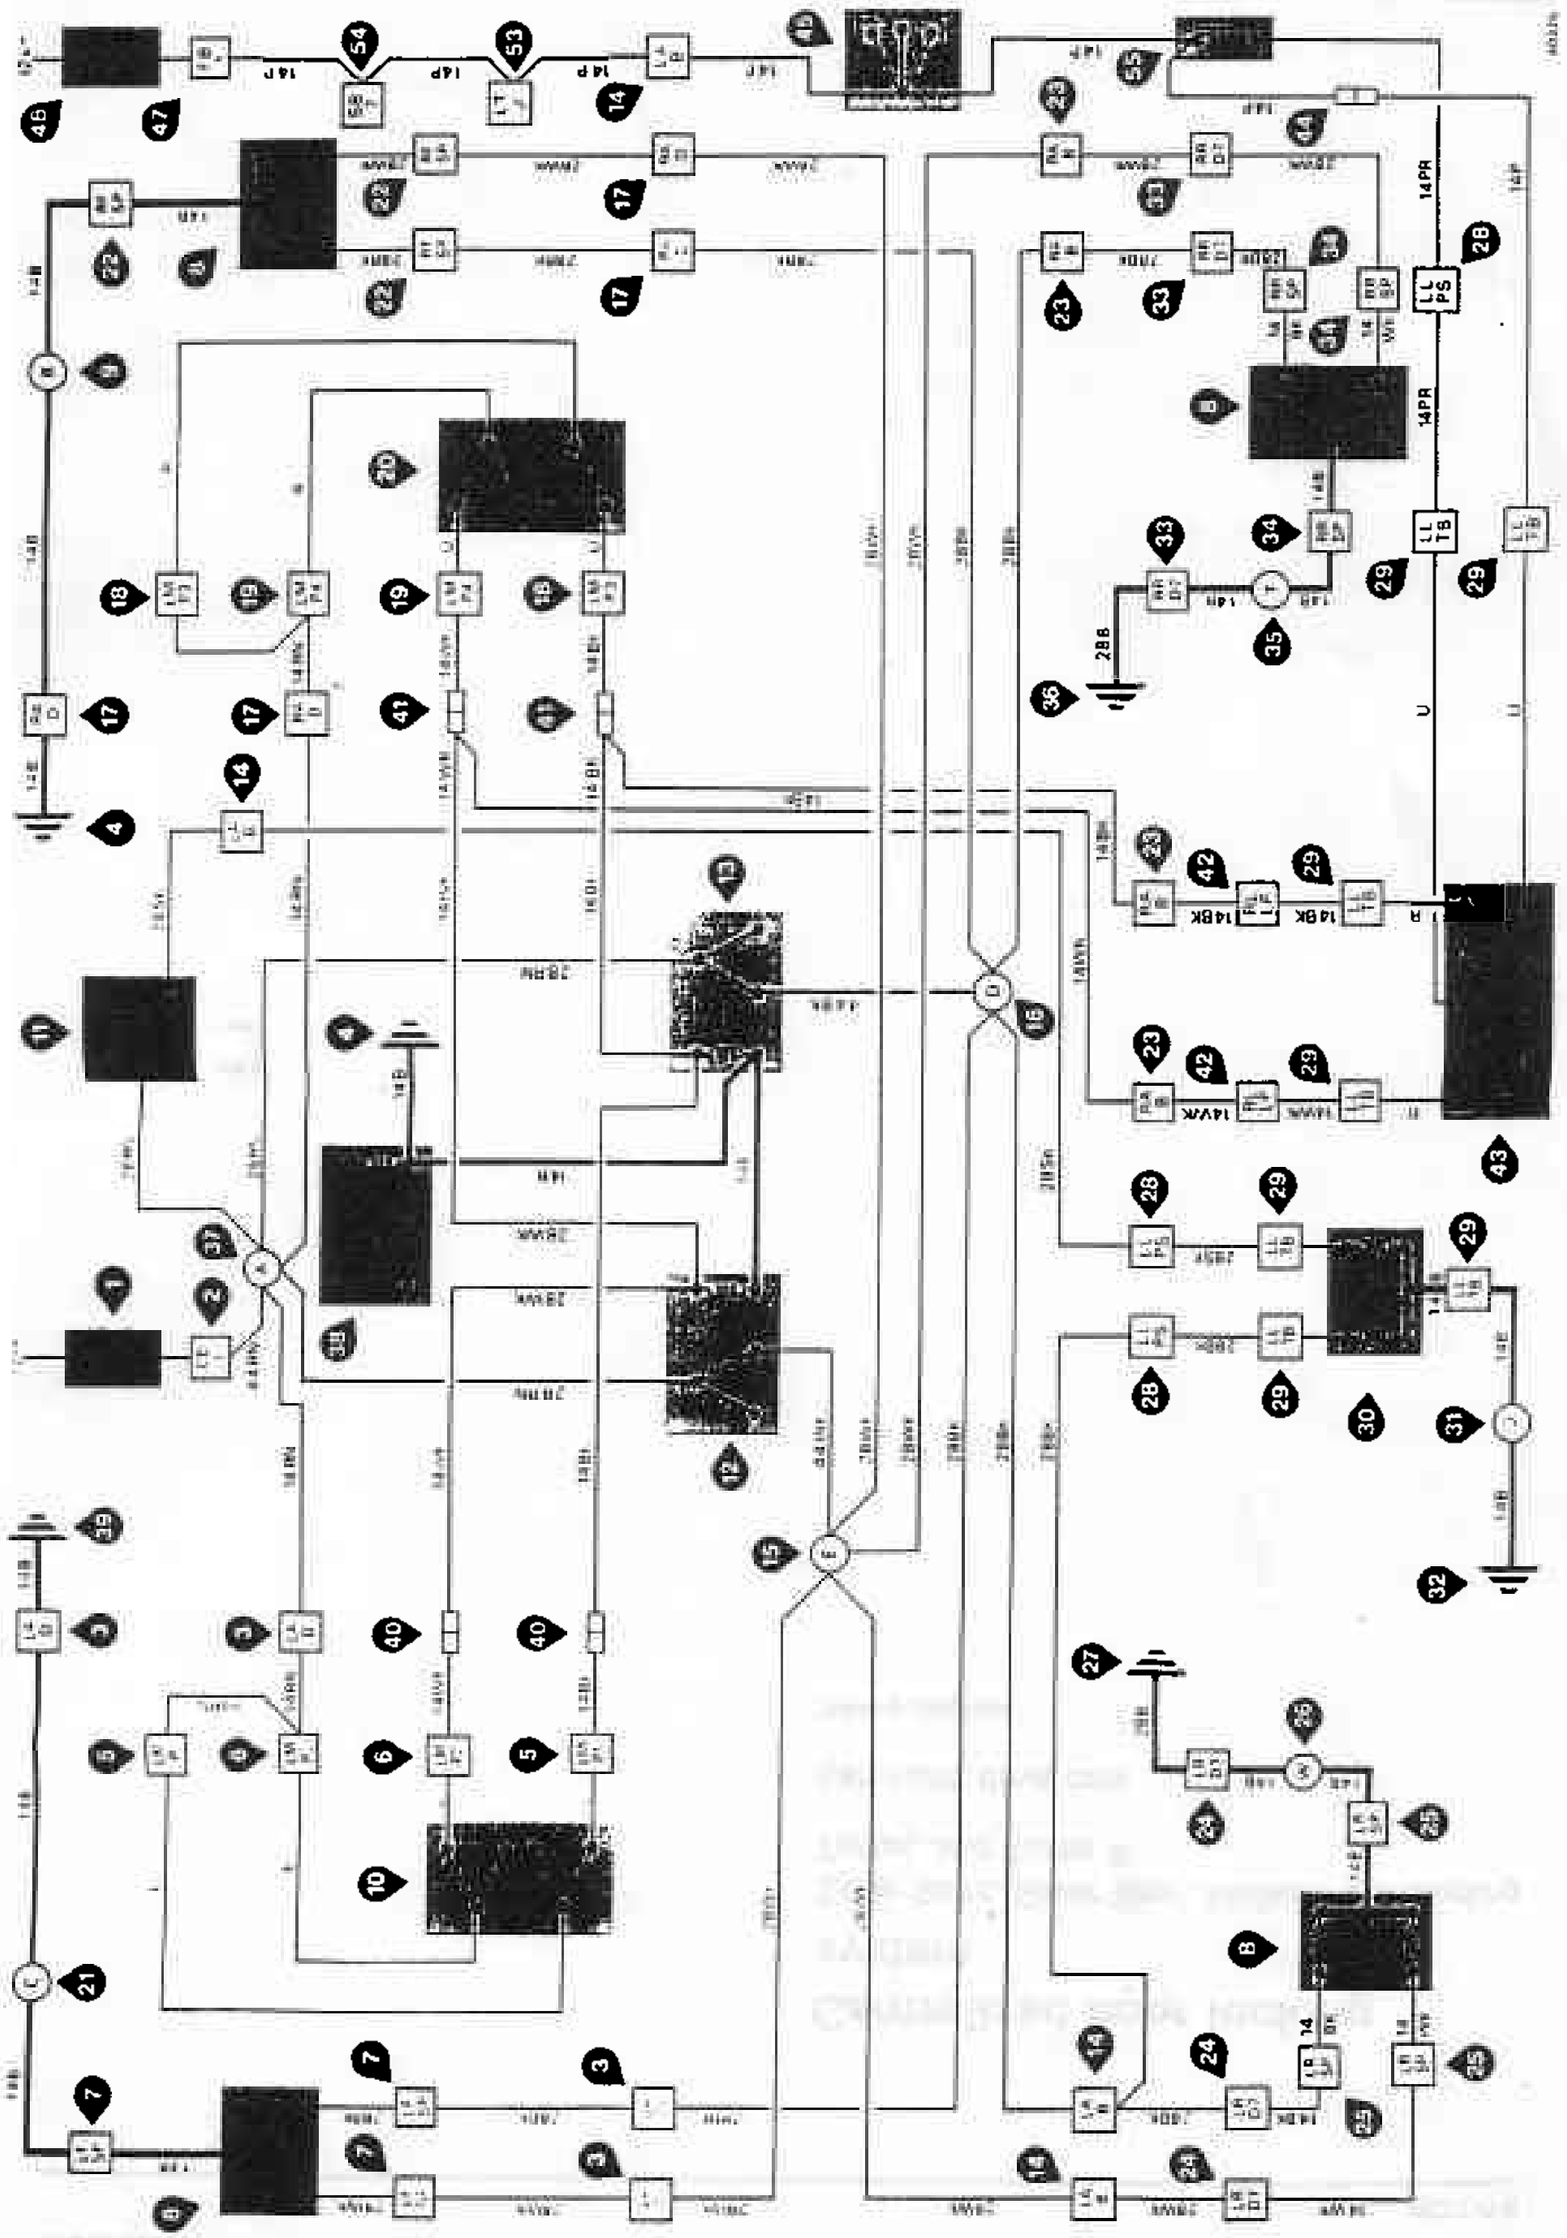
Wiring diagram