Window lifts and division glass lift

Contents

Pages

	Silver Spirit Mulsanne	Silver Spur	Mulsanne Turbo	Bentley Eight	Bentley Turbo R	Corniche/ Continental
Cars other than those fitted with a rear windows isolation switch						
Right-hand drive cars						
Component location	M22-3	M22-3	M22-3	—	—	M22-3
Wiring diagram	M22-5	M22-5	M22-5	—	—	M22-5
Right-hand drive cars with the window lifts wired through the ignition system						
Component location	M22-3	M22-3	M22-3	—	—	M22-3
Wiring diagram	M22-7	M22-7	M22-7	—	—	M22-7
Left-hand drive cars						
Component location	M22-9	M22-9	M22-9	—	—	M22-9
Wiring diagram	M22-11	M22-11	M22-11	—	—	M22-11
Left-hand drive cars with the window lifts wired through the ignition system						
Component location	M22-9	M22-9	M22-9	—	—	M22-9
Wiring diagram	M22-13	M22-13	M22-13	—	—	M22-13
Cars fitted with a single pole rear windows isolation switch						
Right-hand drive cars						
Component location	—	—	—	—	—	M22-15
Wiring diagram	—	—	—	—	—	M22-17
Left-hand drive cars						
Component location	M22-19	M22-19	M22-19	—	—	M22-19 or M22-31
Wiring diagram	M22-21	M22-21	M22-21	—	—	M22-21 or M22-33
Cars fitted with a double pole rear windows isolation switch						
Right-hand drive cars						
Component location	M22-23	M22-23	M22-23	M22-23	M22-23	—
Wiring diagram	M22-25	M22-25	M22-25	M22-25	M22-25	—
Left-hand drive cars						
Component location	M22-27	M22-27	M22-27	M22-27	M22-27	—
Wiring diagram	M22-29	M22-29	M22-29	M22-29	M22-29	—
Division glass lift						
Component location	—	M22-35	—	—	—	—
Wiring diagram	—	M22-37	—	—	—	—

Rolls-Royce

Silver Spirit – Silver Spur – Corniche – Camargue

Bentley

Mulsanne – Mulsanne Turbo – Turbo R – Continental

Chassis 1001 to 27998

Electrically Operated Window Lifts

Universal Schematic

Note: exact schematics vary dependent upon specific vehicle specifications, model years and country requirements

This schematic also applies to Rolls-Royce Silver Shadow and Bentley T-Series cars from Chassis SBH 13754

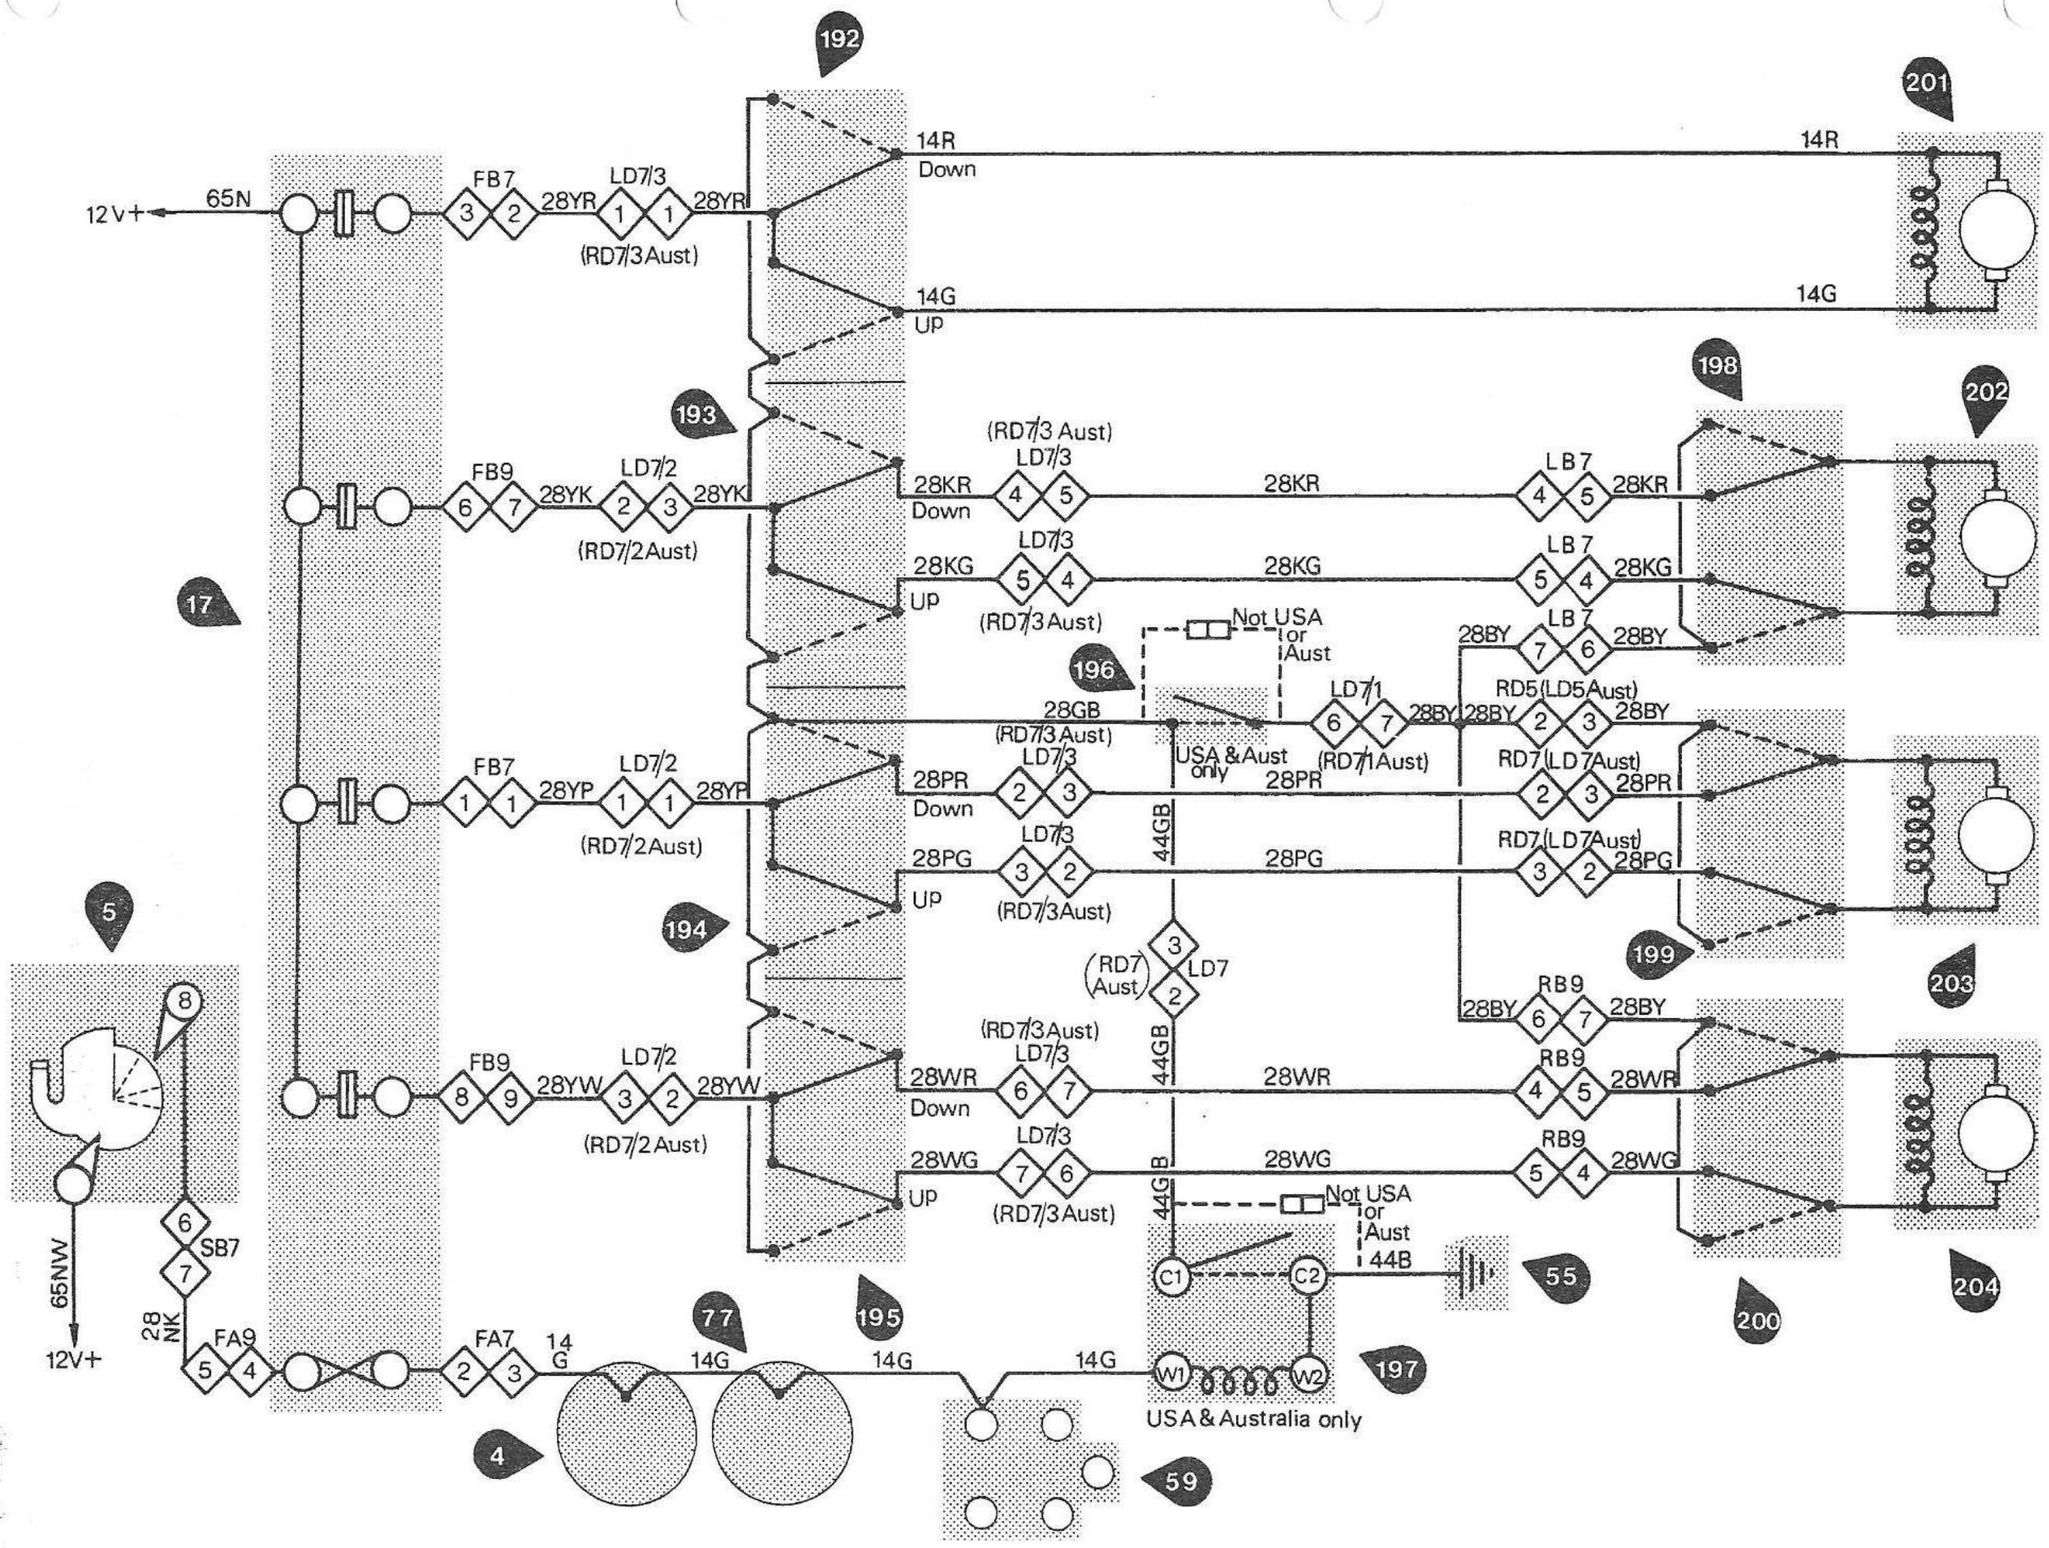
12V+
65N
FB7
28YR
LD7/3
(RD7/3Aust)
14R
Down
14G
Up
FB9
28YK
LD7/2
(RD7/2Aust)
28KR
28KG
(RD7/3 Aust)
LB7
Not USA or Aust
28BY
RD5(LD5Aust)
28GB
USA & Aust only
LD7/1
(RD7/1Aust)
RD7(LD7Aust)
28PR
28PG
44GB
RD7 (Aust)
LD7
RB9
28WR
28WG
44B
C1
C2
W1
W2
USA & Australia only
FA9
FA7
14 G
SB7
28 NK
65NW
12V+

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Component location

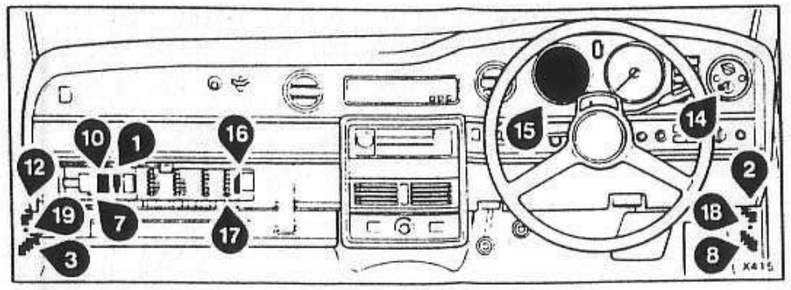
10
1
16
12
19
7
17
3
15
14
2
18
8
X415

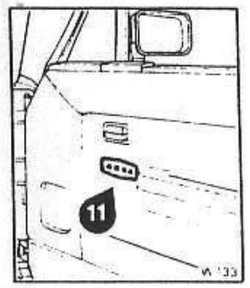
11
W133

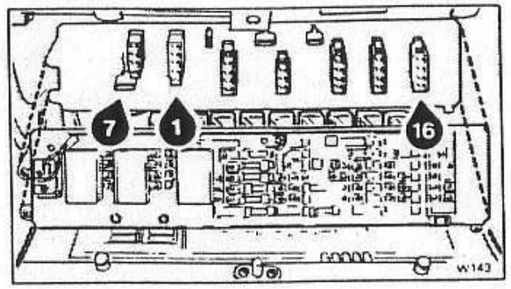
7
1
16
W143

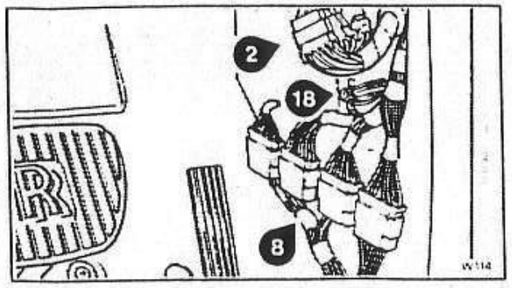
2
18
8
W114

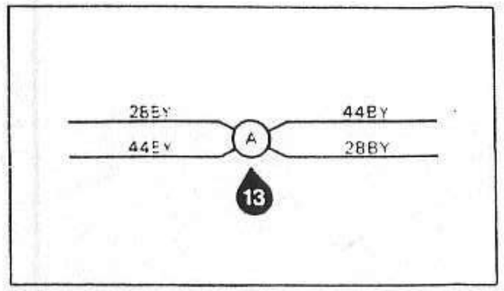
26BY
44BY
A
44BY
28BY
13

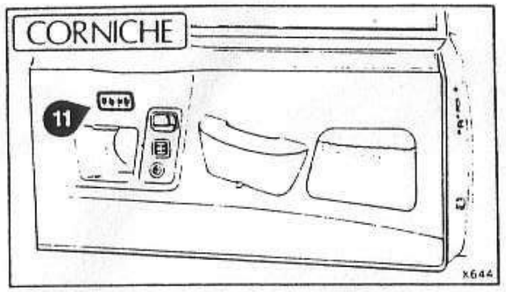
CORNICHE
11
X644

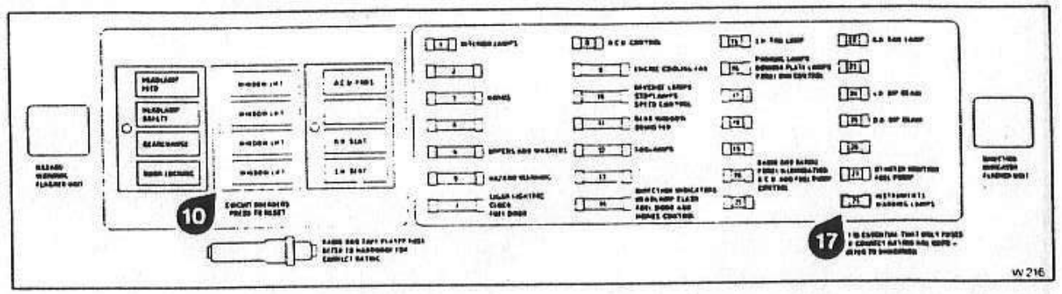
10
17
W216

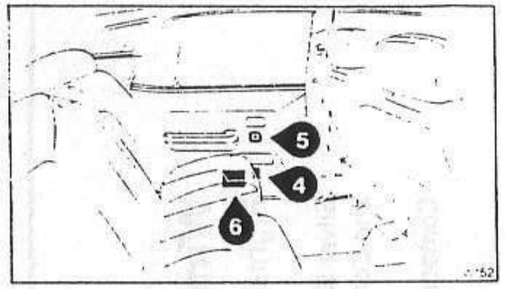
5
4
6

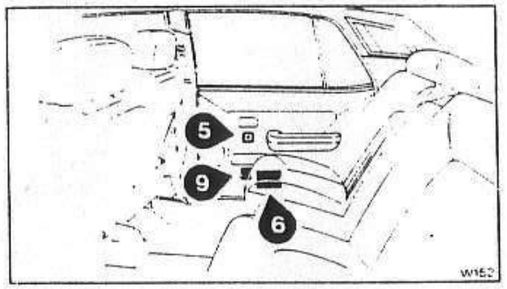
5
9
6
W152

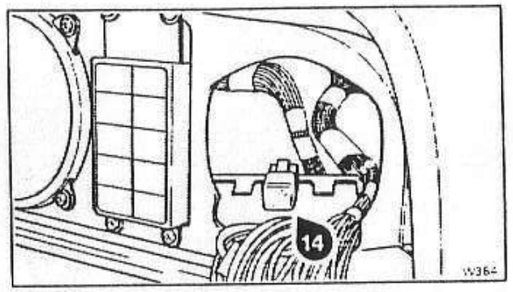
14
W364

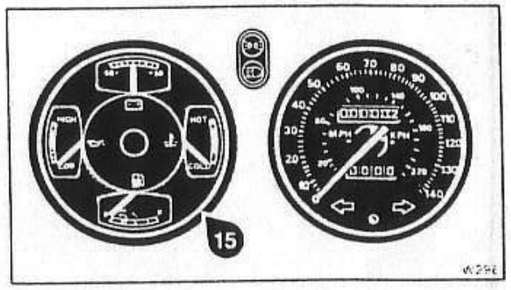
15

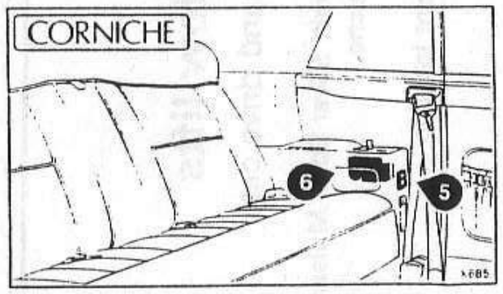
CORNICHE
6
5
X685

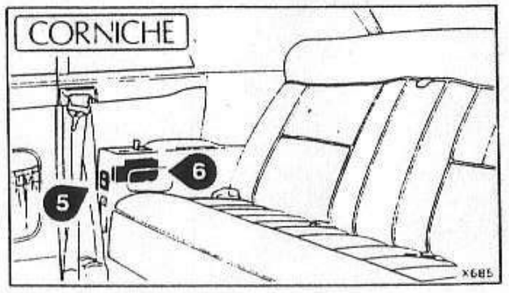
CORNICHE
5
6
X685

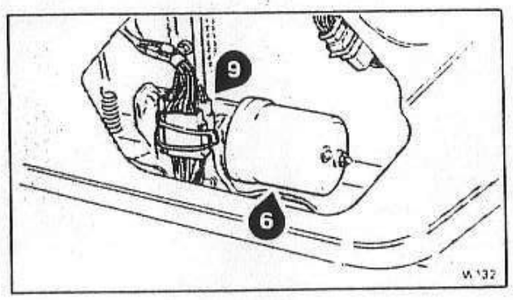
9
6
W132

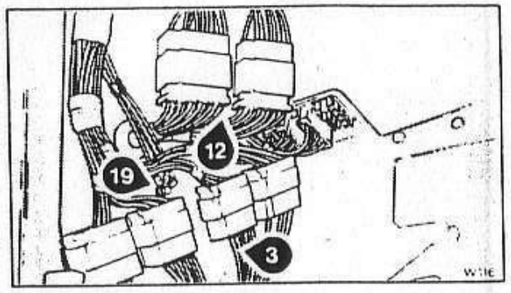
19
12
3
W116

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Wiring diagram

For cars with the window lifts wired through the ignition system refer to the wiring diagram on page M22-7

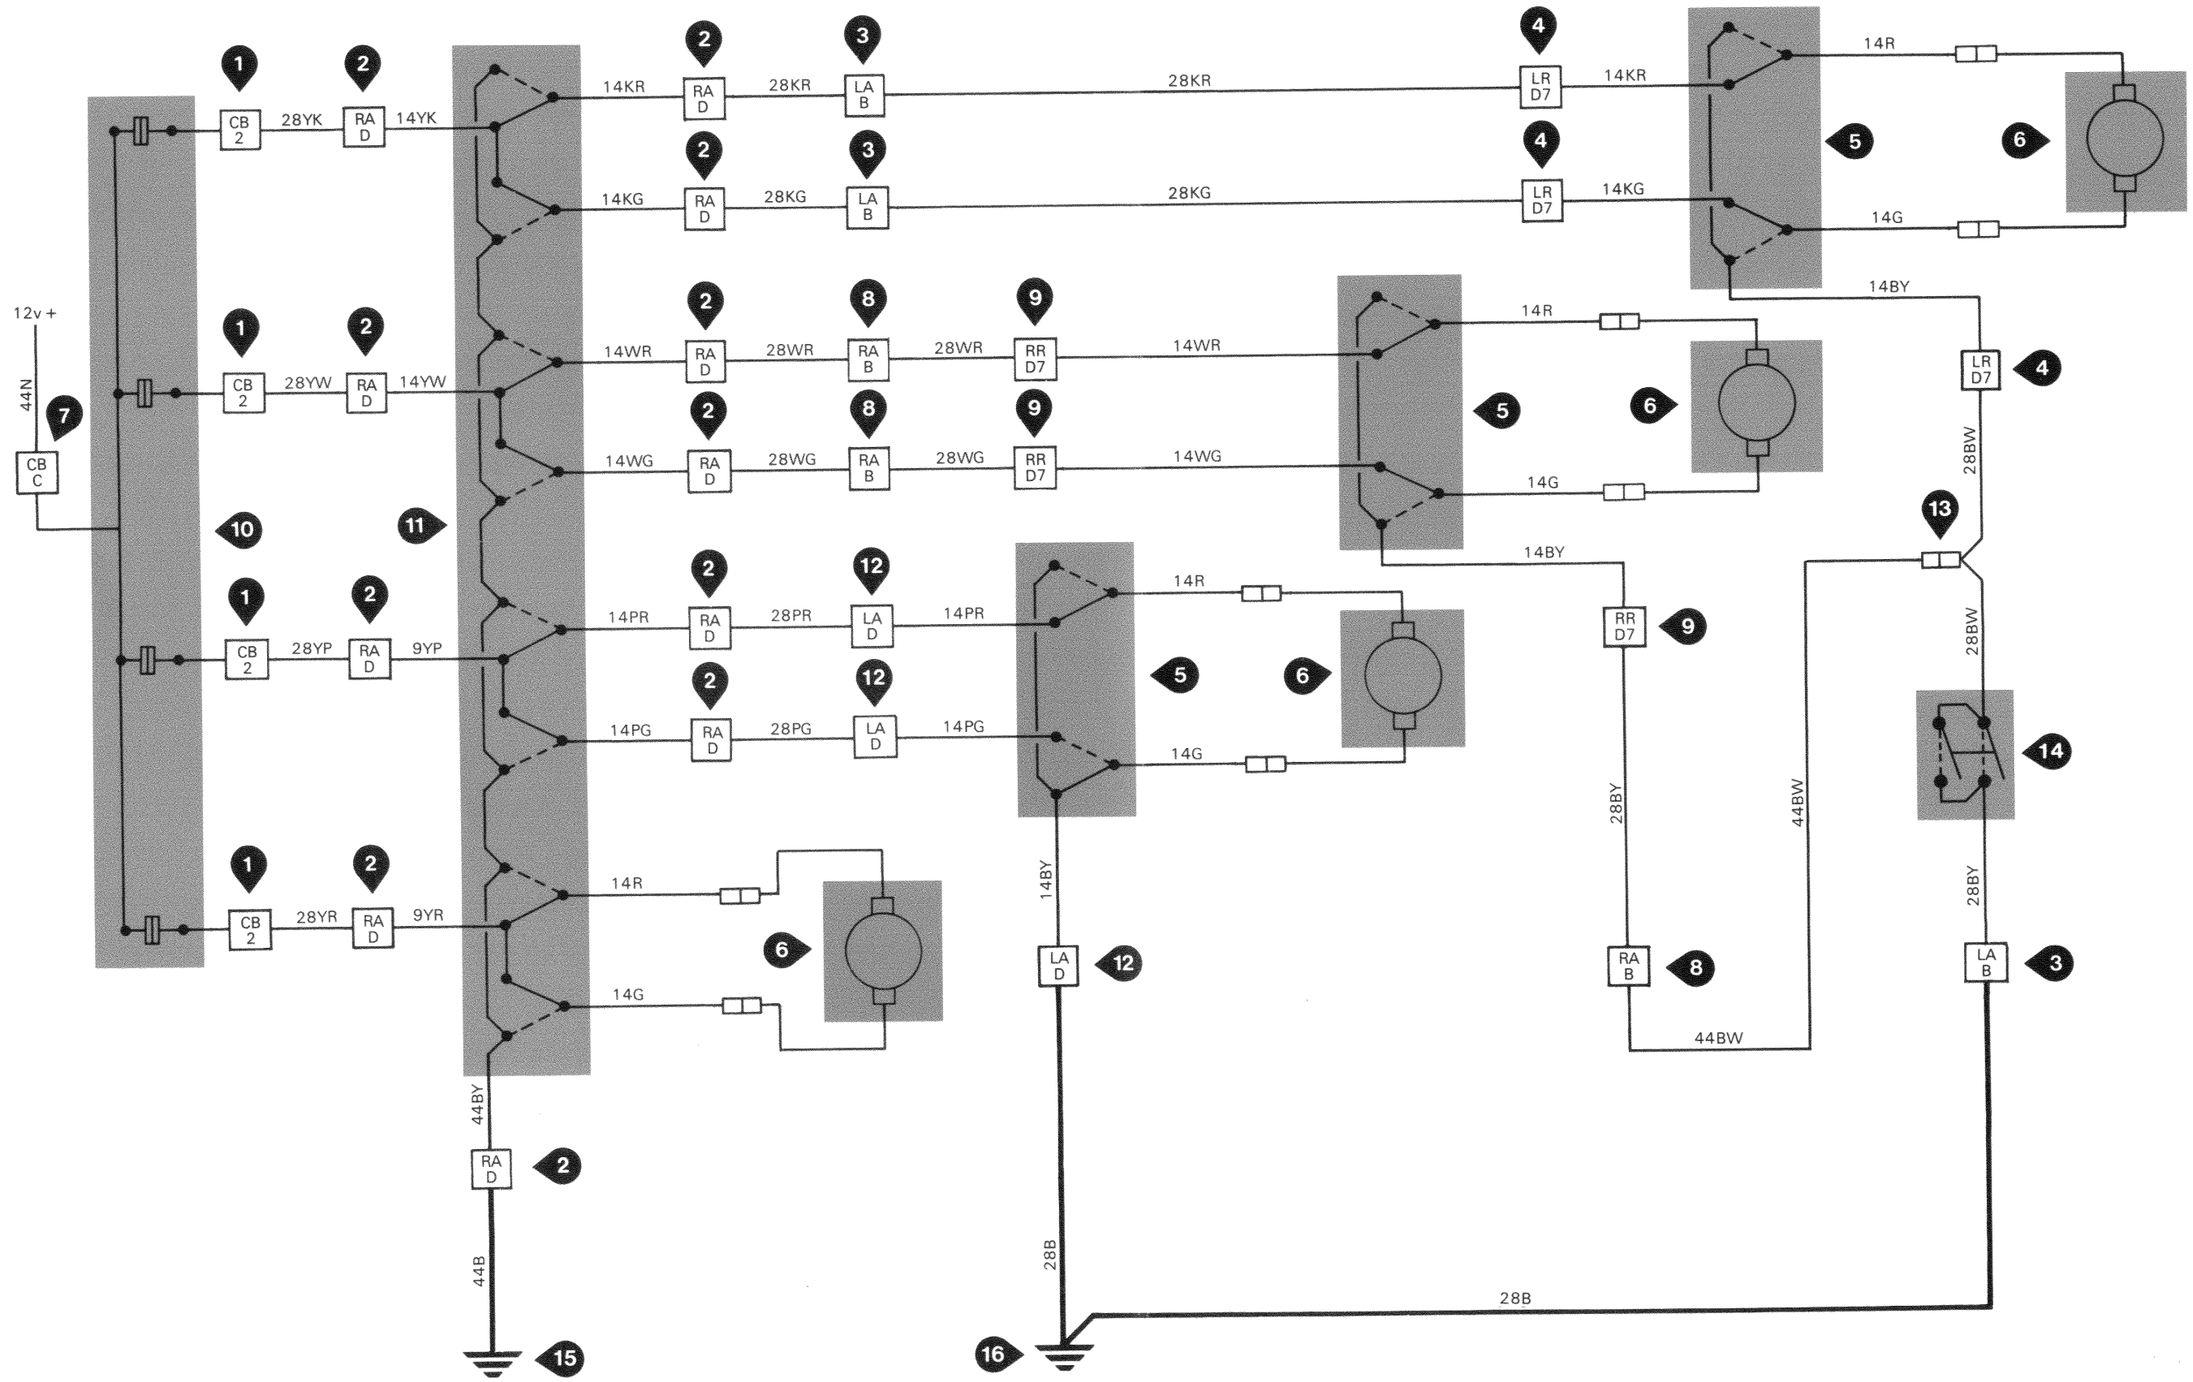
12v +
44N
CB C
CB 2
28YK
RA D
14YK
14KR
28KR
LA B
LR D7
14KG
28KG
14WR
28WR
RA B
RR D7
14WG
28WG
28YW
14YW
14PR
28PR
LA D
14PG
28PG
28YP
9YP
28YR
9YR
44BY
44B
14R
14G
14BY
28BW
44BW
28BY
28B

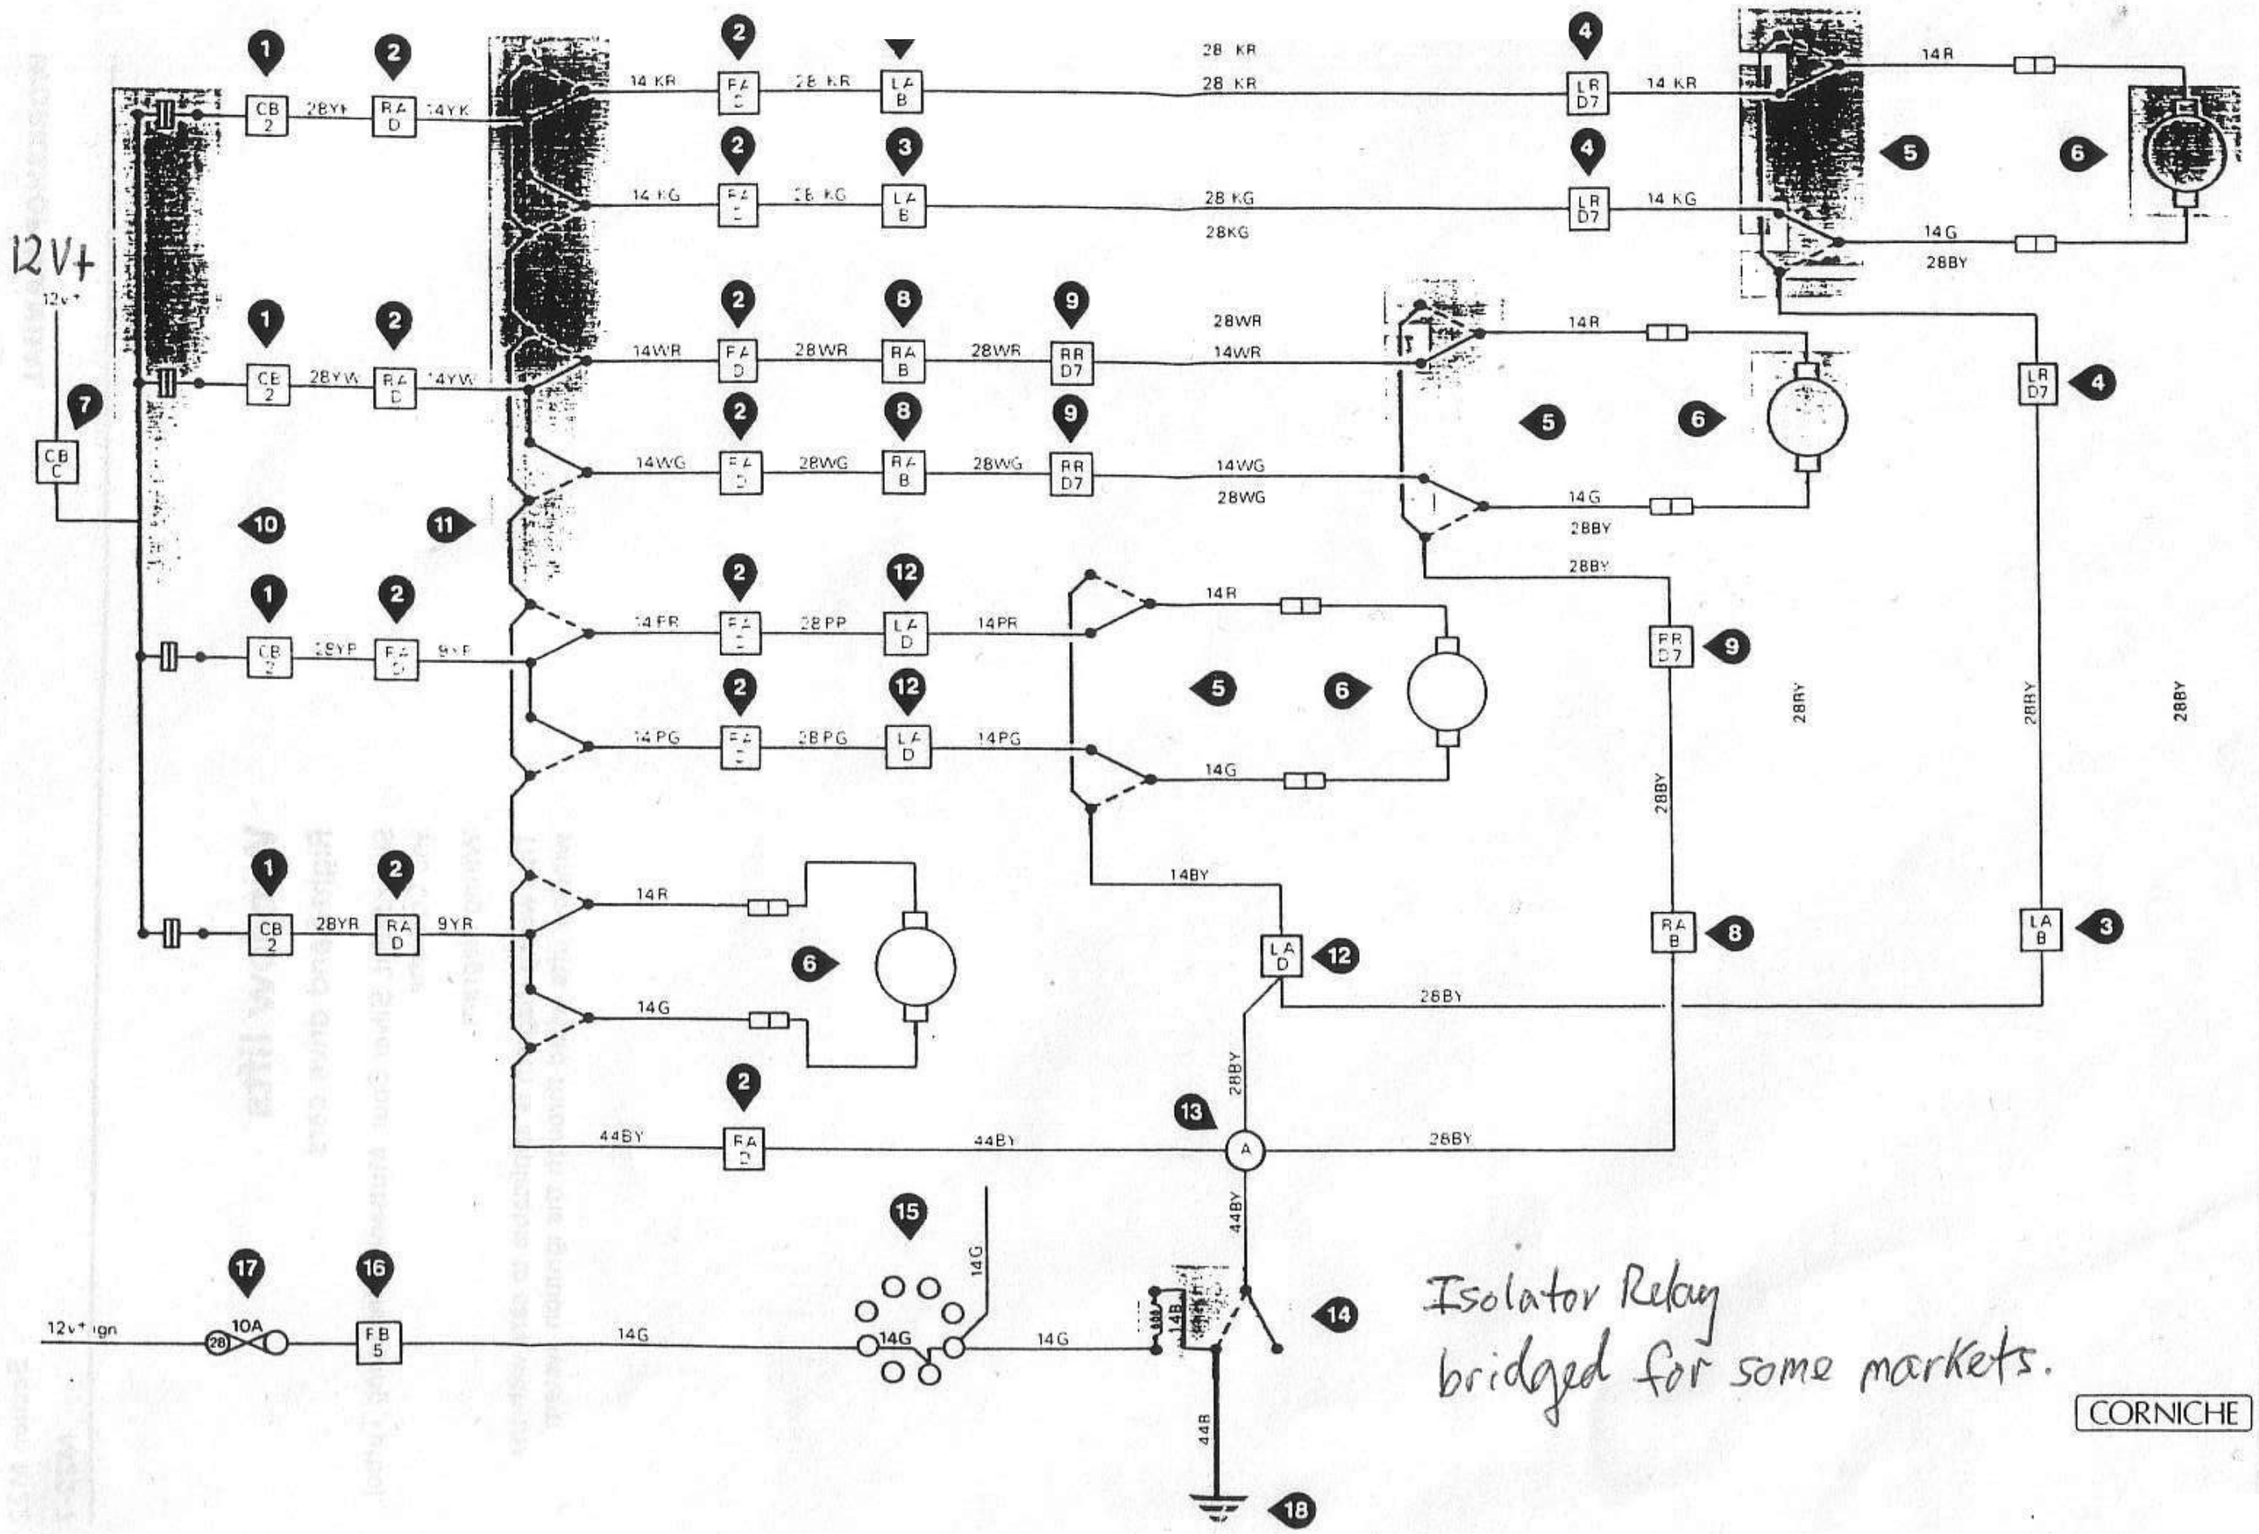
12V+
12v+
CB C
CB 2
RA D
FA D
LA B
LR D7
RR D7
RA B
LA D
FB 5
28YY
14YK
14KR
28KR
14KG
28KG
14WR
28WR
14WG
28WG
14PR
28PP
14PG
28PG
28YR
9YR
14R
14G
28BY
44BY
14BY
44B
12v+ ign
10A
28
A
Isolator Relay
bridged for some markets.
CORNICHE

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Wiring diagram

This wiring diagram is applicable to cars with the window lifts wired through the ignition system

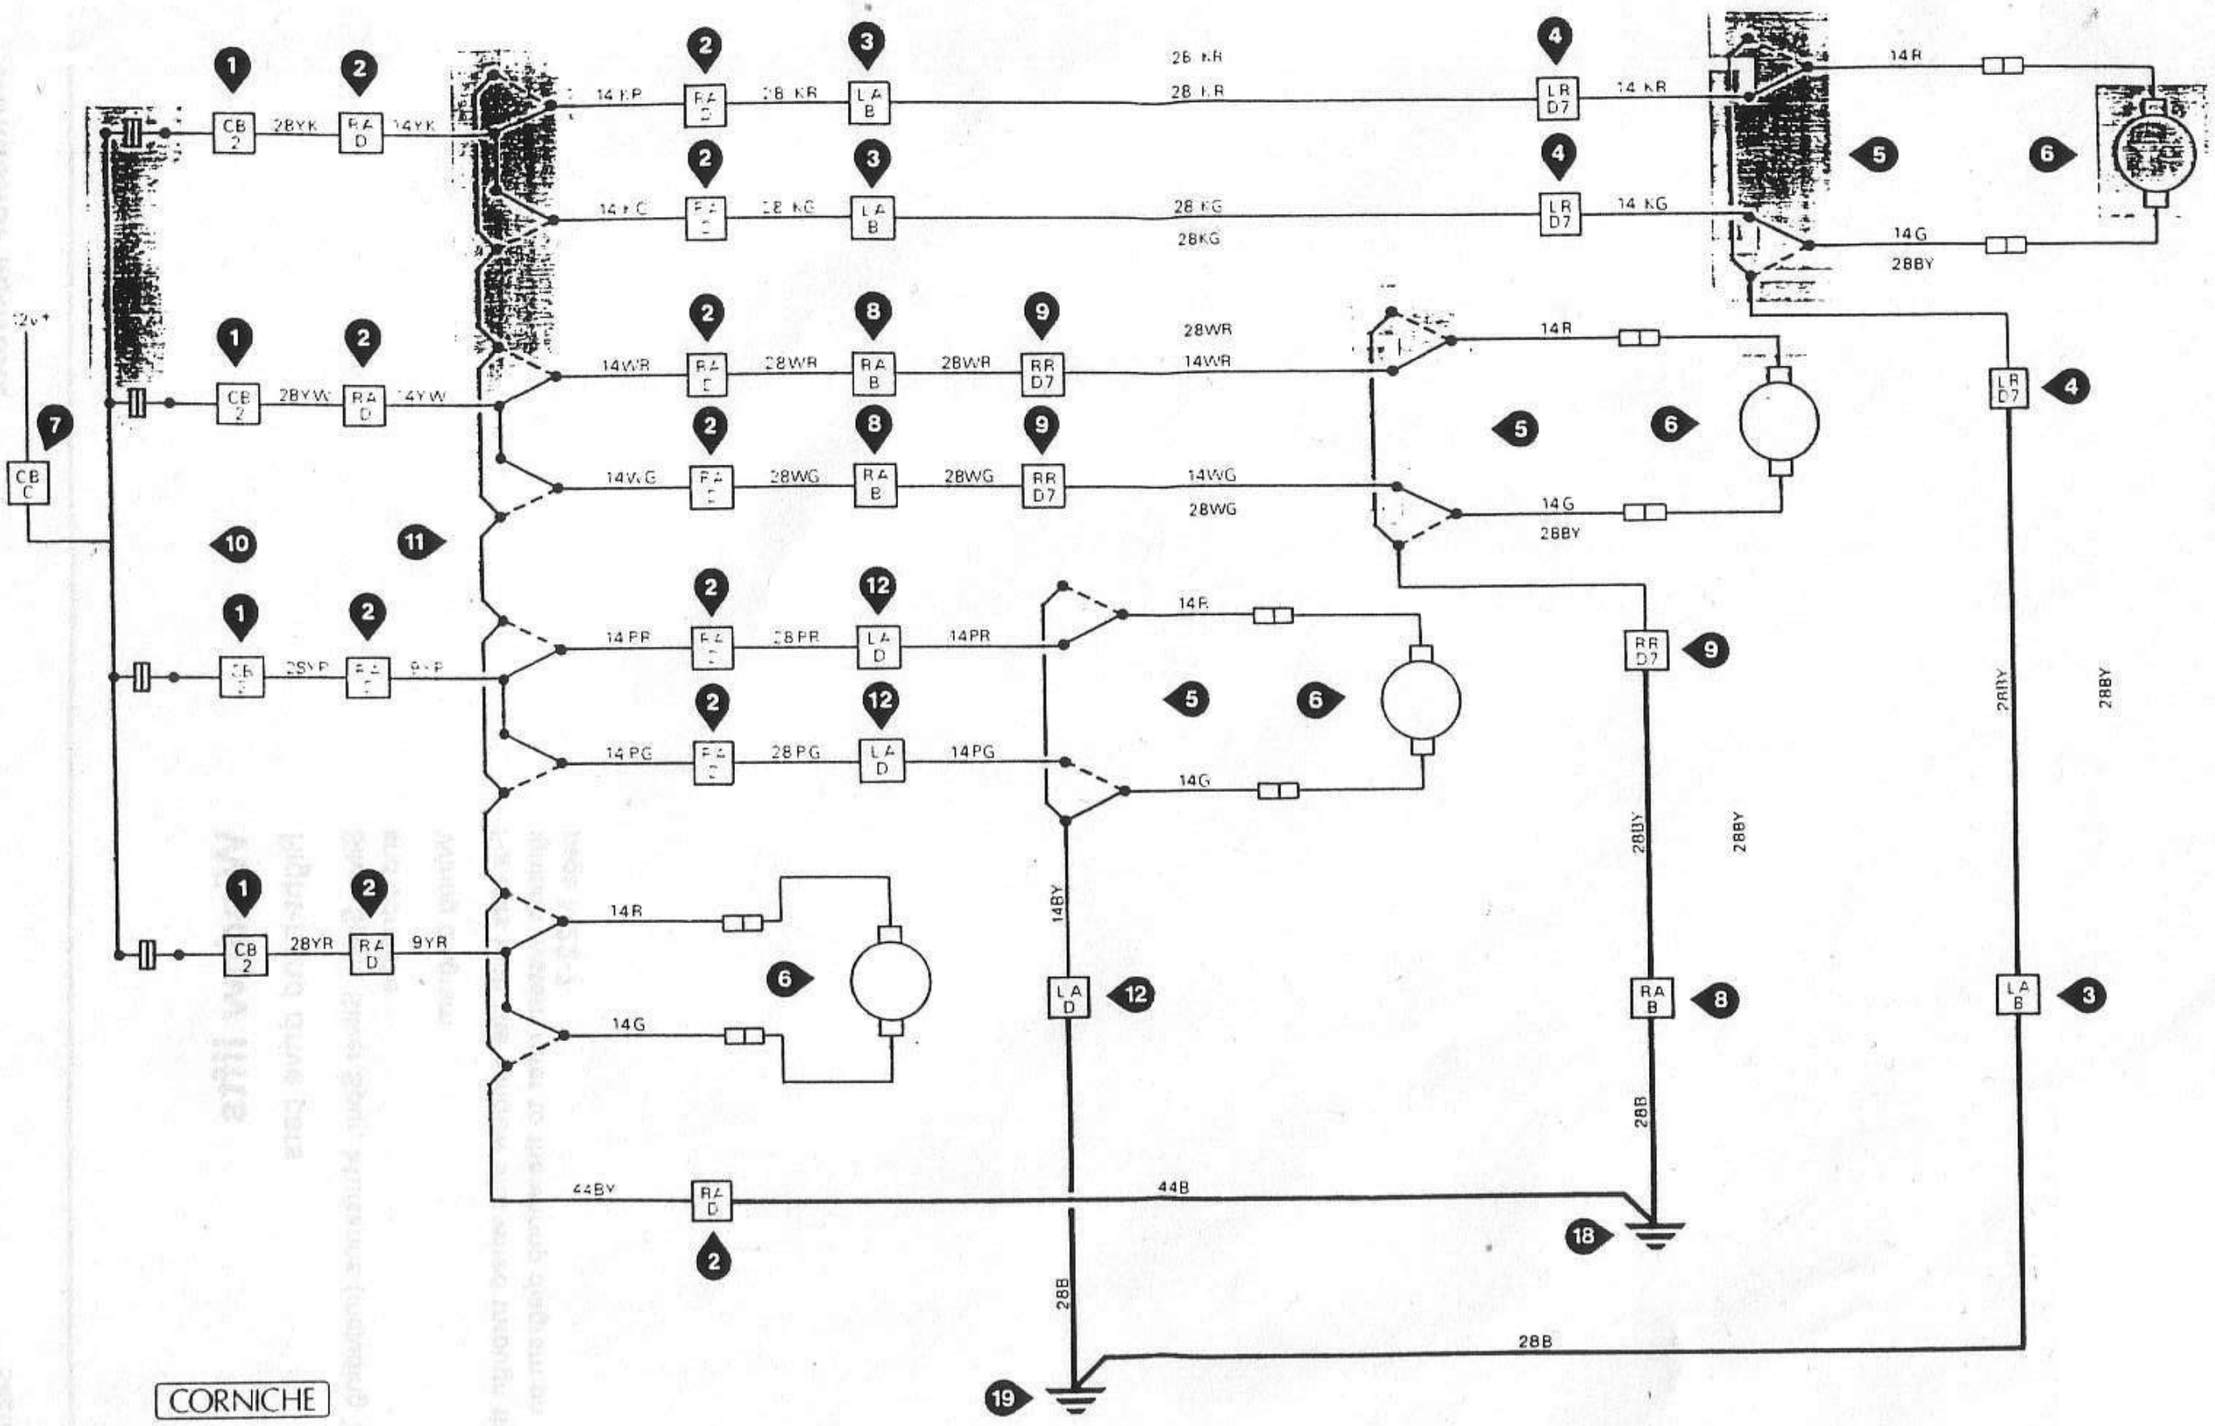
CORNICHE
12v+
CB C
CB 2
RA D
RA B
RR D7
LR D7
LA B
LA D
28YK
14YK
14KP
28KR
28KG
14KG
14R
14G
28BY
14YW
28YW
14WR
28WR
14WG
28WG
14PR
28PR
14PG
28PG
28YR
9YR
44BY
44B
28B
14BY
28UY

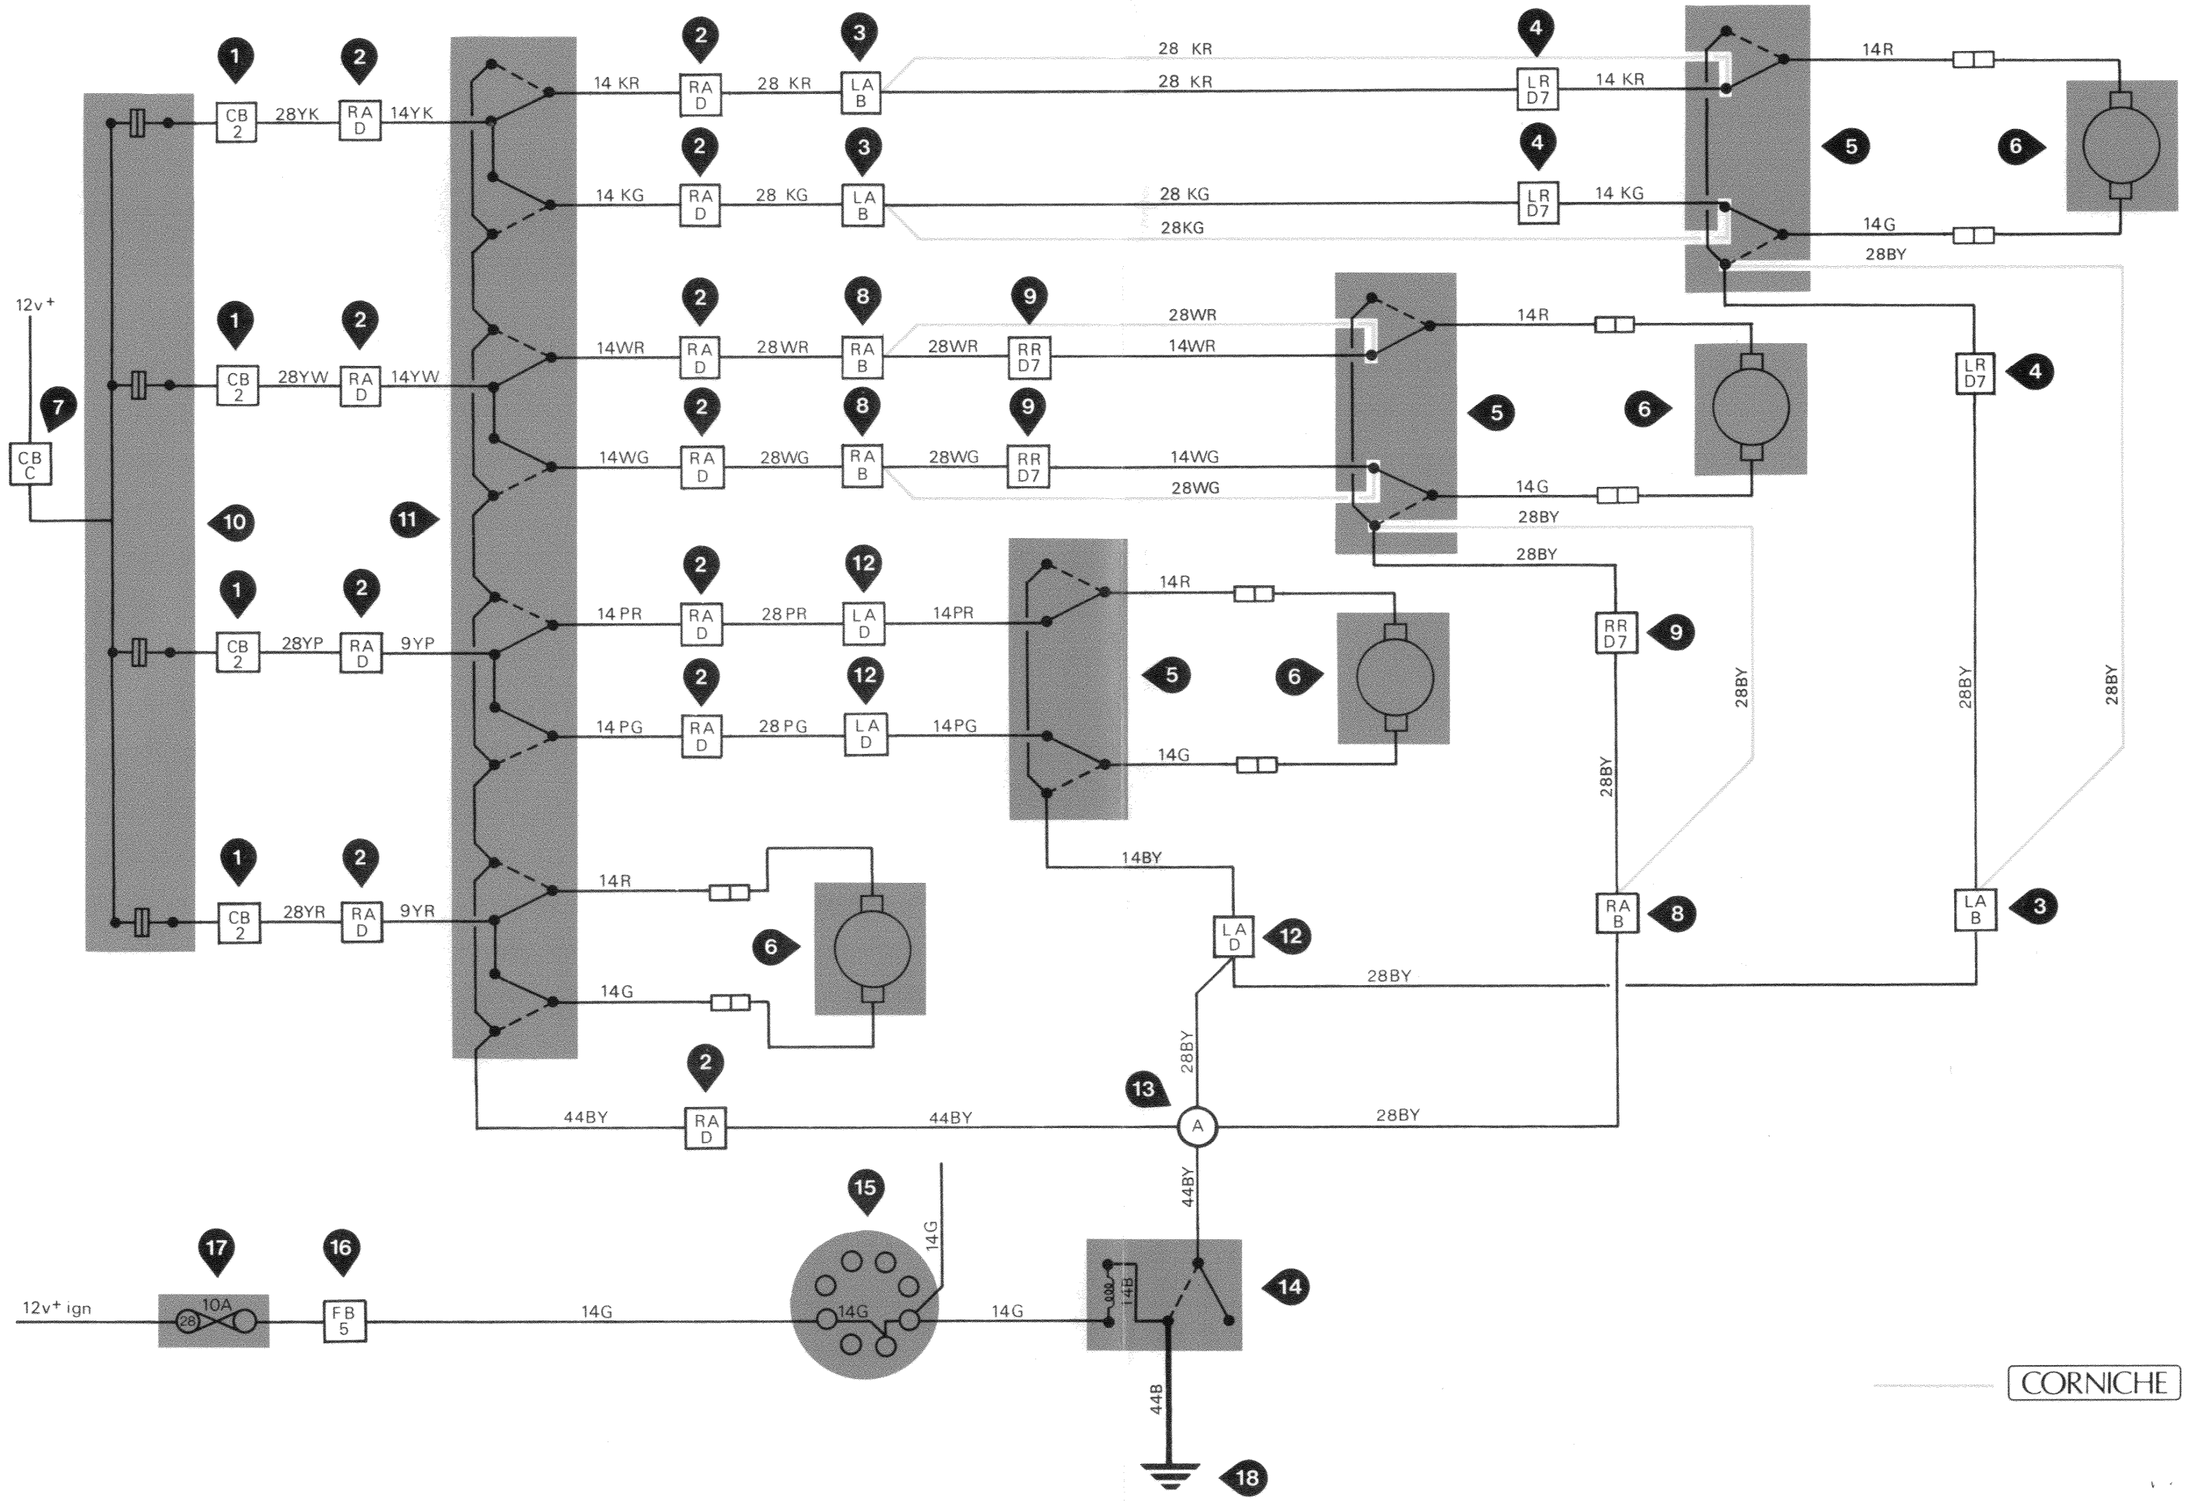
12v+
CB C
CB 2
28YK
RA D
14YK
14 KR
28 KR
LA B
LR D7
14 KG
28 KG
28KG
14R
14G
28BY
28WR
14WR
RR D7
28WG
14WG
14PR
28PR
14PG
28PG
9YP
28YP
28YW
14YW
28YR
9YR
44BY
44B
14BY
A
12v+ ign
10A
FB 5

CORNICHE

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Component location

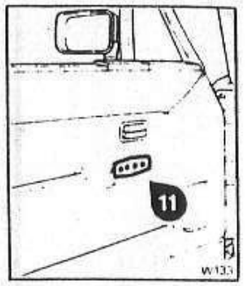
11
W133

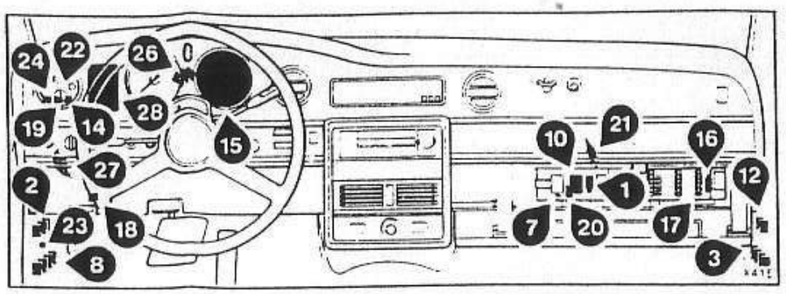
24
22
26
19
14
28
15
21
10
16
12
2
27
1
23
18
7
20
17
8
3

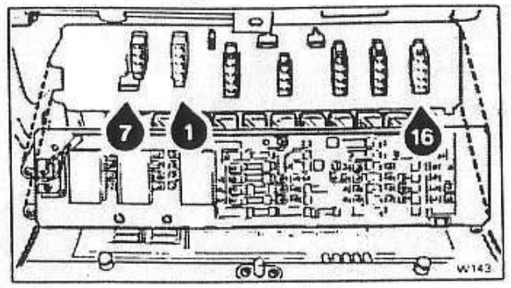
7
1
16
W143

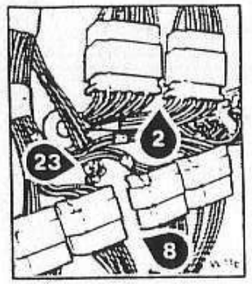
23
2
8

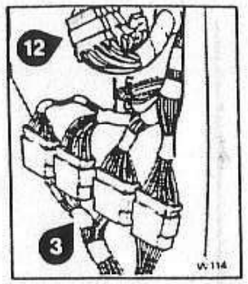
12
3
W114

CORNICHE
11
X644

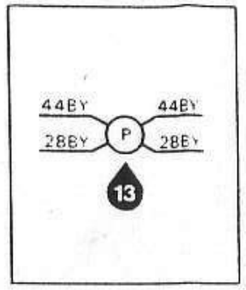
44BY
44BY
28BY
P
28BY
13

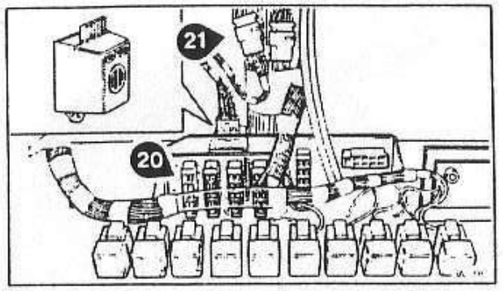
21
20

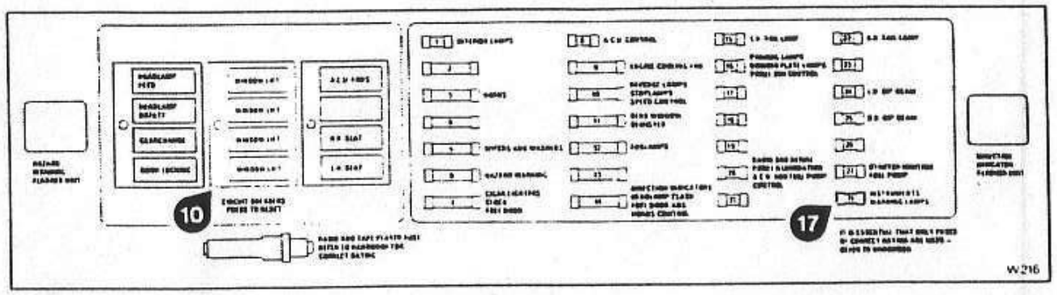
10
17
W216

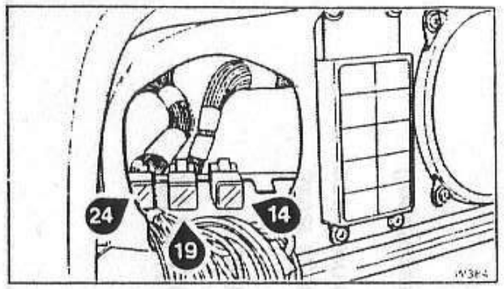
24
19
14
W384

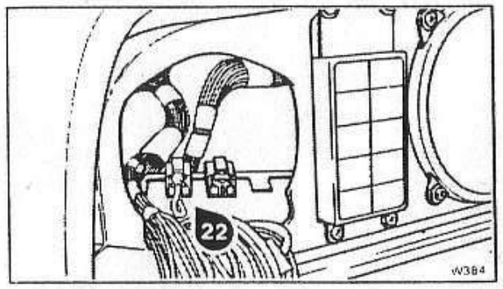
22
W384

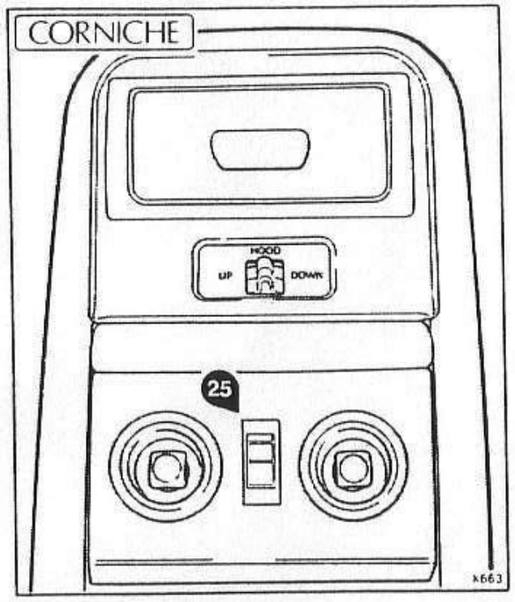
CORNICHE
HOOD
UP
DOWN
25
X663

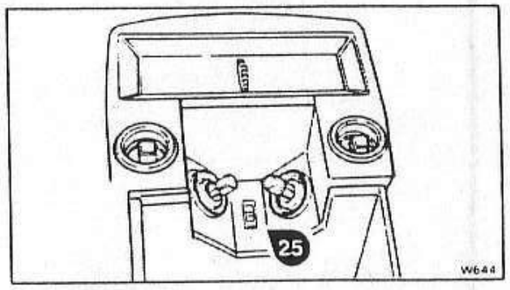
25
W644

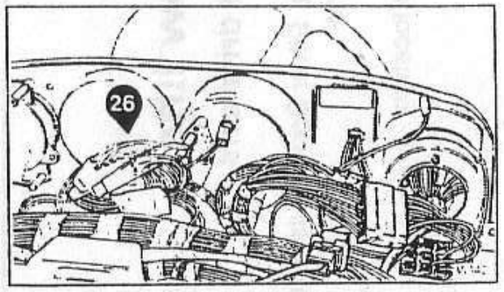
26

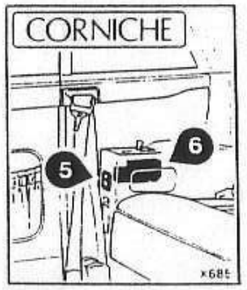
CORNICHE
5
6
X685

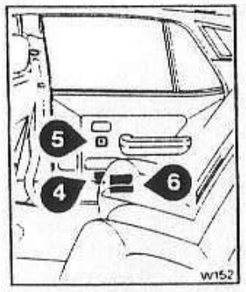
5
4
6
W152

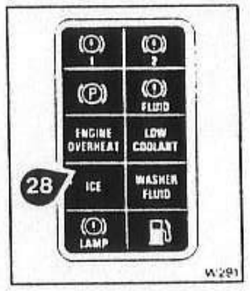
1
2
P
FLUID
ENGINE OVERHEAT
LOW COOLANT
ICE
WASHER FLUID
LAMP
28
W291

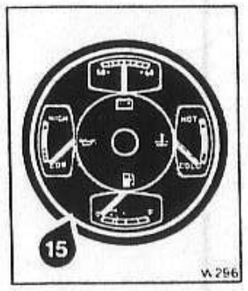
15
W296

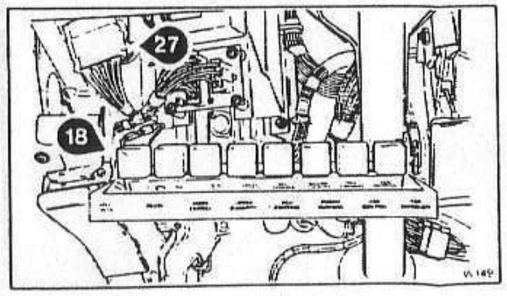
27
18
W149

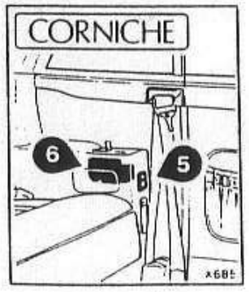
CORNICHE
6
5
X685

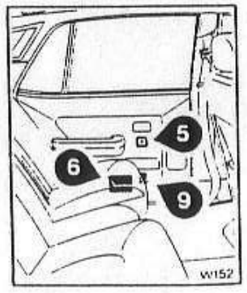
5
6
9
W152

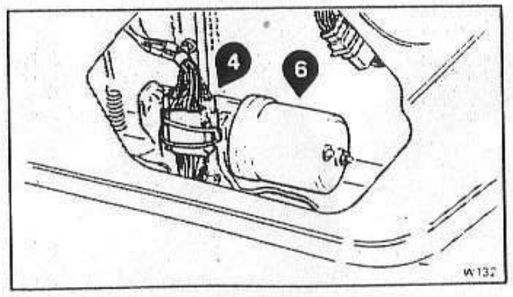
4
6
W132

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Wiring diagram

This wiring diagram is applicable to cars with the window lifts wired through the ignition system

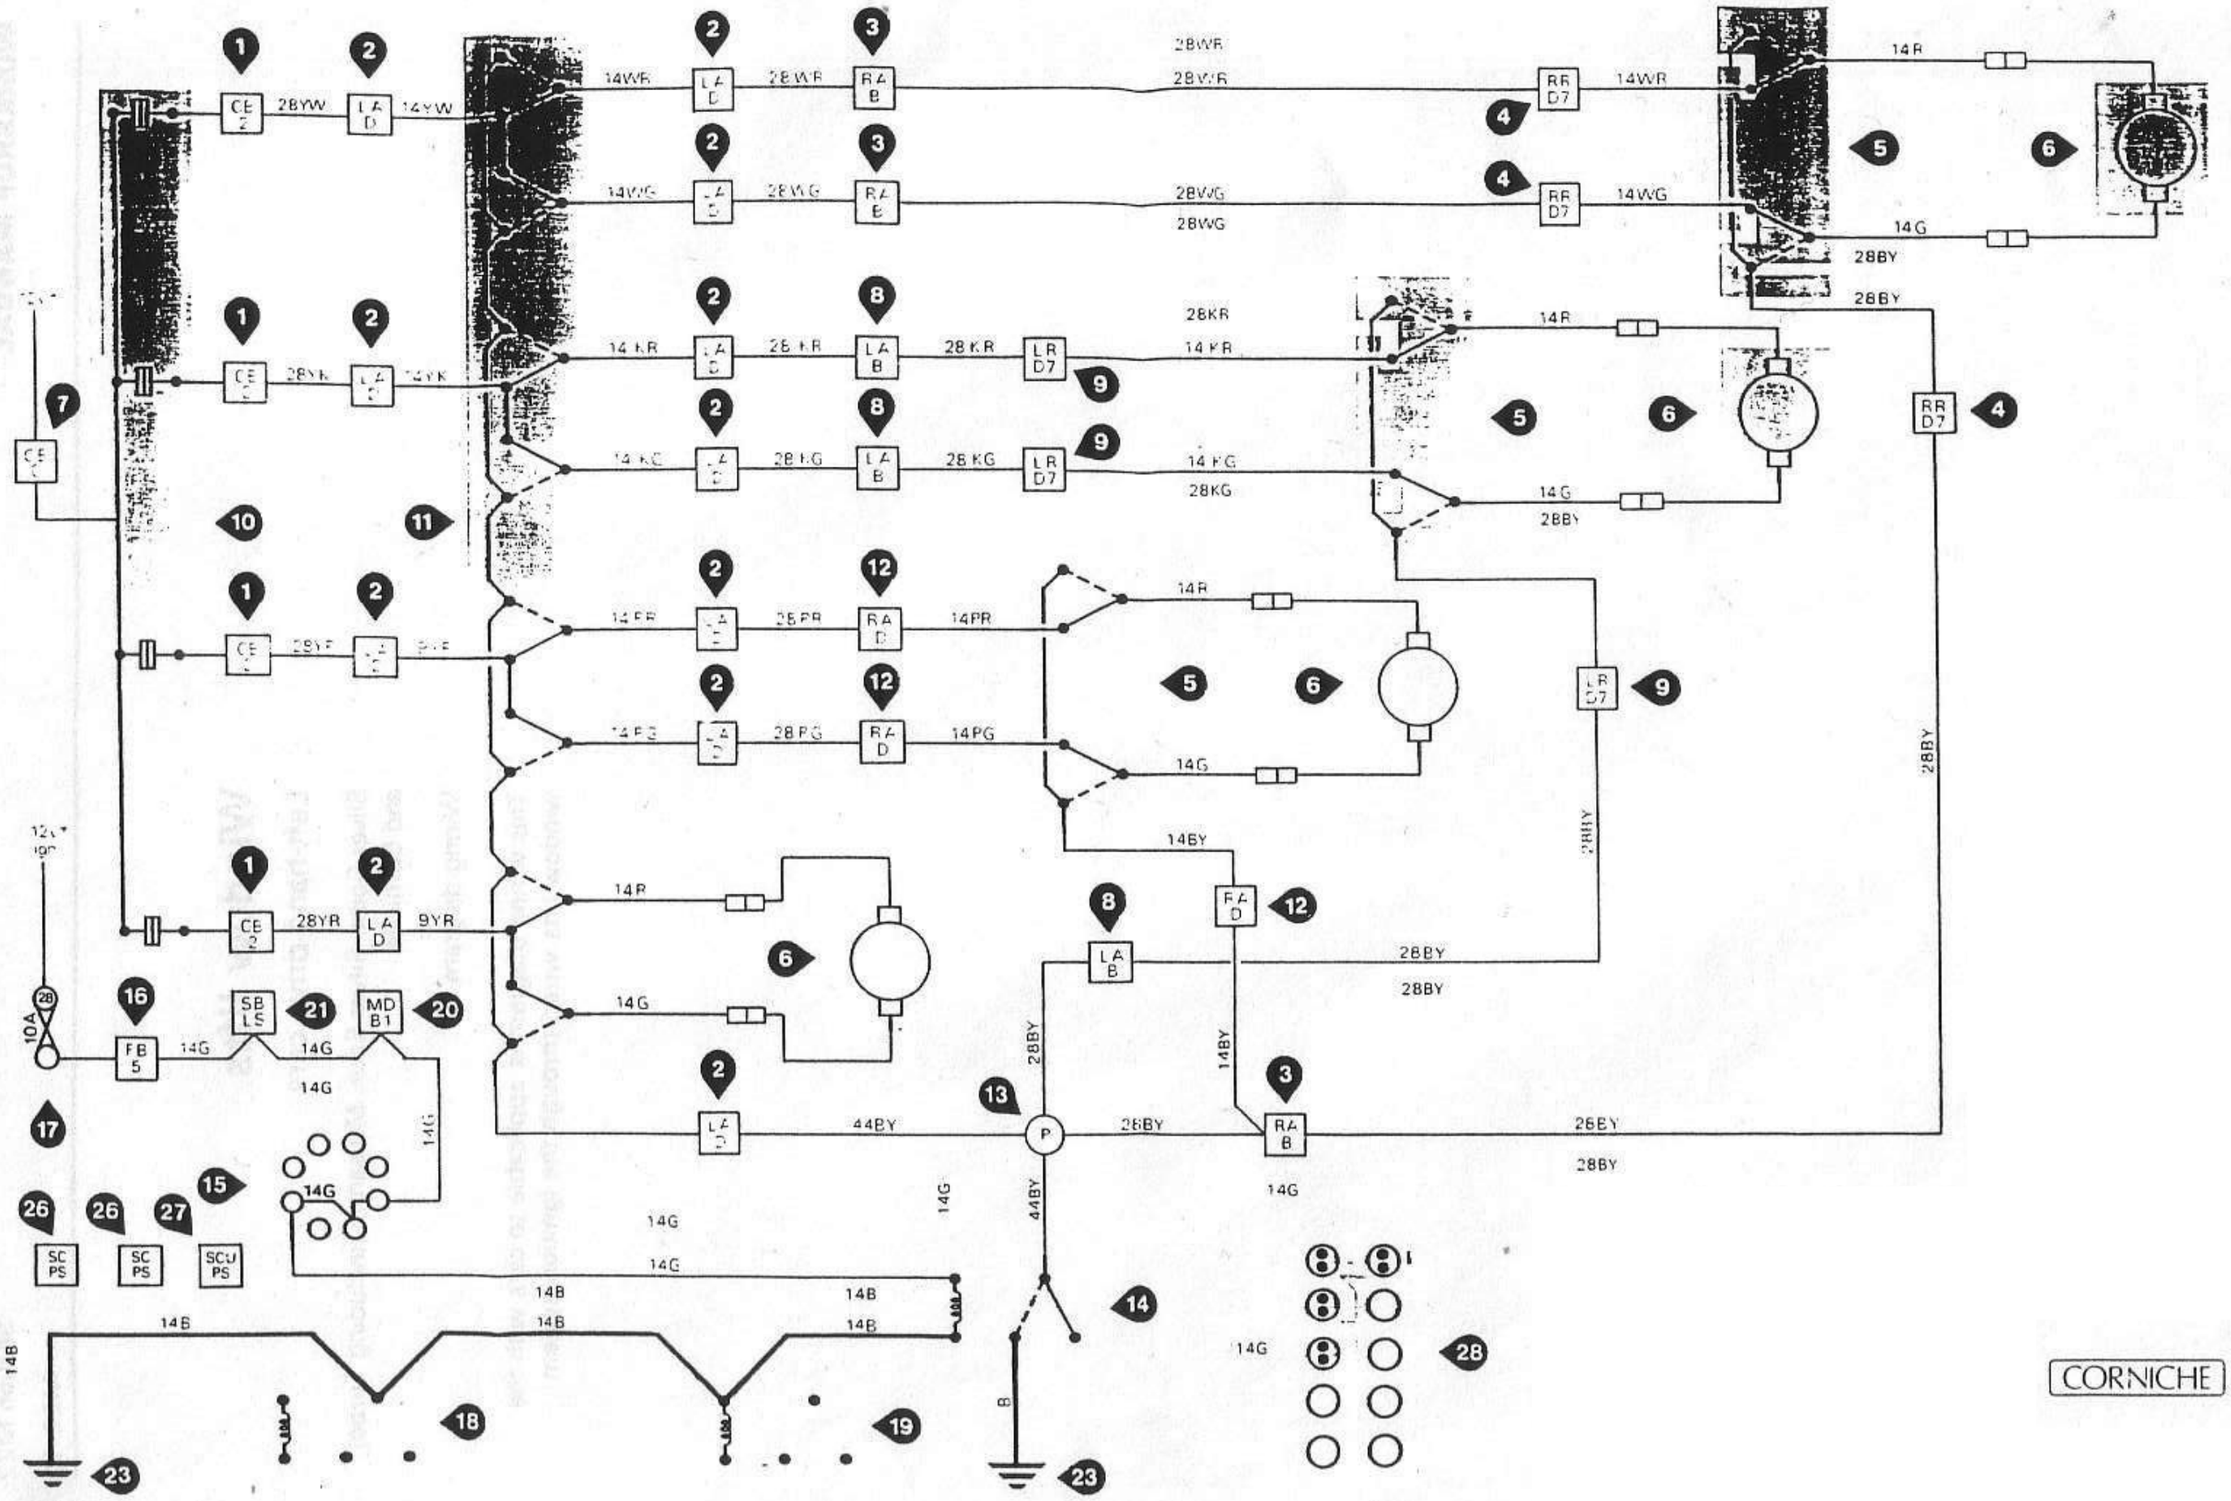
CE 2
LA D
RA B
RR D7
LR D7
SB LS
MD B1
FB 5
SC PS
SCU PS
10A
28YW
14YW
14WR
28WR
14WG
28WG
14KR
28KR
14KG
28KG
14PR
28PR
14PG
28PG
28YR
9YR
44BY
28BY
14BY
14R
14G
14B
P

CORNICHE

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Wiring diagram

For cars with the window lifts wired through the ignition system refer to the wiring diagram on page M22-13

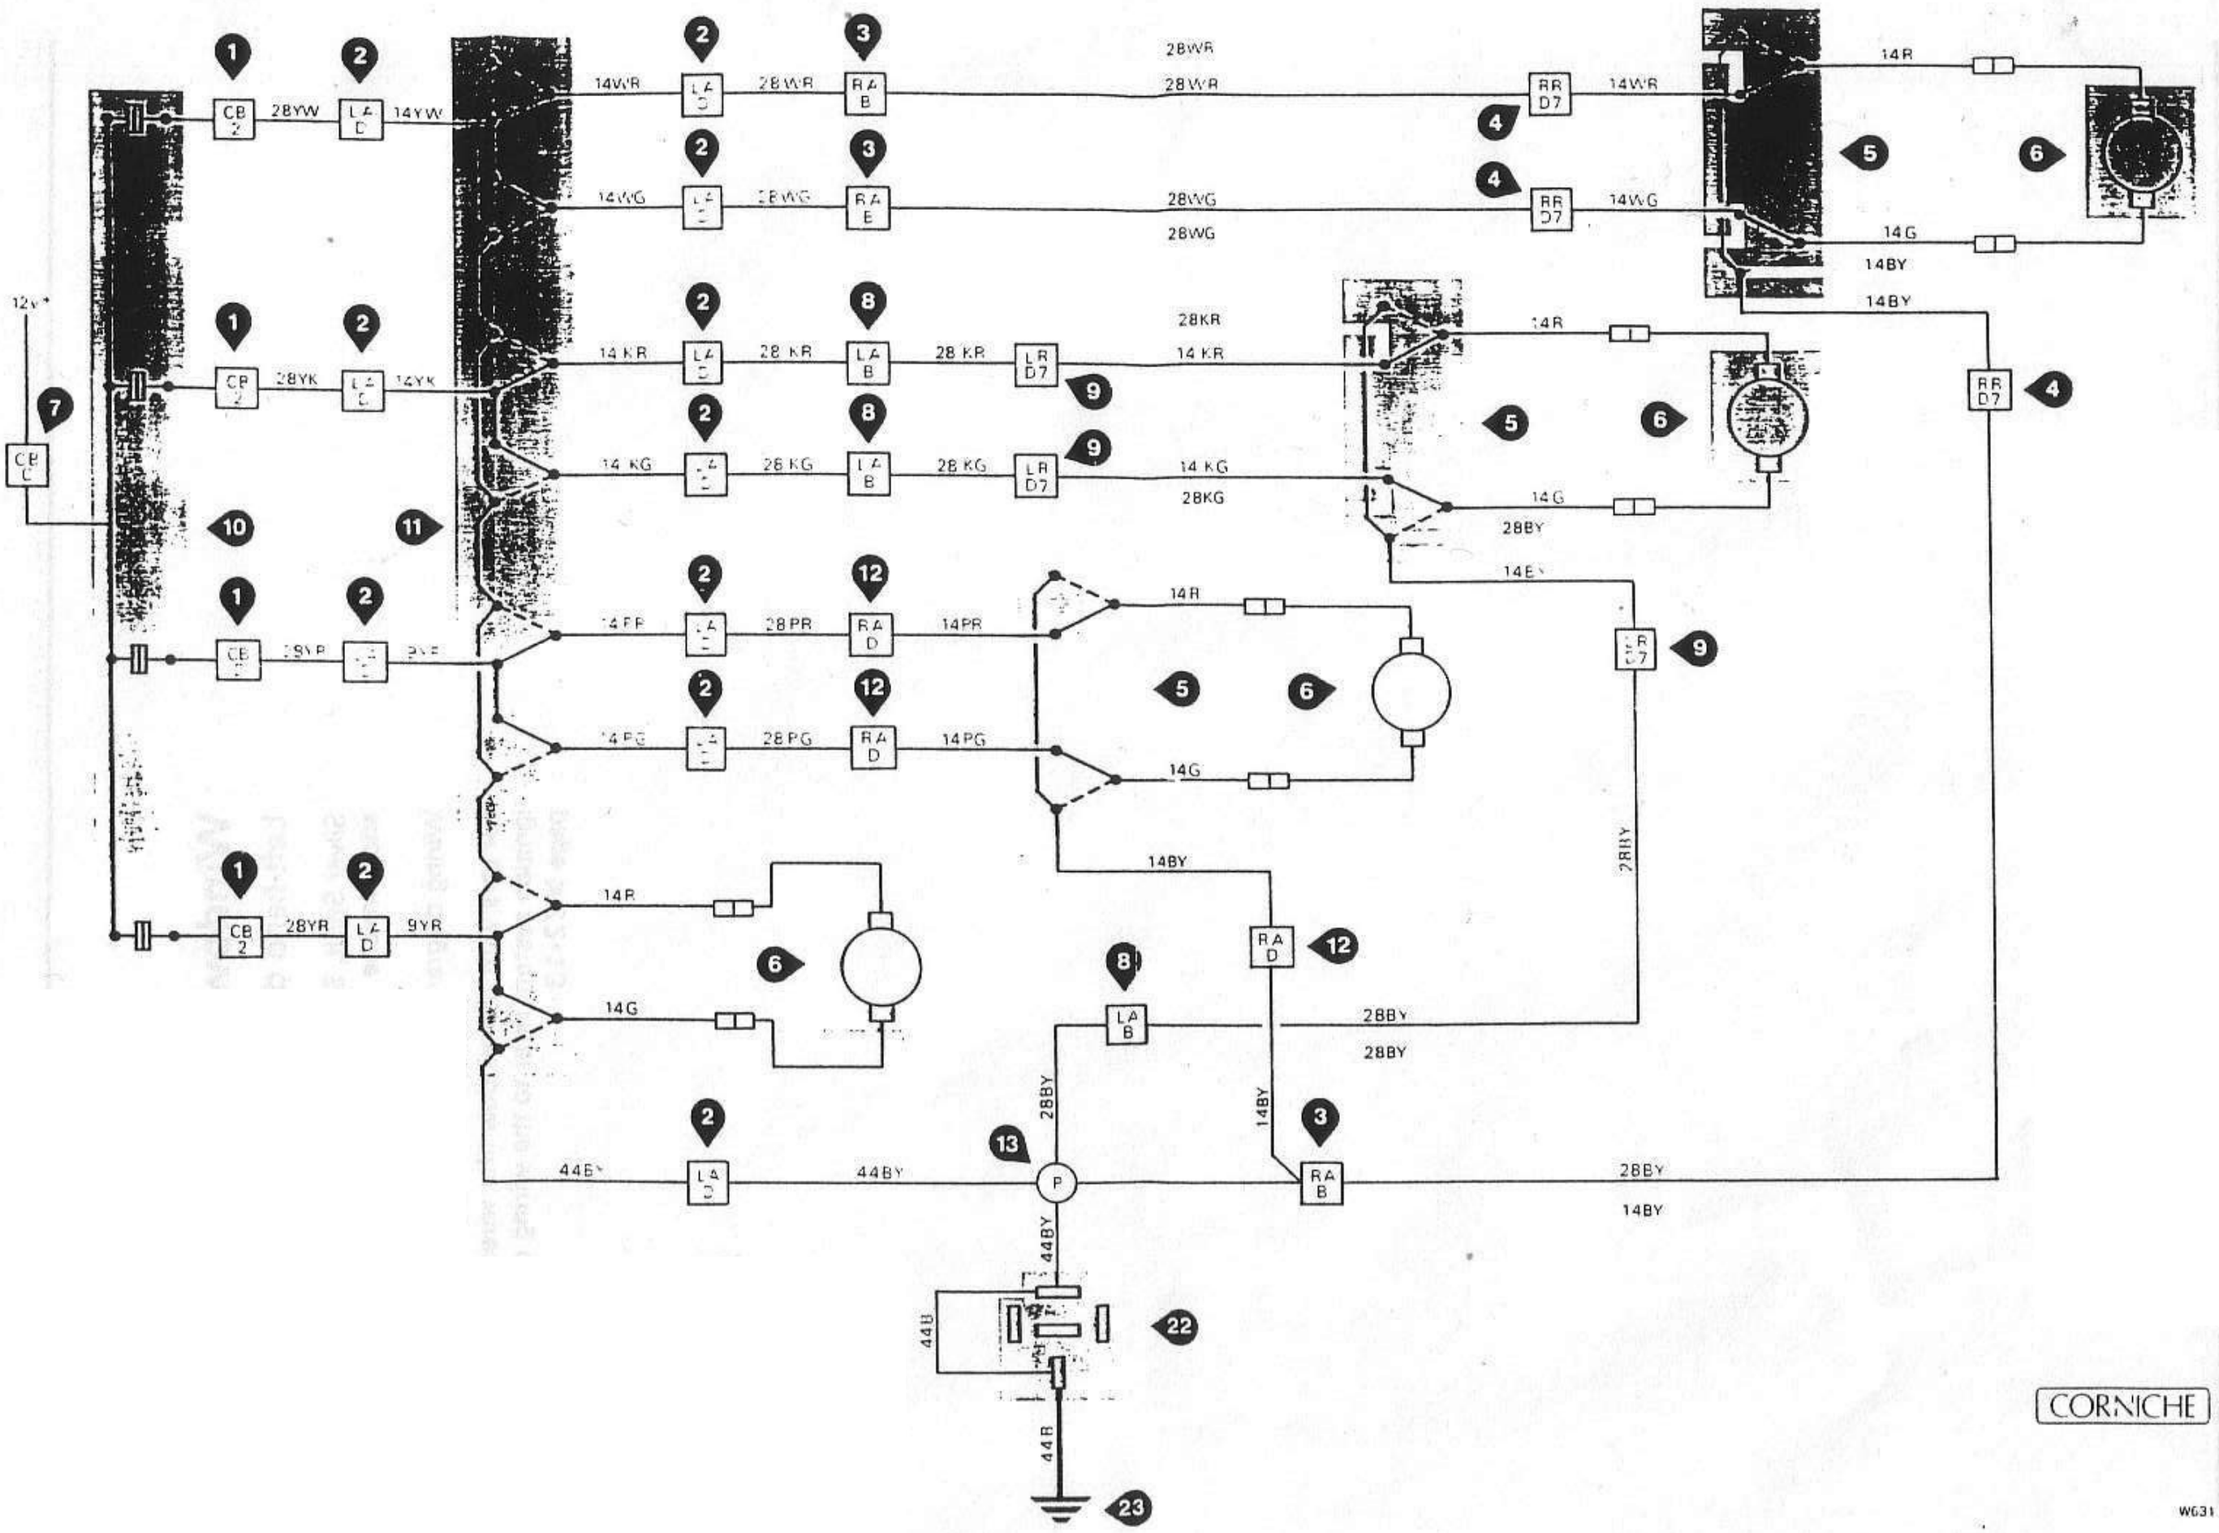
CORNICHE
W631

Window lifts

Right-hand drive cars
Corniche/Continental

Component location

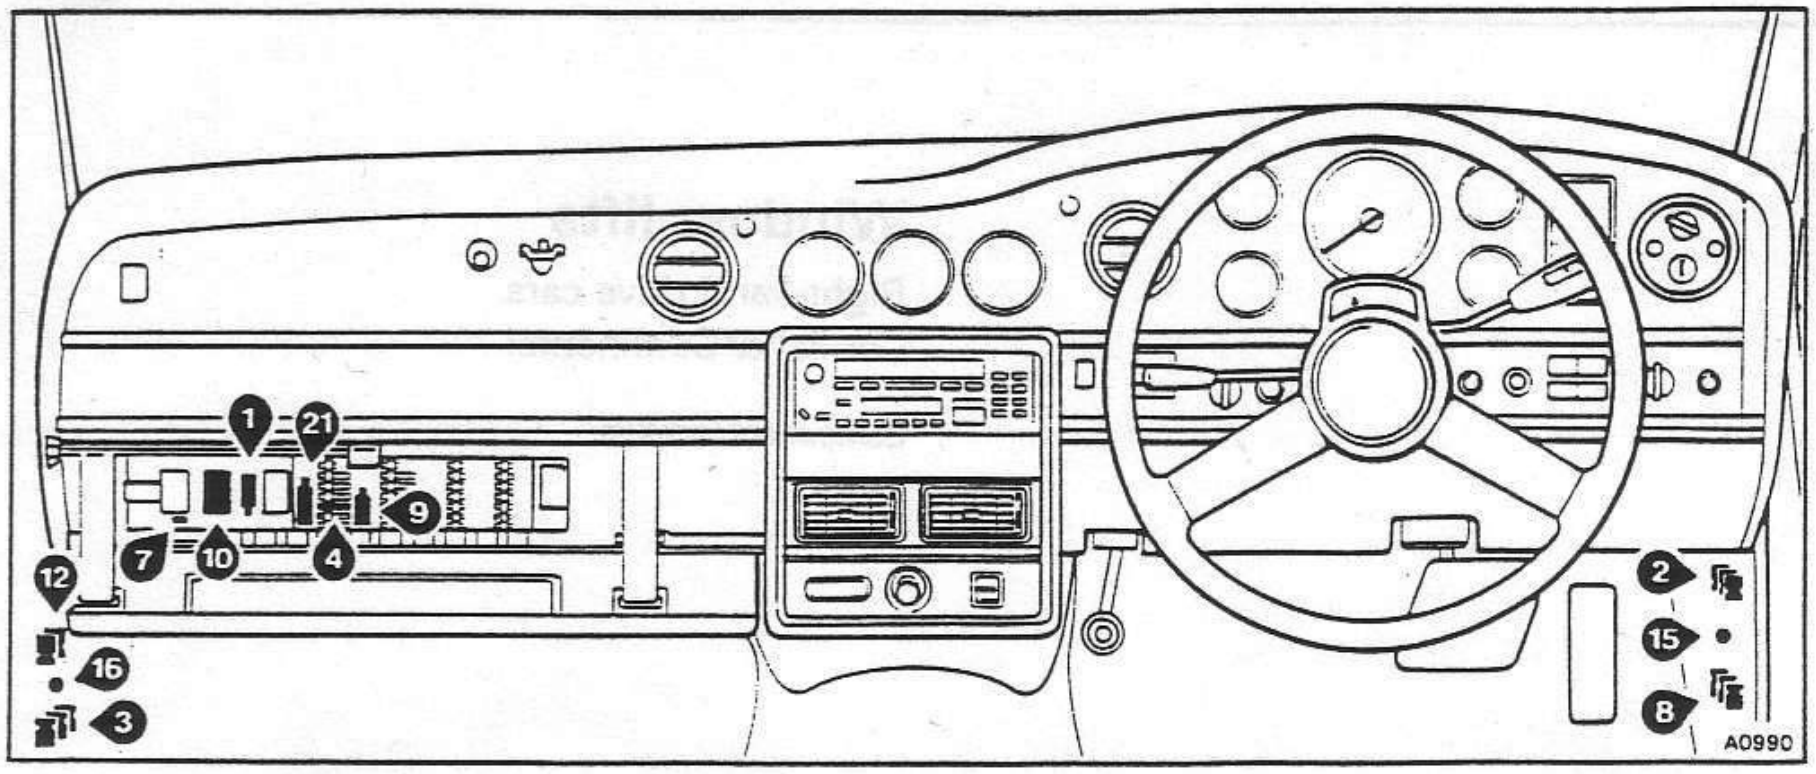
1
21
9
7
10
4
12
16
3
2
15
8
A0990

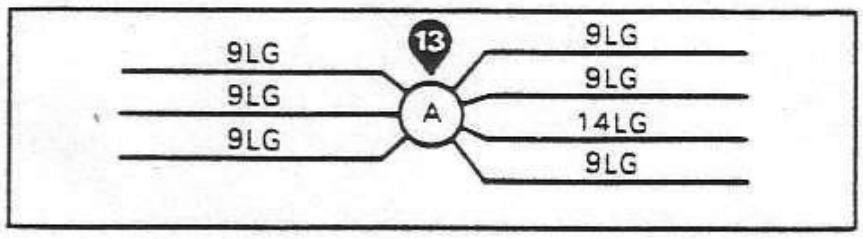
13
9LG
9LG
9LG
A
9LG
9LG
14LG
9LG

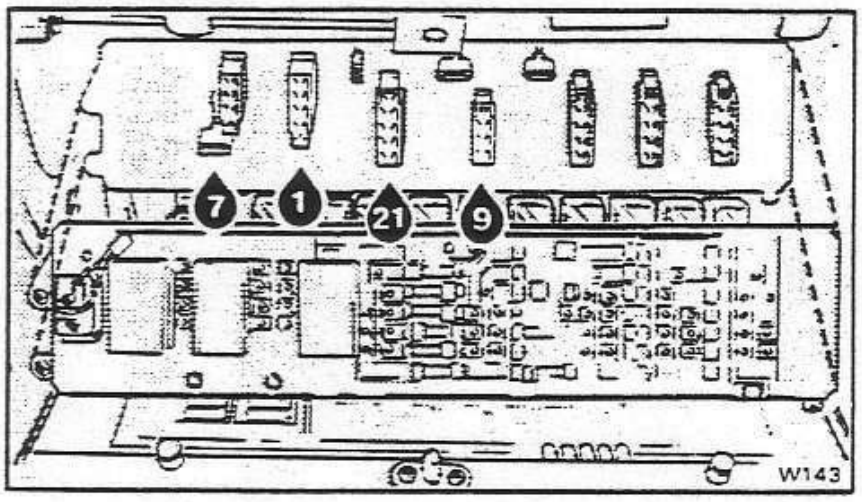
7
1
21
9
W143

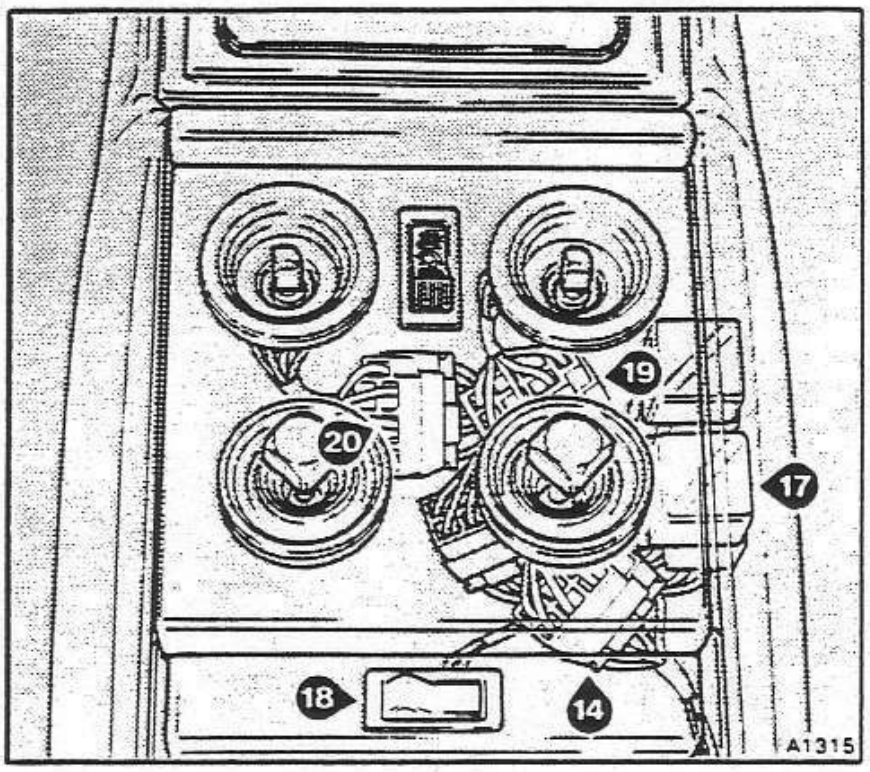
19
20
17
18
14
A1315

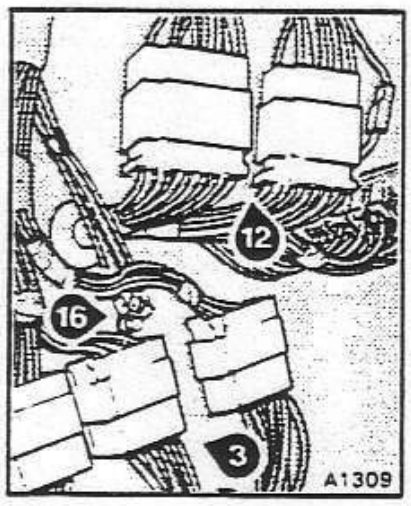
12
16
3
A1309

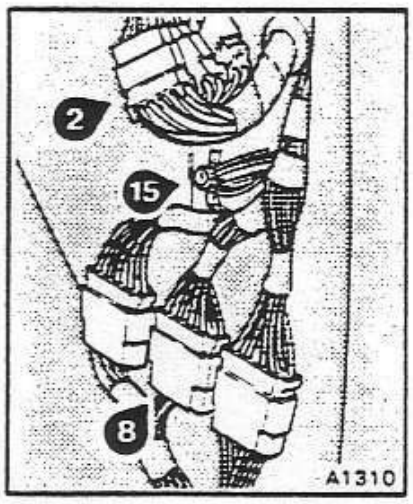
2
15
8
A1310

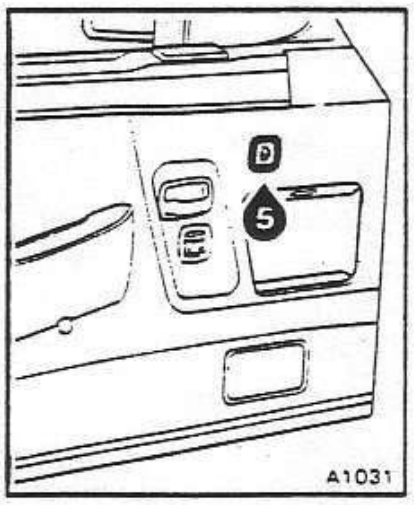
D
5
A1031

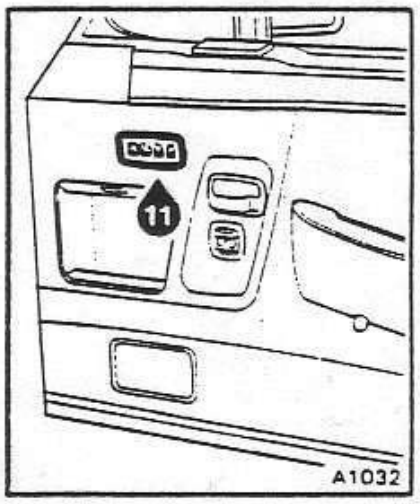
11
A1032

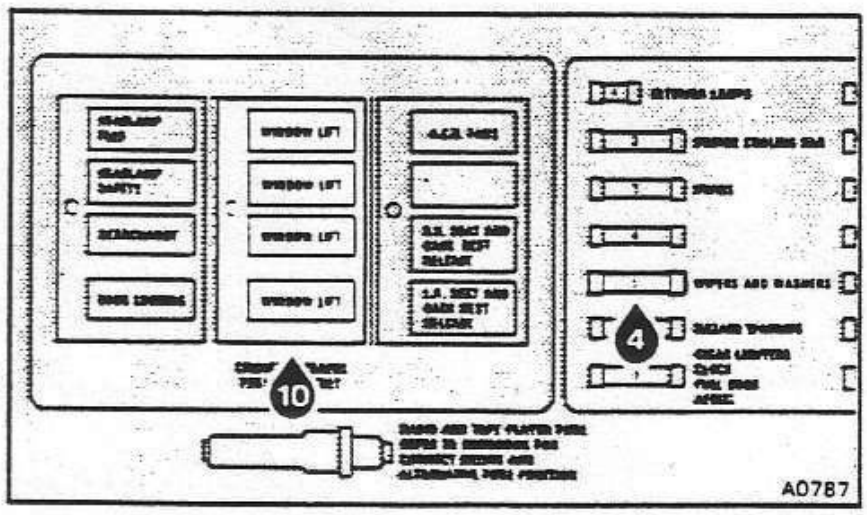
WINDOW LIFT
WINDOW LIFT
WINDOW LIFT
WINDOW LIFT
4
10
A0787

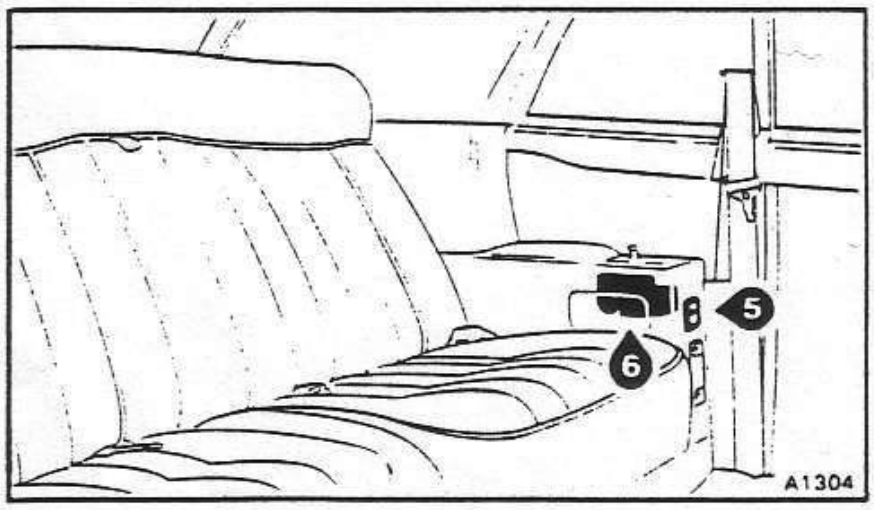
5
6
A1304

Window lifts

Right-hand drive cars
Corniche/Continental

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

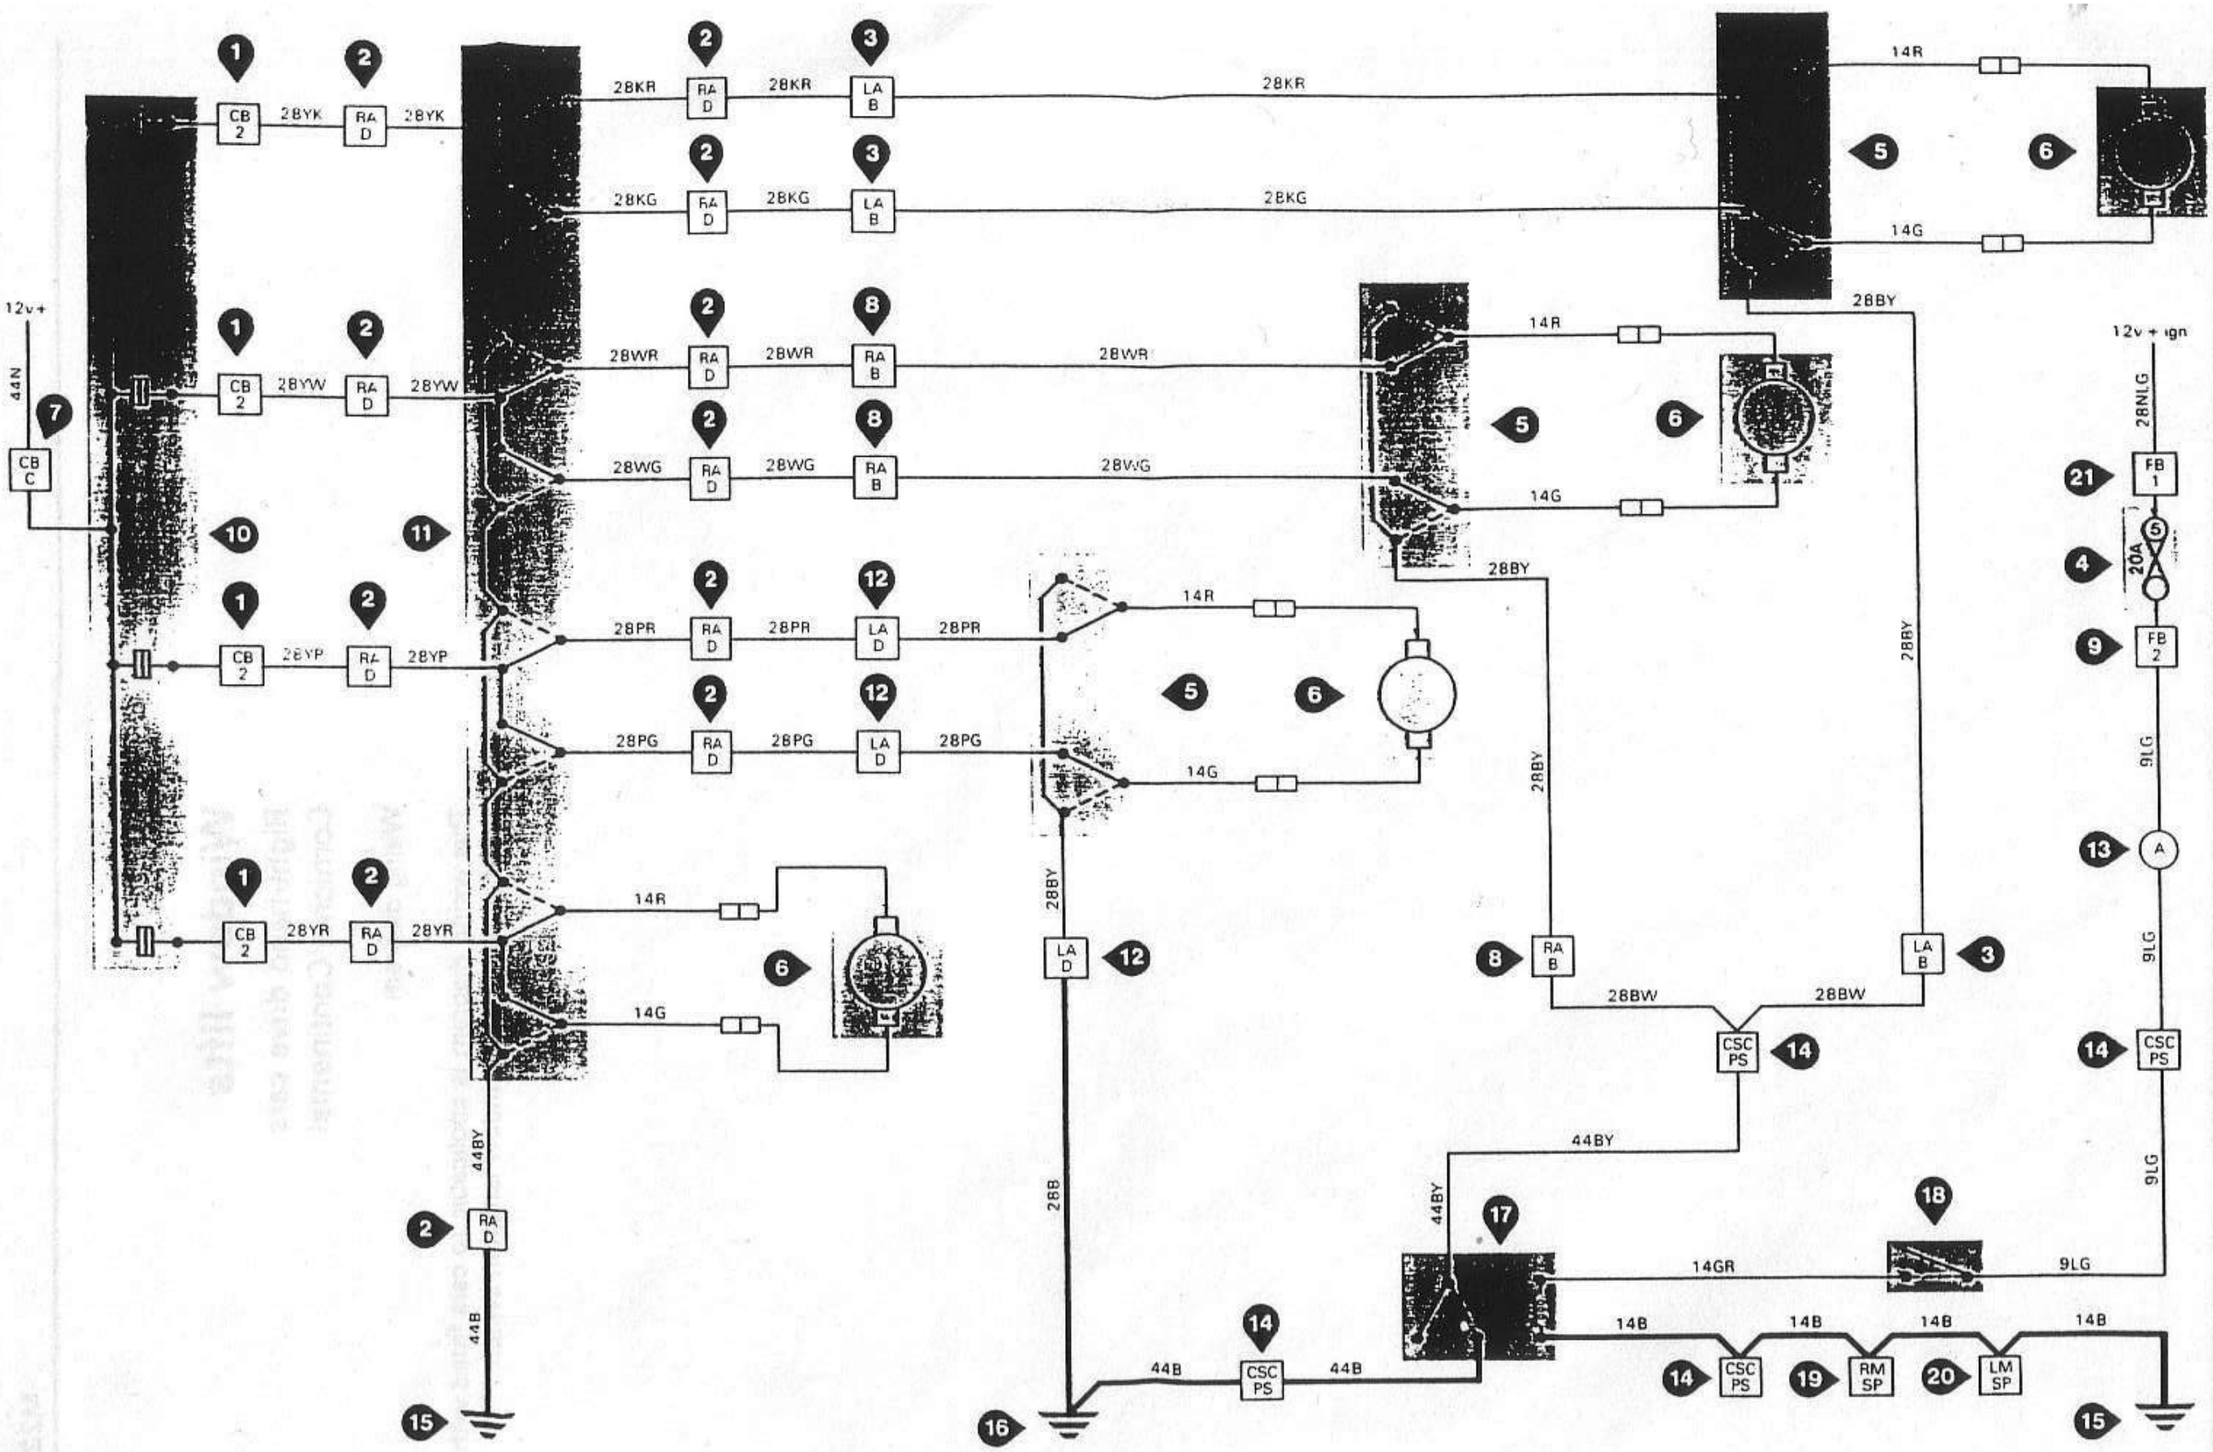
12v+
44N
CB C
CB 2
RA D
LA B
LA D
RA B
CSC PS
RM SP
LM SP
FB 1
FB 2
20A
12v + ign
28YK
28KR
28KG
28YW
28WR
28WG
28YP
28PR
28PG
28YR
14R
14G
28BY
28NLG
9LG
44BY
44B
28B
28BW
14GR
14B
A1239

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Component location

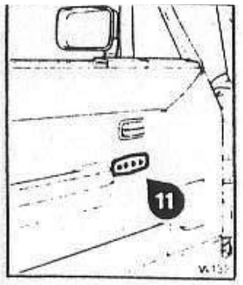
11

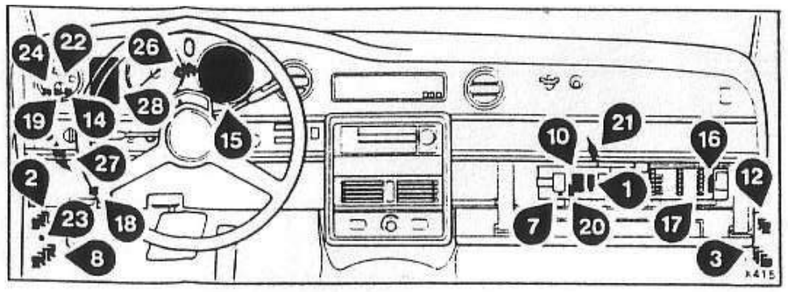
24
22
26
19
14
28
15
27
2
23
18
8
10
21
16
1
12
7
20
17
3
X415

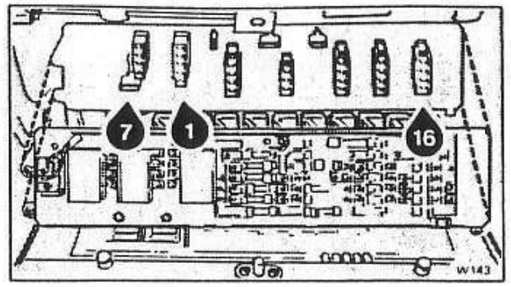
7
1
16
W143

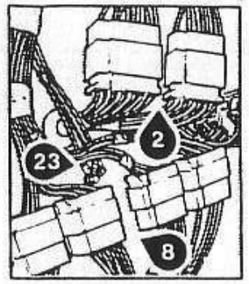
23
2
8

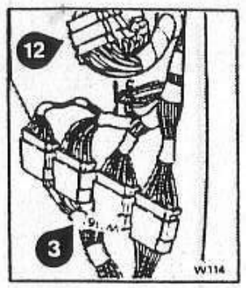
12
3
W114

CORNICHE
11
X 644

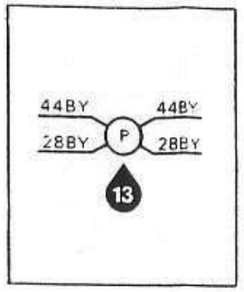
44BY
44BY
28BY
P
28BY
13

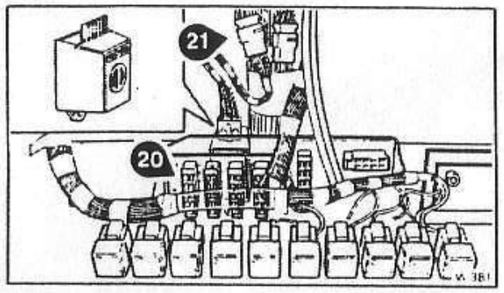
21
20
W 381

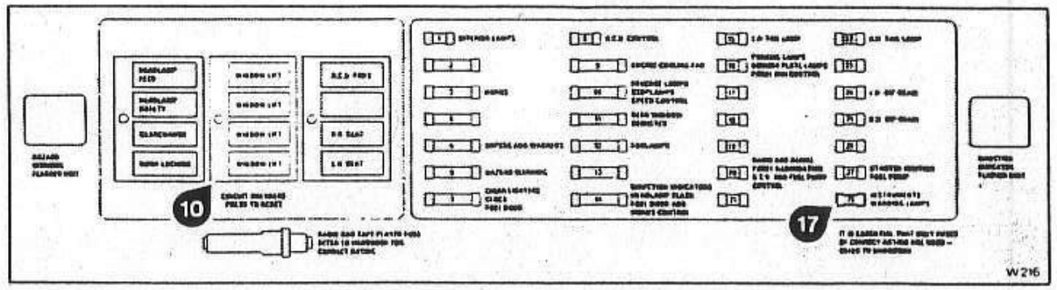
10
17
W216

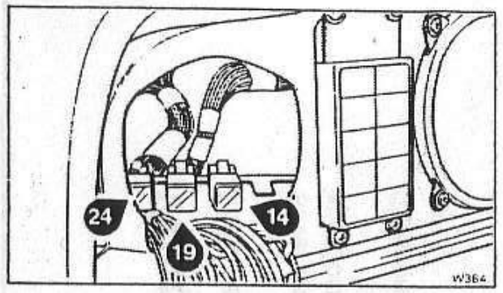
24
19
14
W364

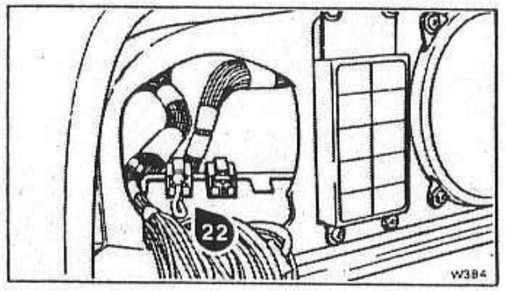
22
W384

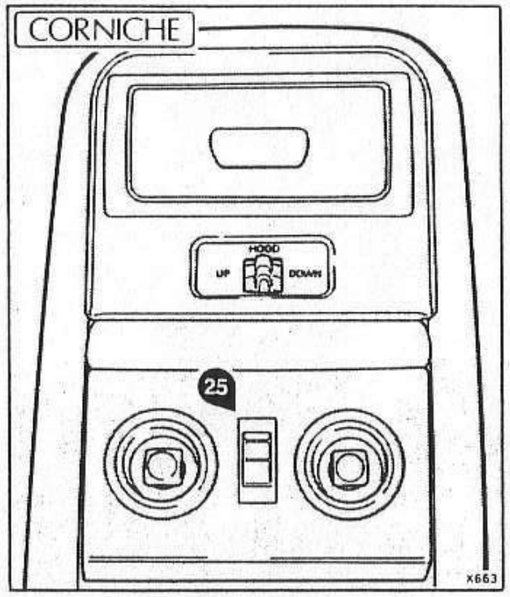
CORNICHE
HOOD
UP
DOWN
25
X663

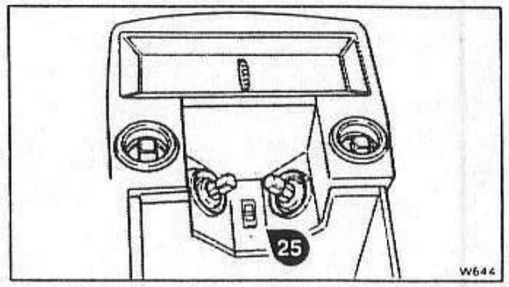
25
W644

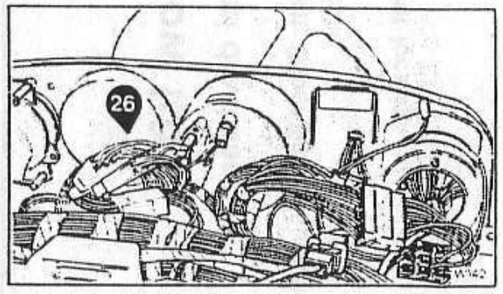
26
W142

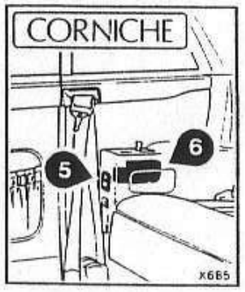
CORNICHE
5
6
X685

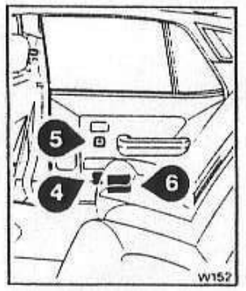
5
4
6
W152

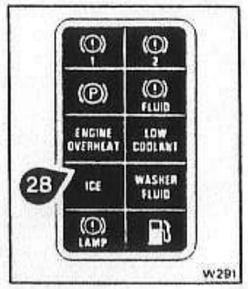
1
2
P
FLUID
ENGINE OVERHEAT
LOW COOLANT
ICE
WASHER FLUID
LAMP
28
W291

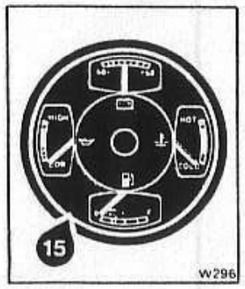
HIGH
HOT
LOW
COLD
15
W296

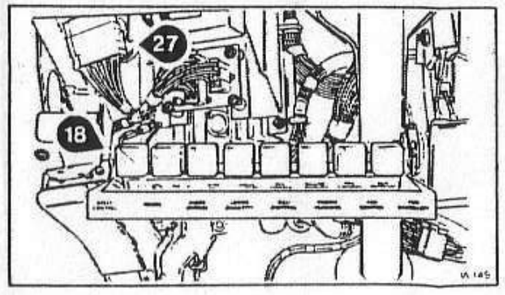
27
18
W 145

CORNICHE
6
5
X685

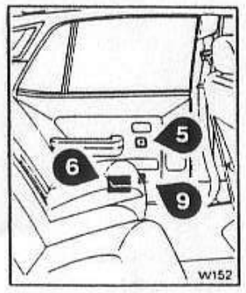
5
6
9
W152

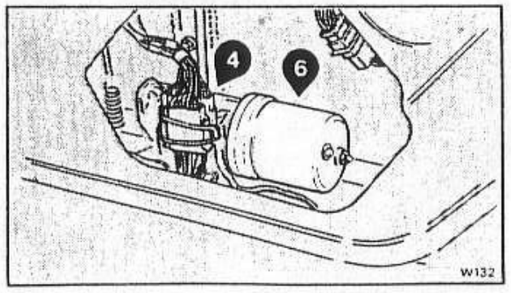
4
6
W132

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), and Corniche

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

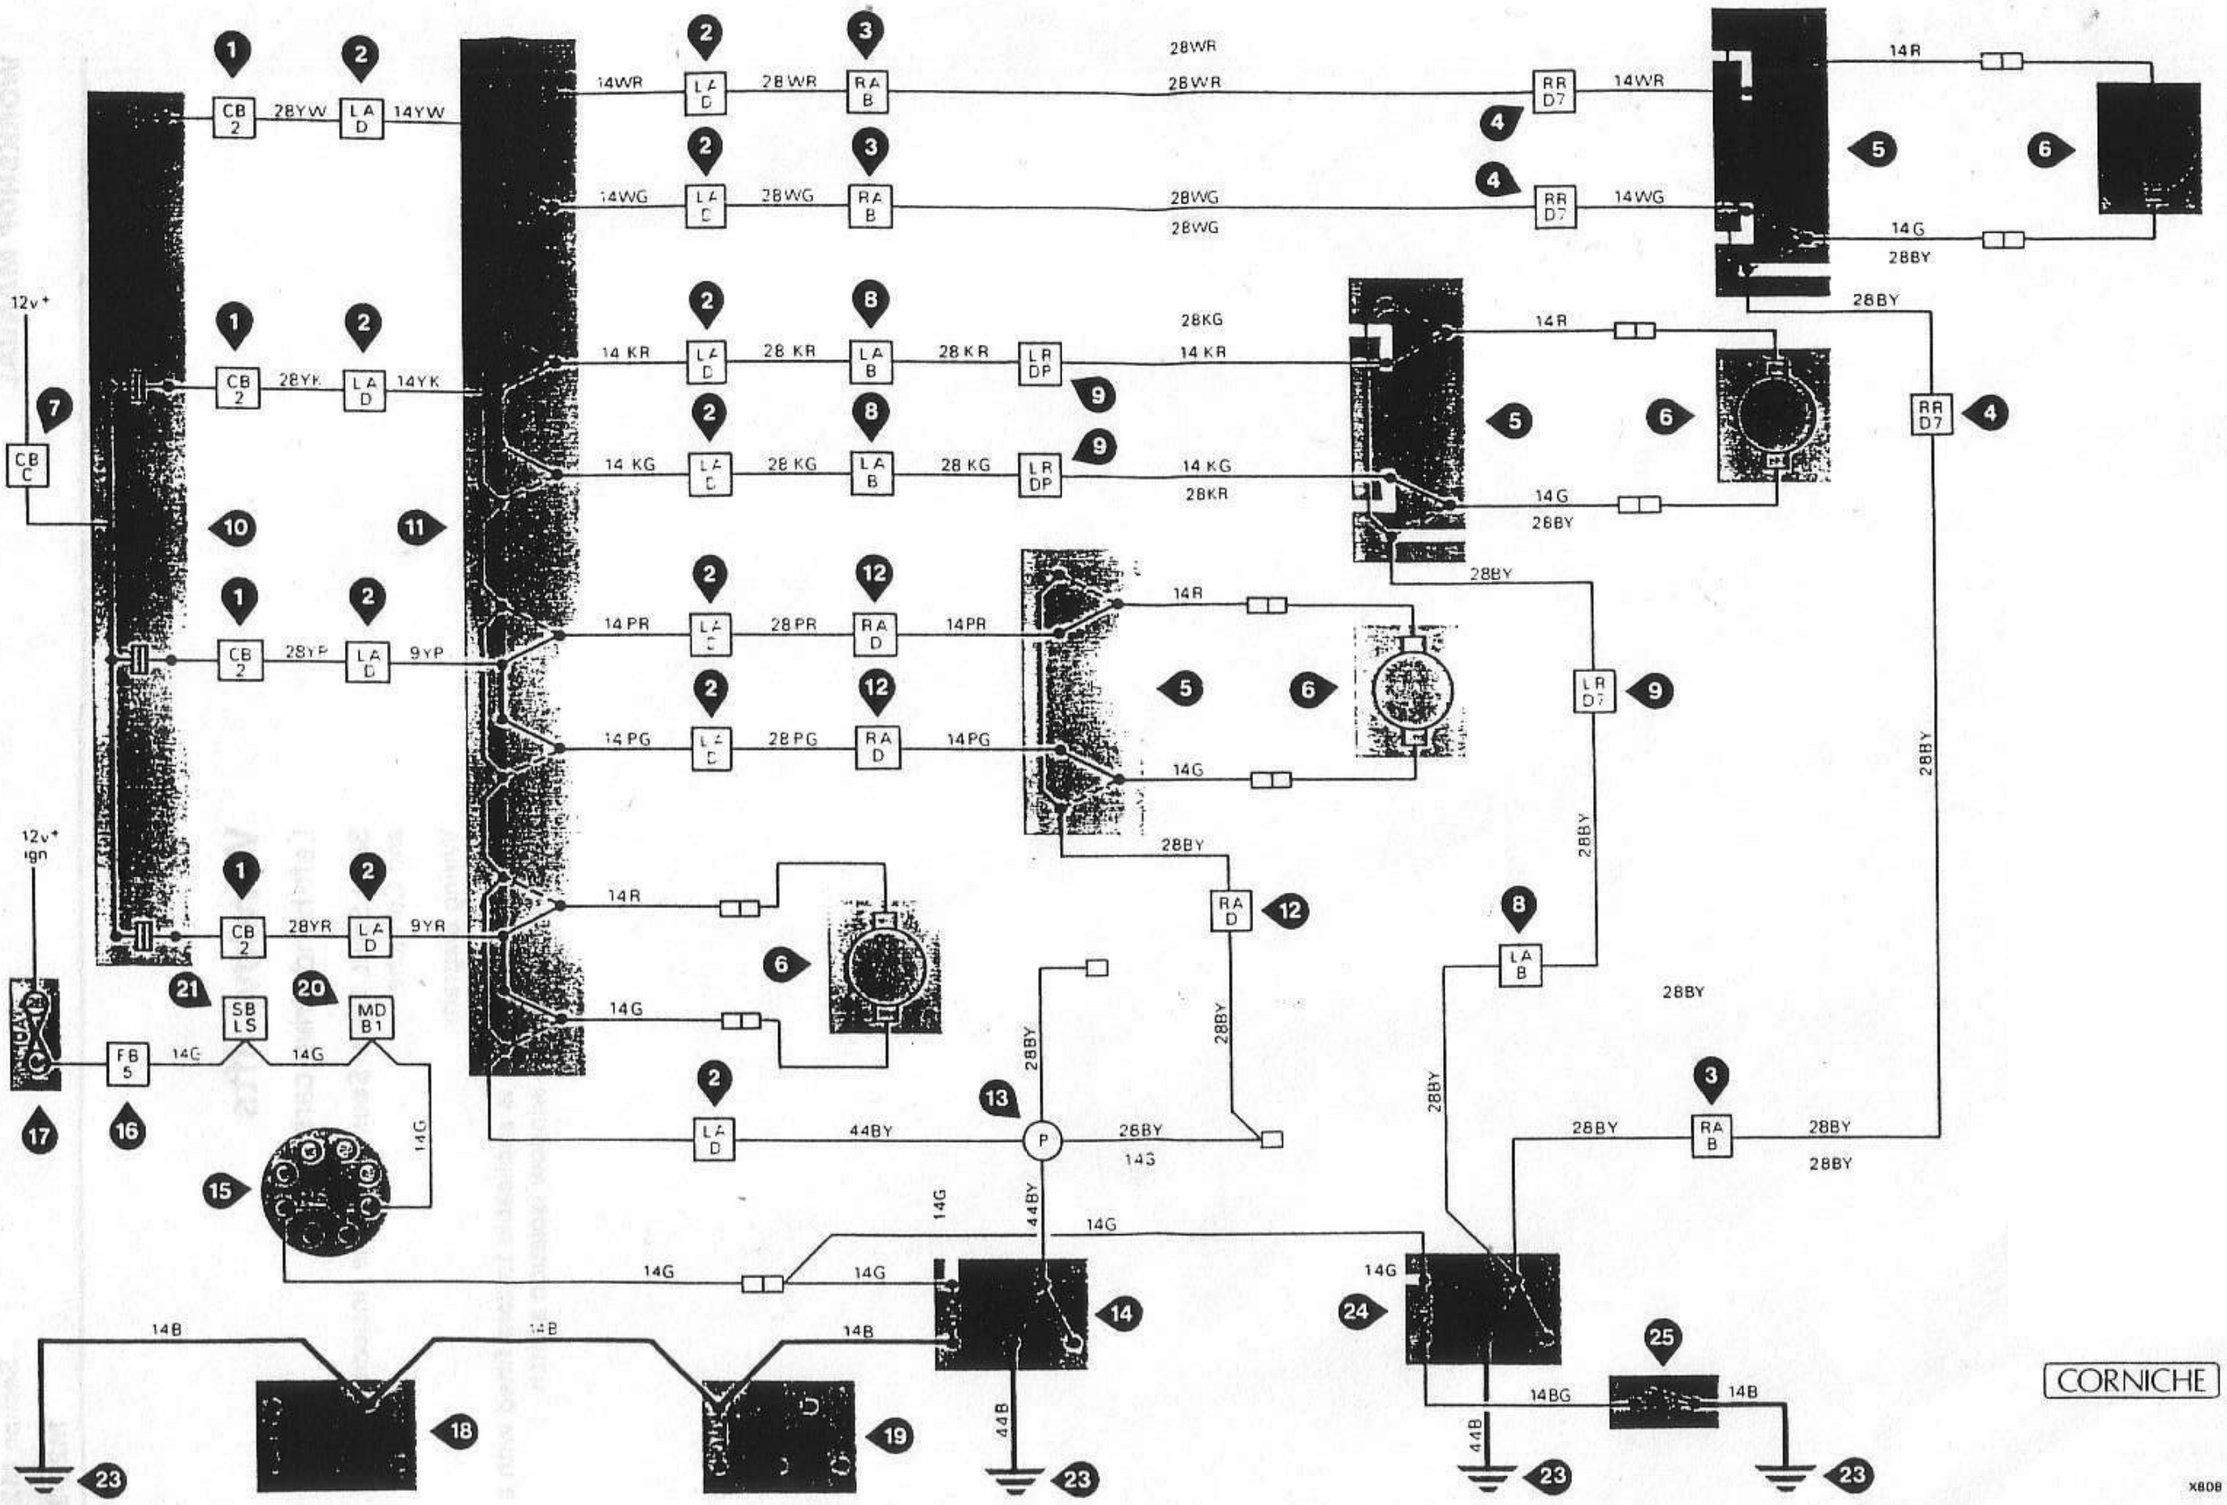

CORNICHE

X808

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Component location

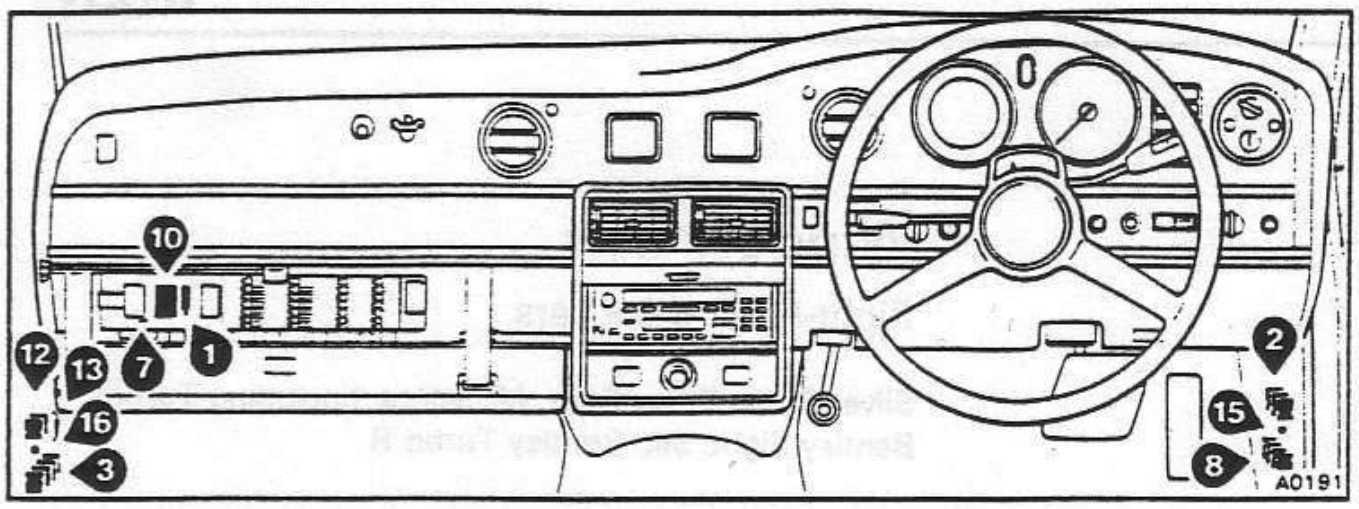
10
12
13
7
1
16
3
2
15
8
A0191

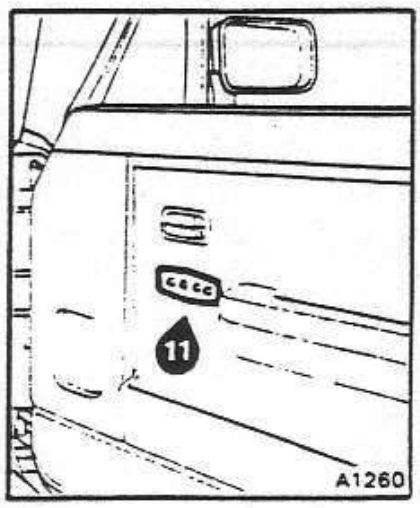
11
A1260

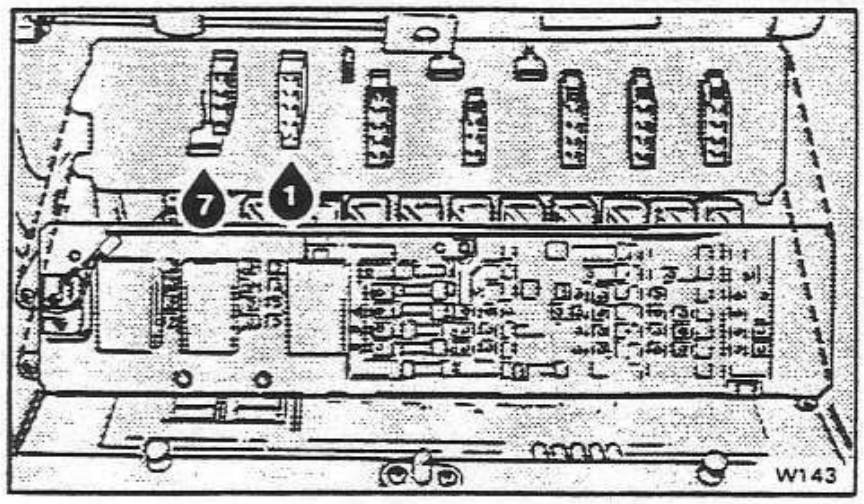
7
1
W143

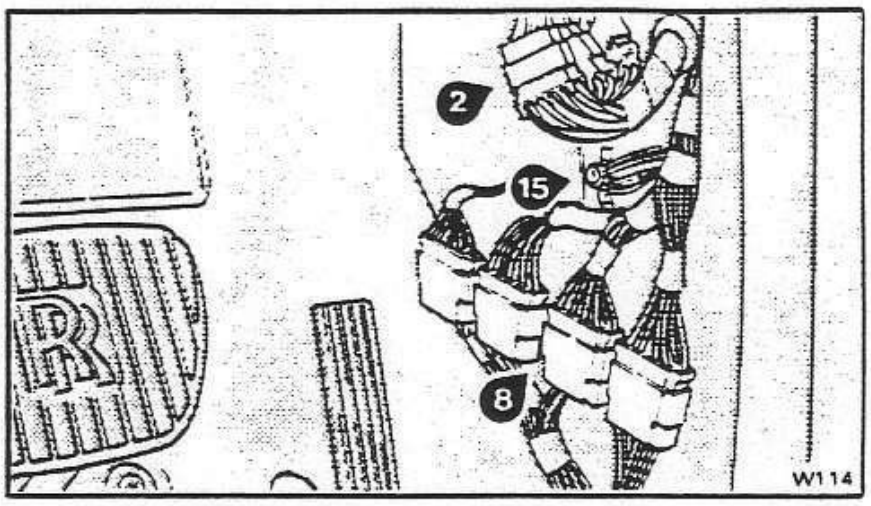
2
15
8
W114

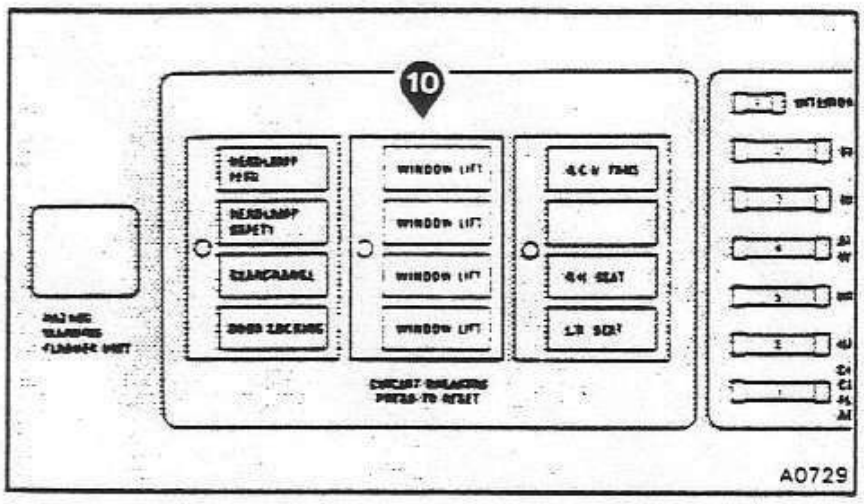
10
WINDOW LIFT
WINDOW LIFT
WINDOW LIFT
WINDOW LIFT
A0729

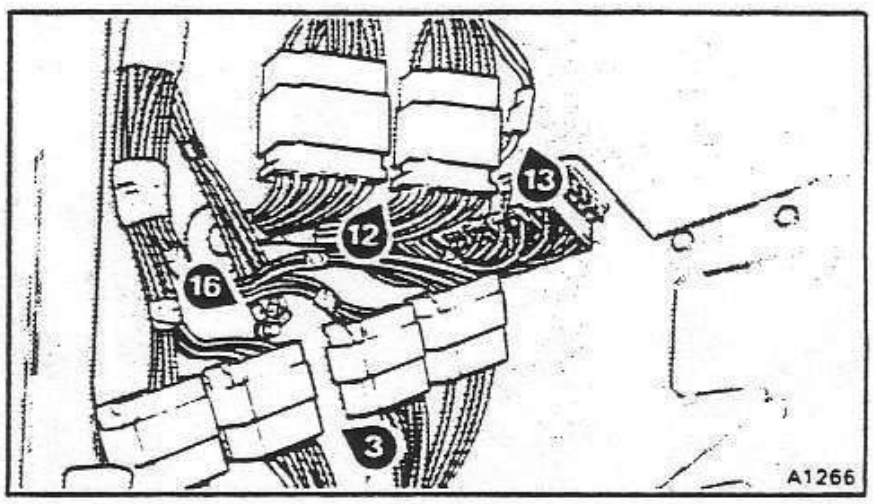
13
12
16
3
A1266

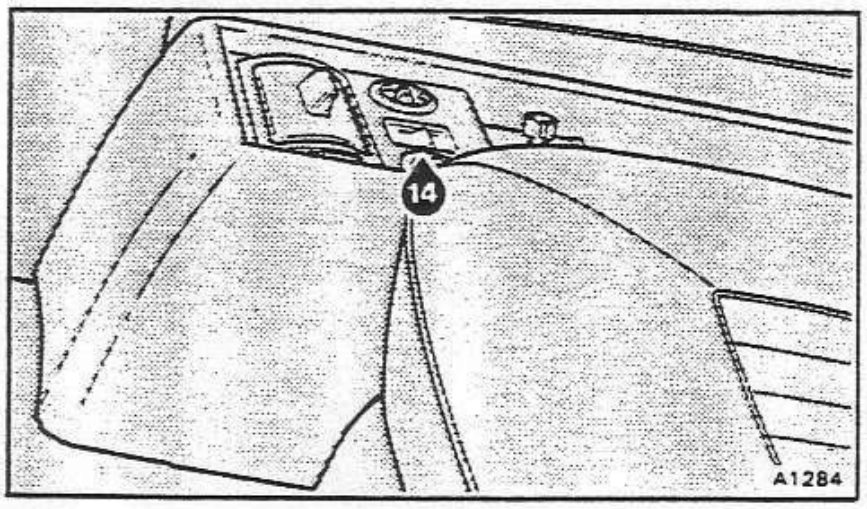
14
A1284

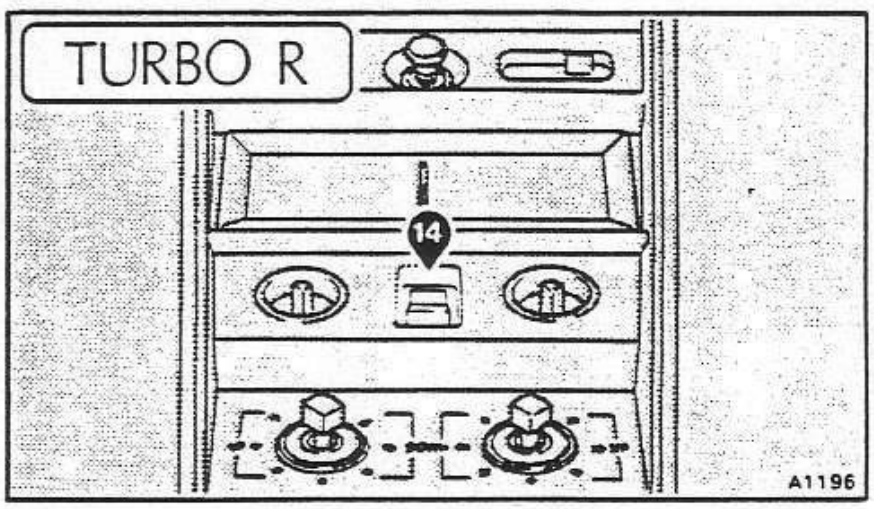
TURBO R
14
A1196

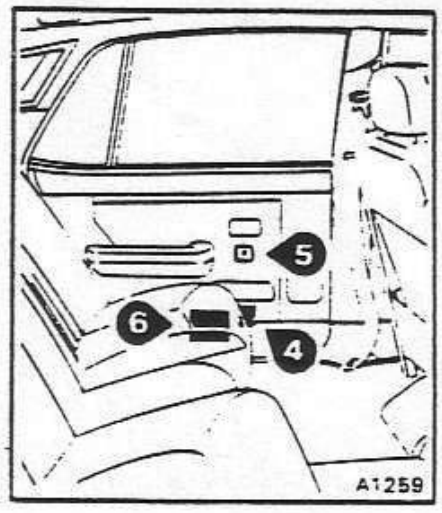
5
6
4
A1259

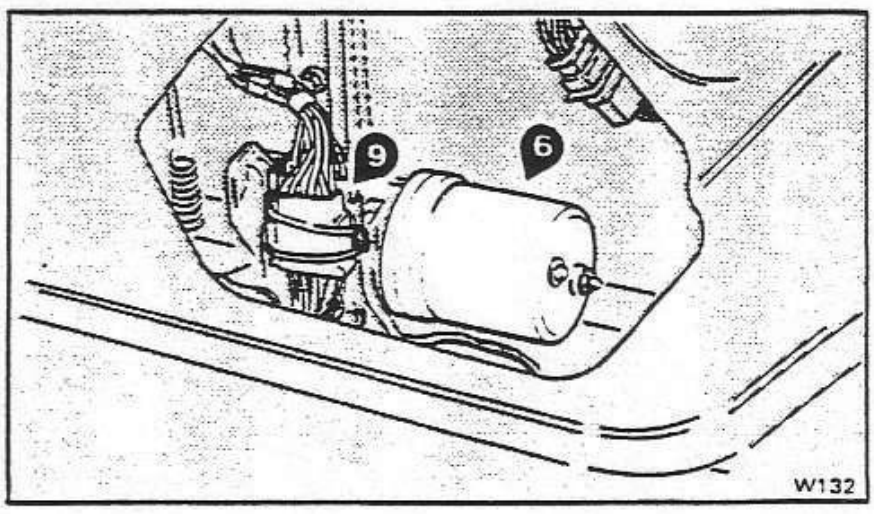
9
6
W132

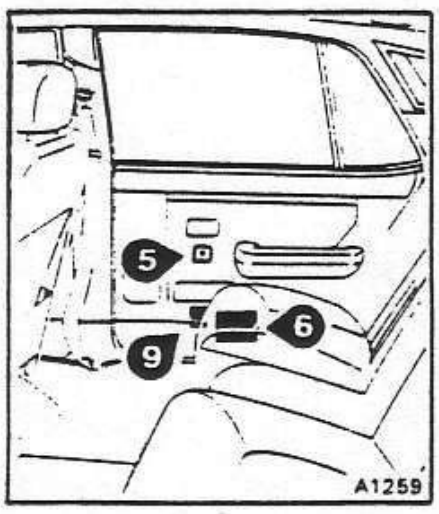
5
6
9
A1259

Window lifts

Right-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

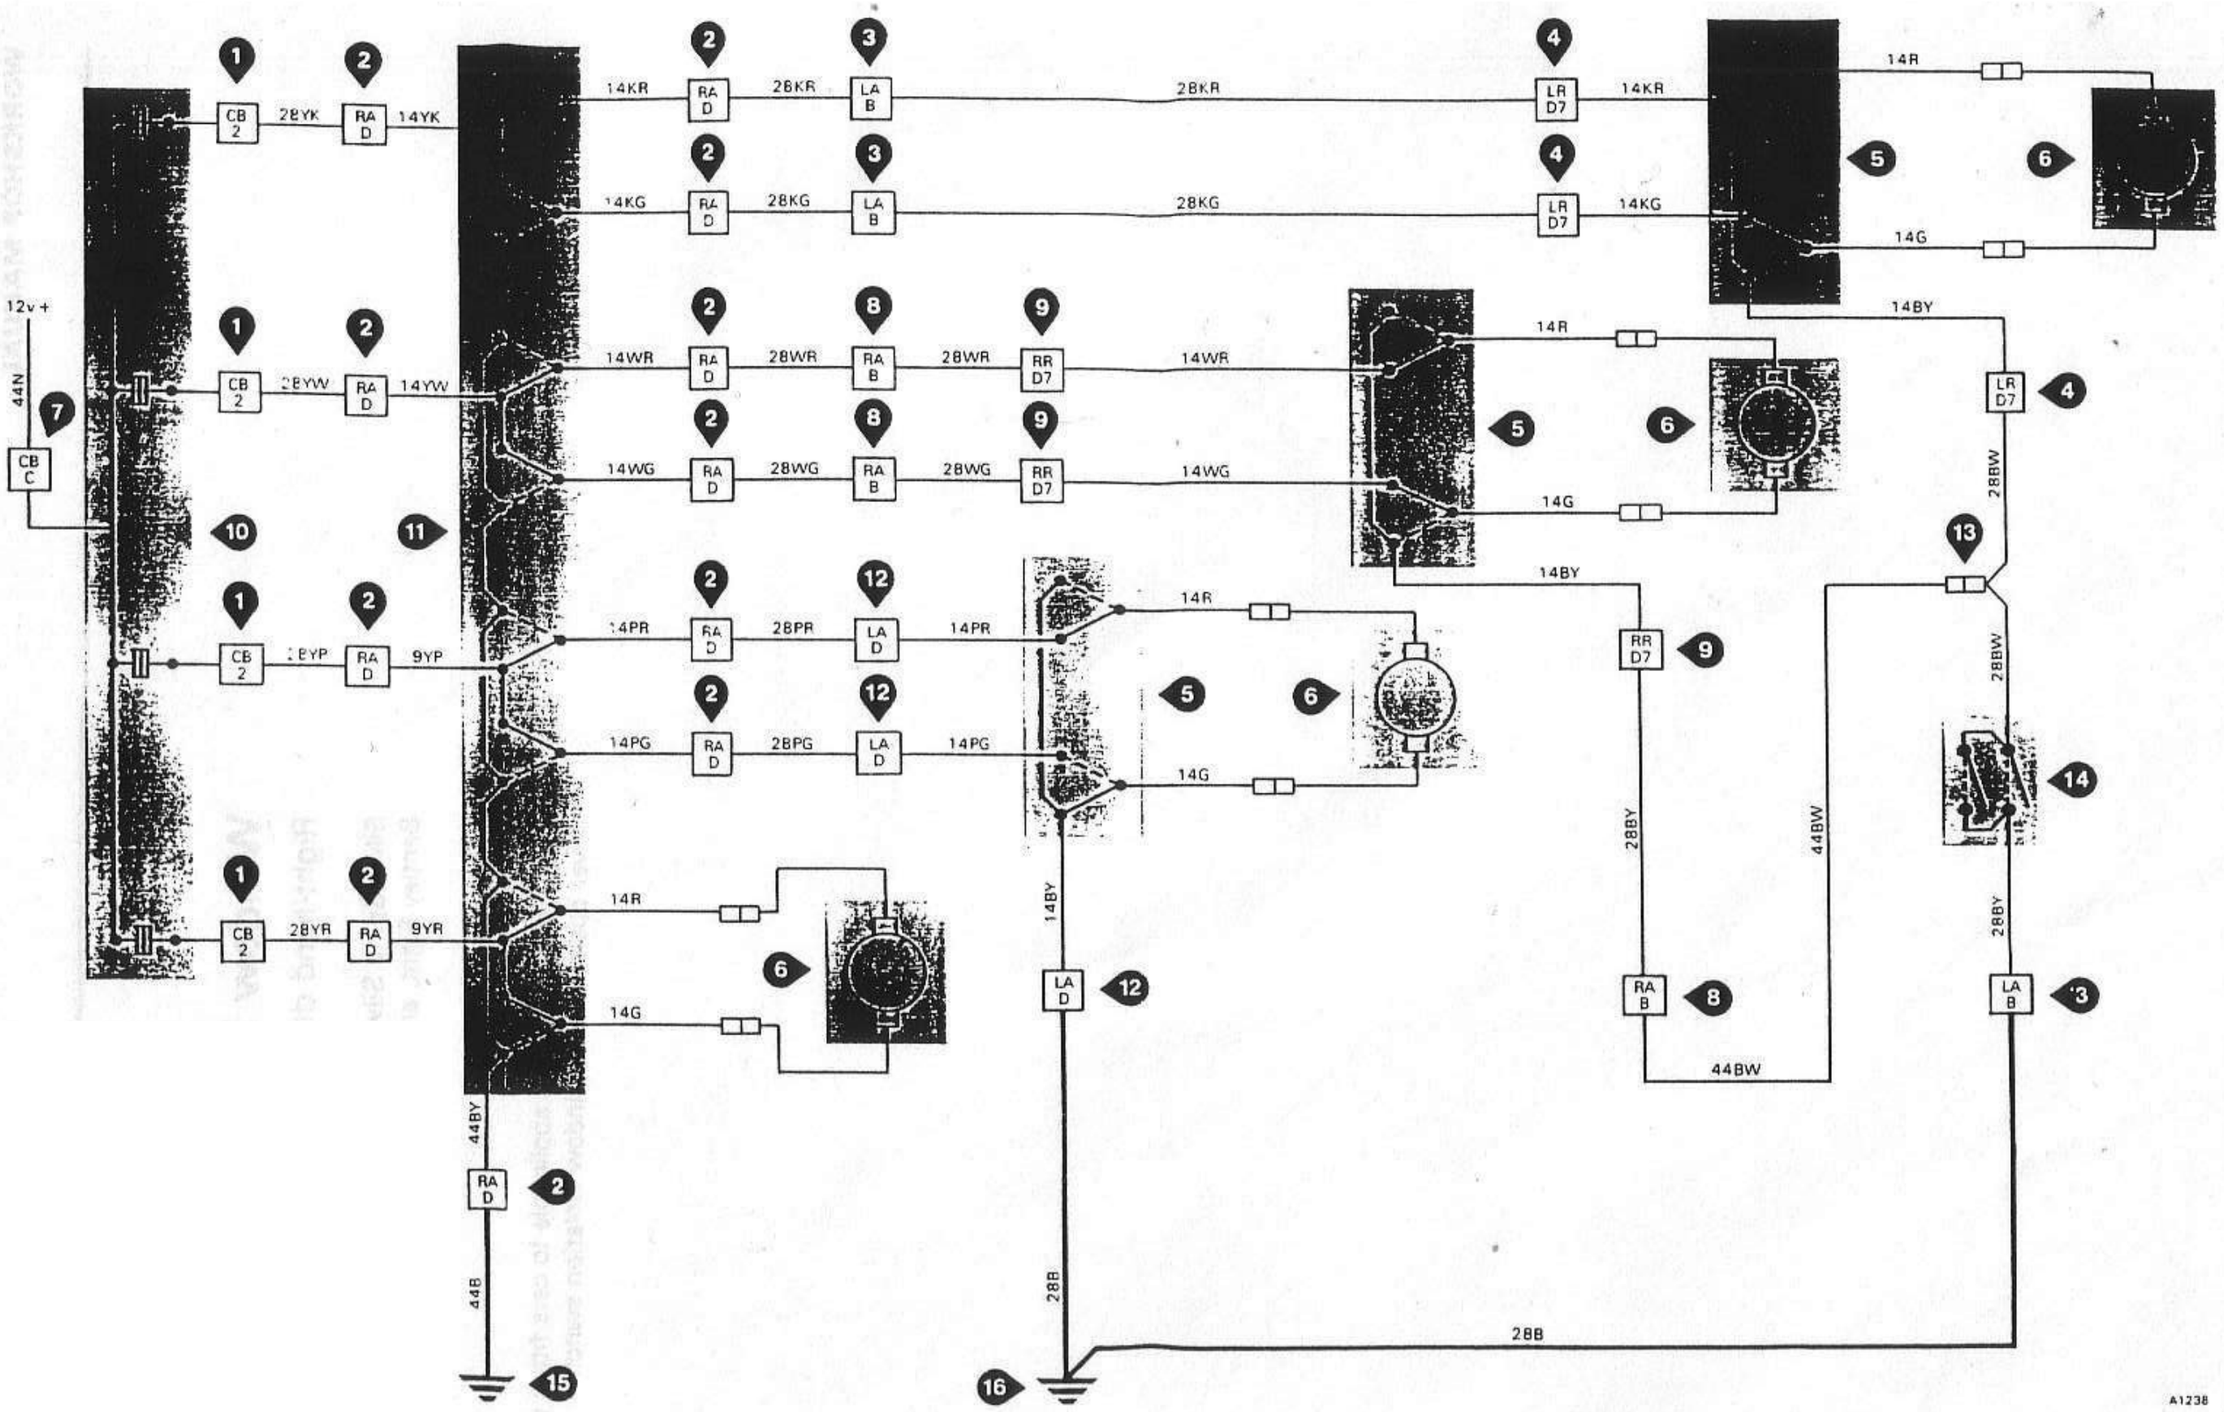
12v+
44N
CB C
CB 2
28YK
RA D
14YK
14KR
28KR
LA B
LR D7
14KG
28KG
14WR
28WR
RR D7
14WG
28WG
14PR
28PR
LA D
14PG
28PG
28YR
9YR
14R
14G
14BY
28BW
44BW
28BY
44BY
44B
28B
A1238

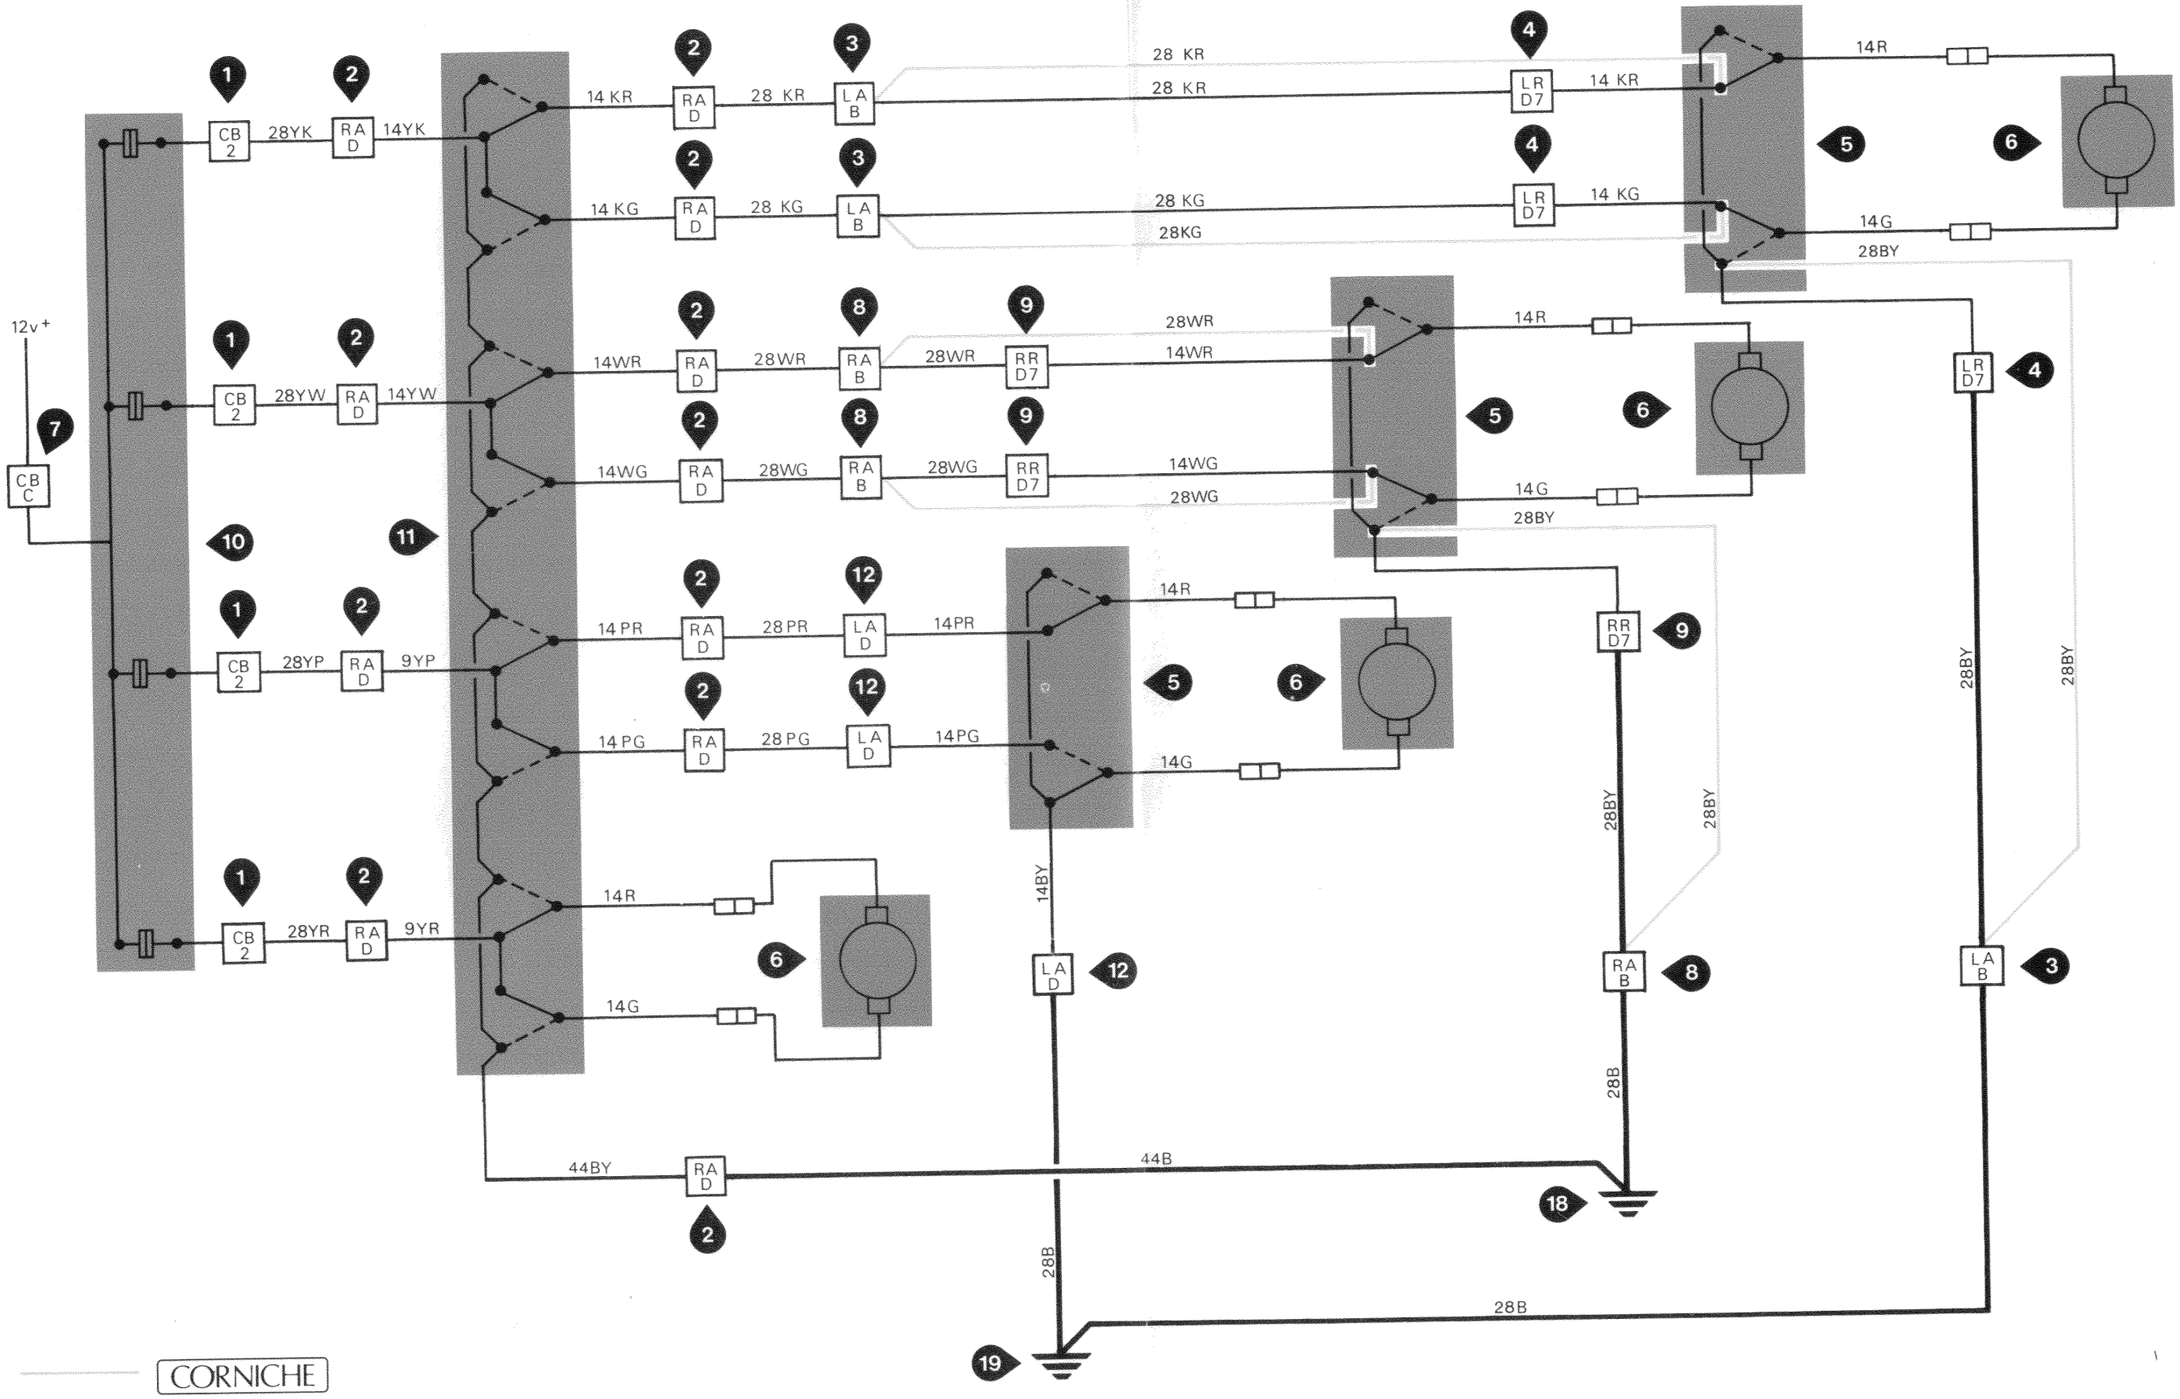
12v +
CB C
CB 2
28YK
RA D
14YK
14 KR
28 KR
LA B
LR D7
14 KR
14R
14 KG
28 KG
14G
28BY
28KG
14WR
28WR
RA B
RR D7
14WG
28WG
14 PR
28PR
LA D
14PR
14 PG
28PG
14PG
28YW
14YW
28YP
9YP
28YR
9YR
44BY
44B
28B
14BY

CORNICHE

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Component location

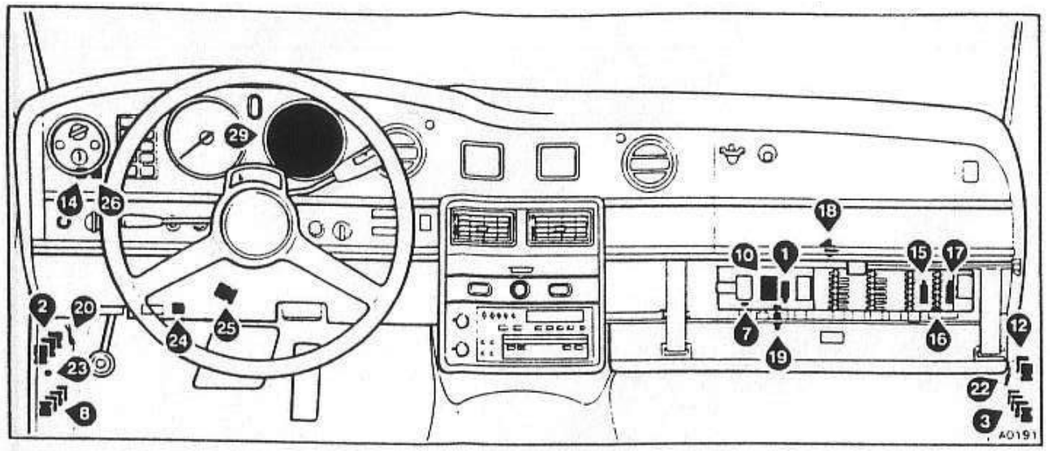
A0191

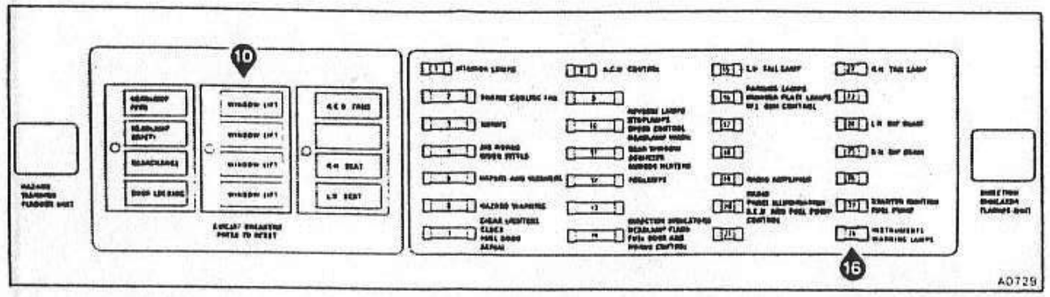
A0729

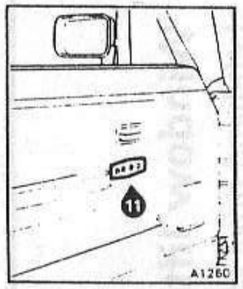
A1260

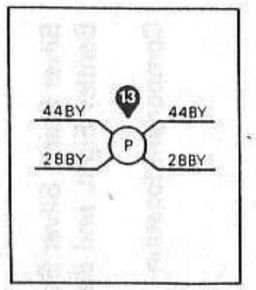
44BY
44BY
P
28BY
28BY

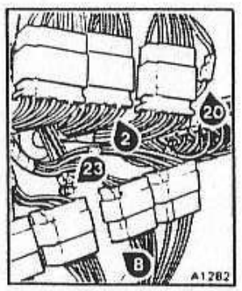
A1282

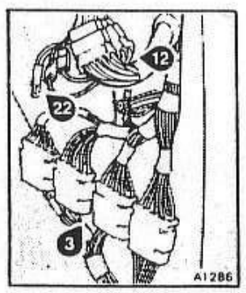
A1286

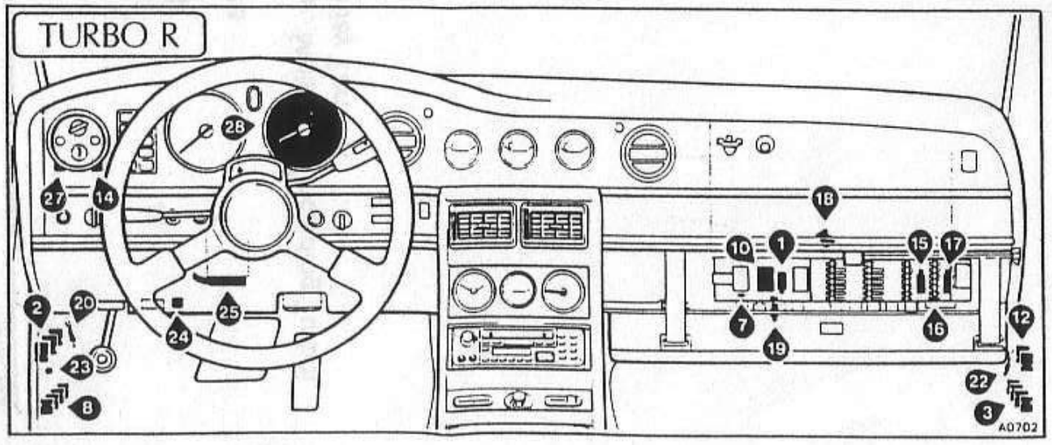
TURBO R
A0702

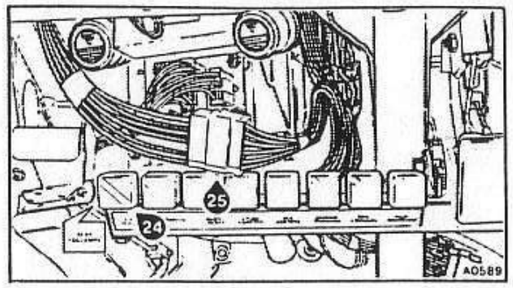
A0589

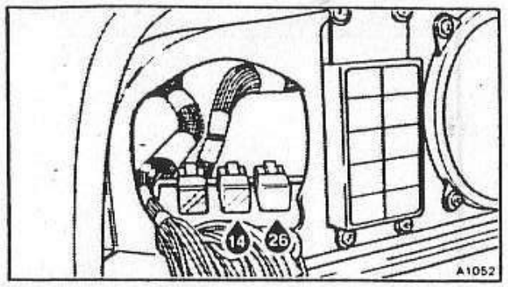
A1052

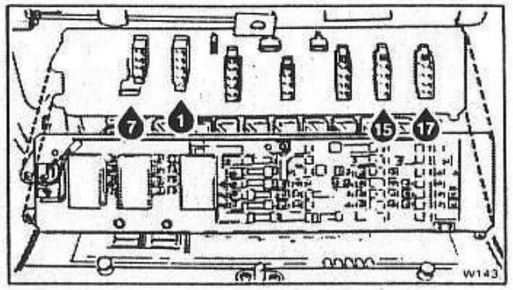
W143

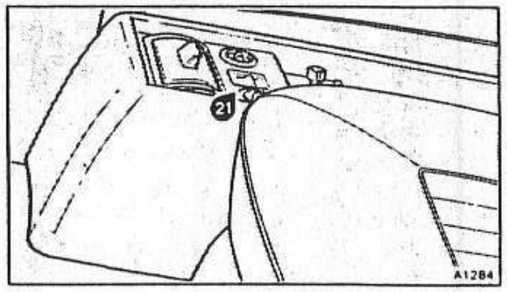
A1284

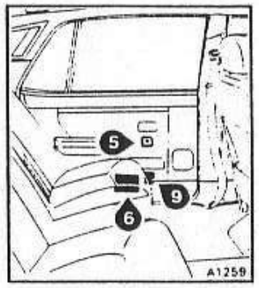
A1259

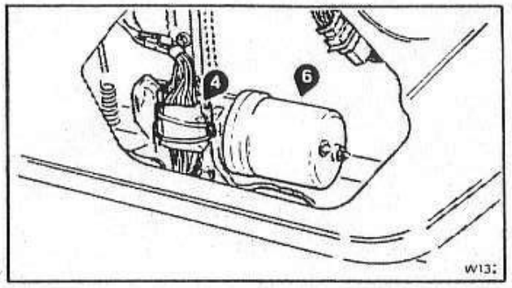
W13:

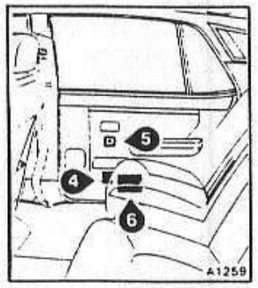
A1259

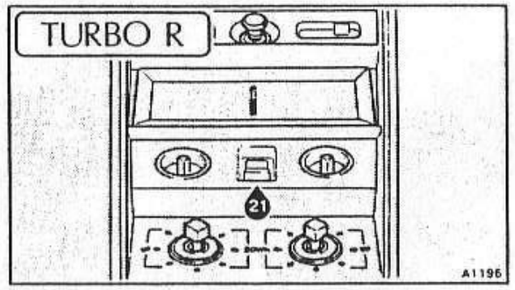
TURBO R
A1196

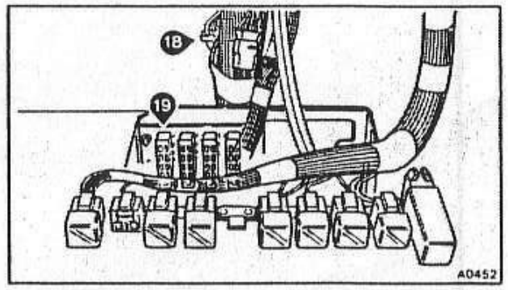
A0452

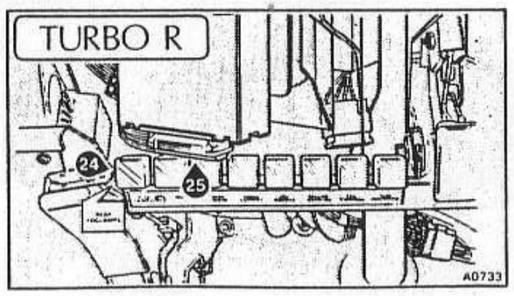
TURBO R
A0733

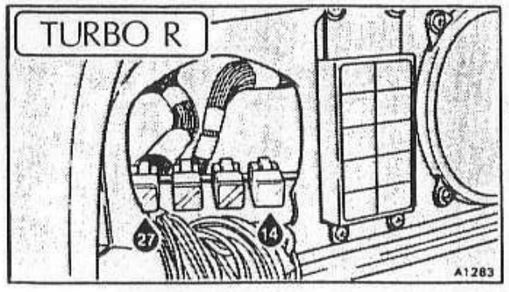
TURBO R
A1283

Window lifts

Left-hand drive cars

Silver Spirit, Silver Spur, Mulsanne (including Turbo), Bentley Eight, and Bentley Turbo R

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

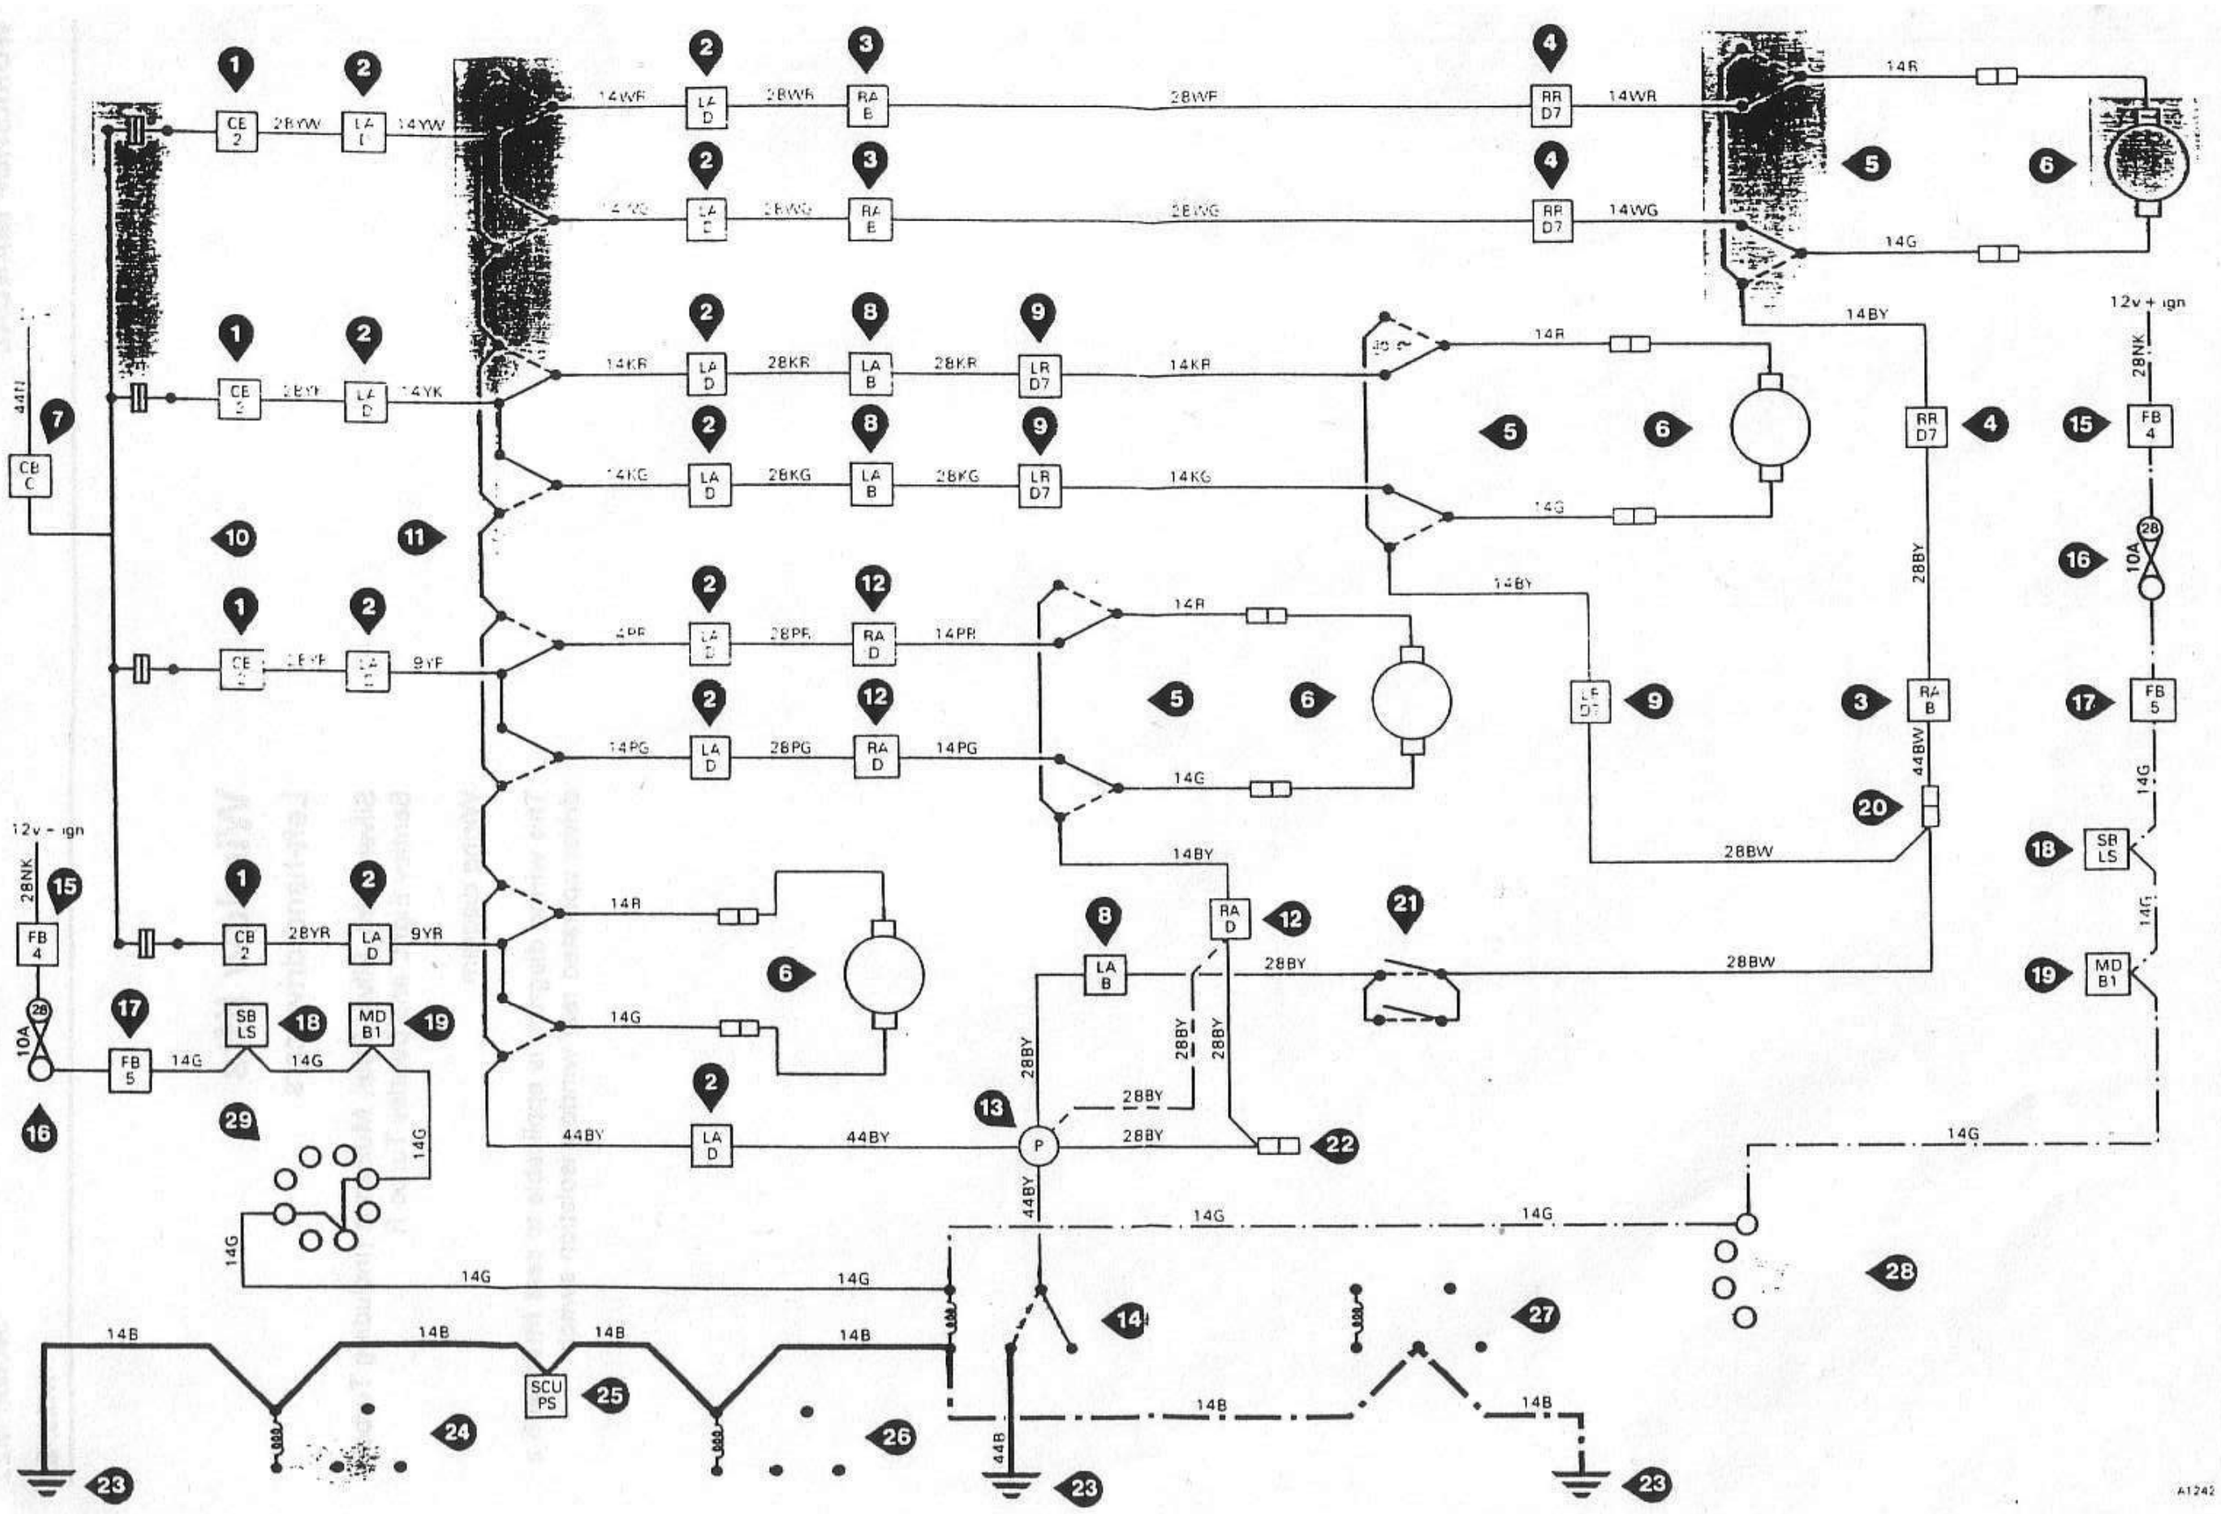
CB 2
LA D
LA B
RA B
RR D7
LR D7
RA D
CB C
FB 4
FB 5
SB LS
MD B1
SCU PS
12v + ign
12v - ign
10A
28YW
14YW
14WR
28WR
28WG
14WG
14KR
28KR
14YK
28YR
9YR
14KG
28KG
14PR
28PR
14PG
28PG
44BY
14R
14G
14BY
28BY
28BW
44BW
28NK
14B
44B
A1242

Window lifts

Left-hand drive cars
Corniche/Continental

Component location

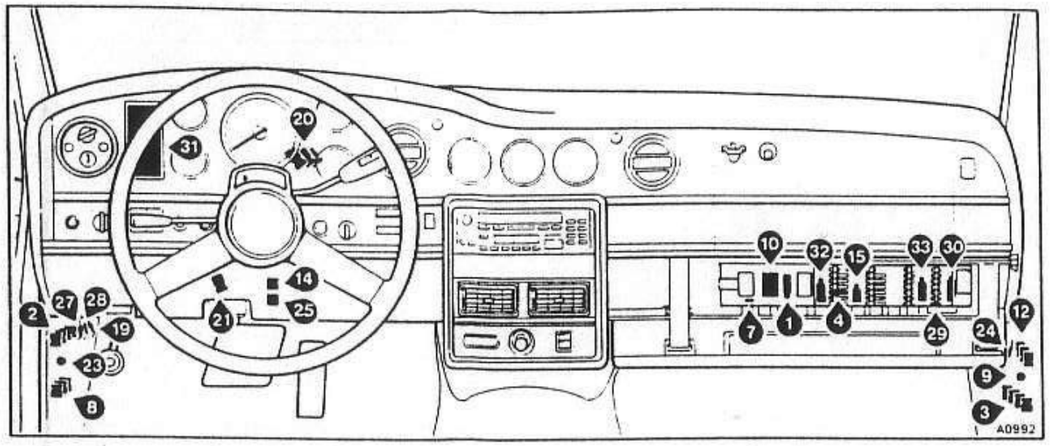
A0992

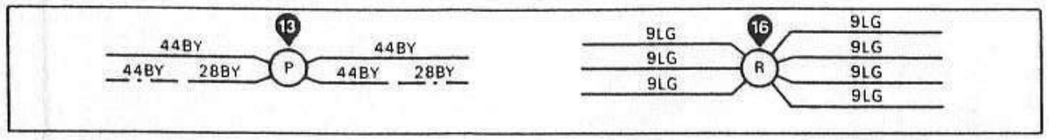
44BY
44BY
28BY
P
44BY
44BY
28BY
9LG
9LG
9LG
R
9LG
9LG
9LG
9LG

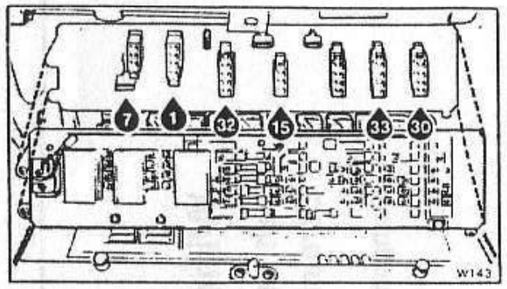
W143

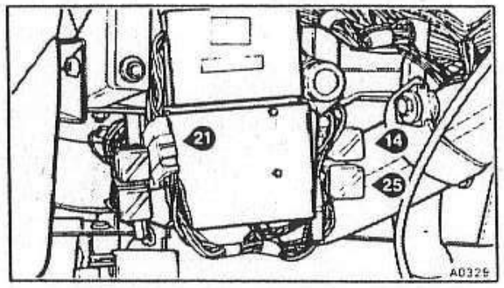
A0326

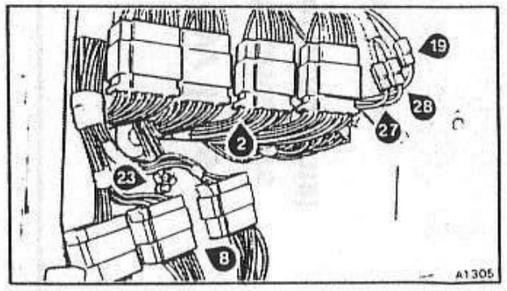
A1305

A1307

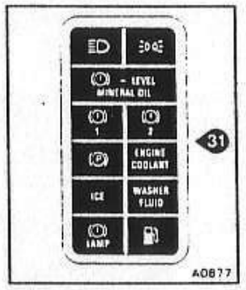
- LEVEL
MINERAL OIL
ENGINE
COOLANT
ICE
WASHER
FLUID
LAMP
A0877

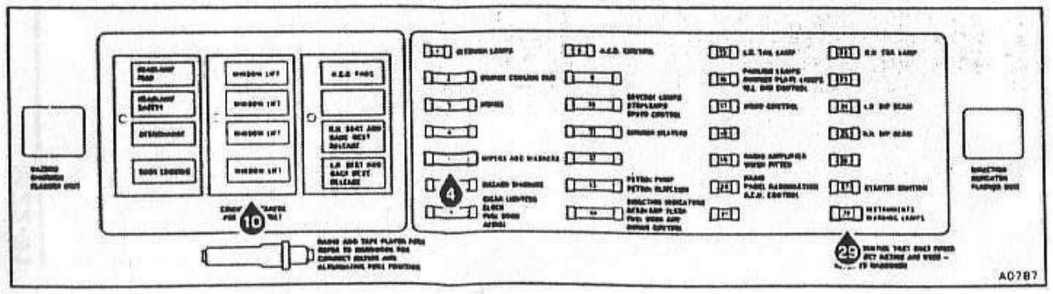
A0787

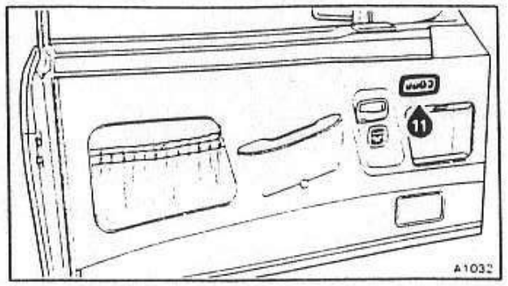
A1032

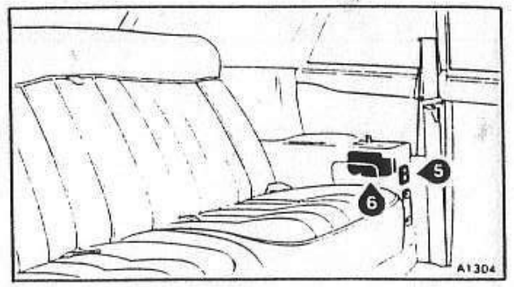
A1304

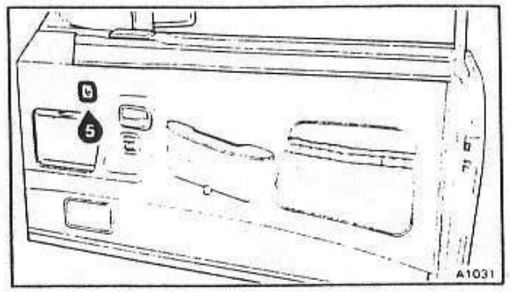
A1031

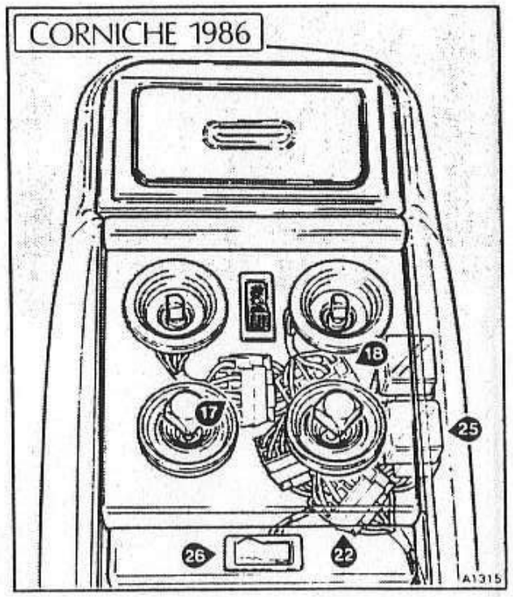
CORNICHE 1986
A1315

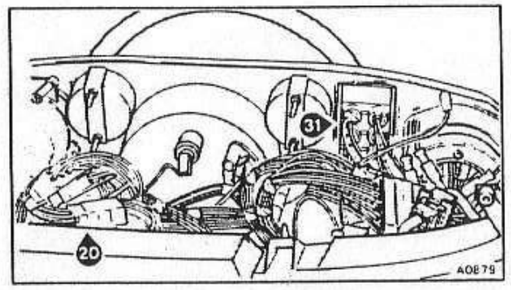
A0879

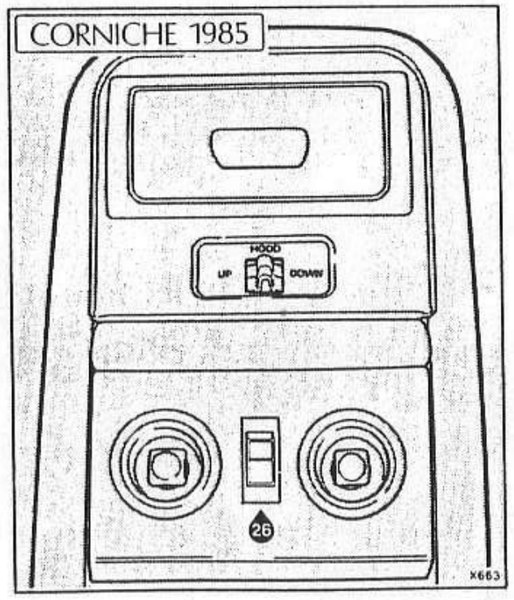
CORNICHE 1985
HOOD
UP
DOWN
X663

Window lifts

Left-hand drive cars
Corniche/Continental

Wiring diagram

This wiring diagram is applicable to cars fitted with a driver operated rear window isolation switch

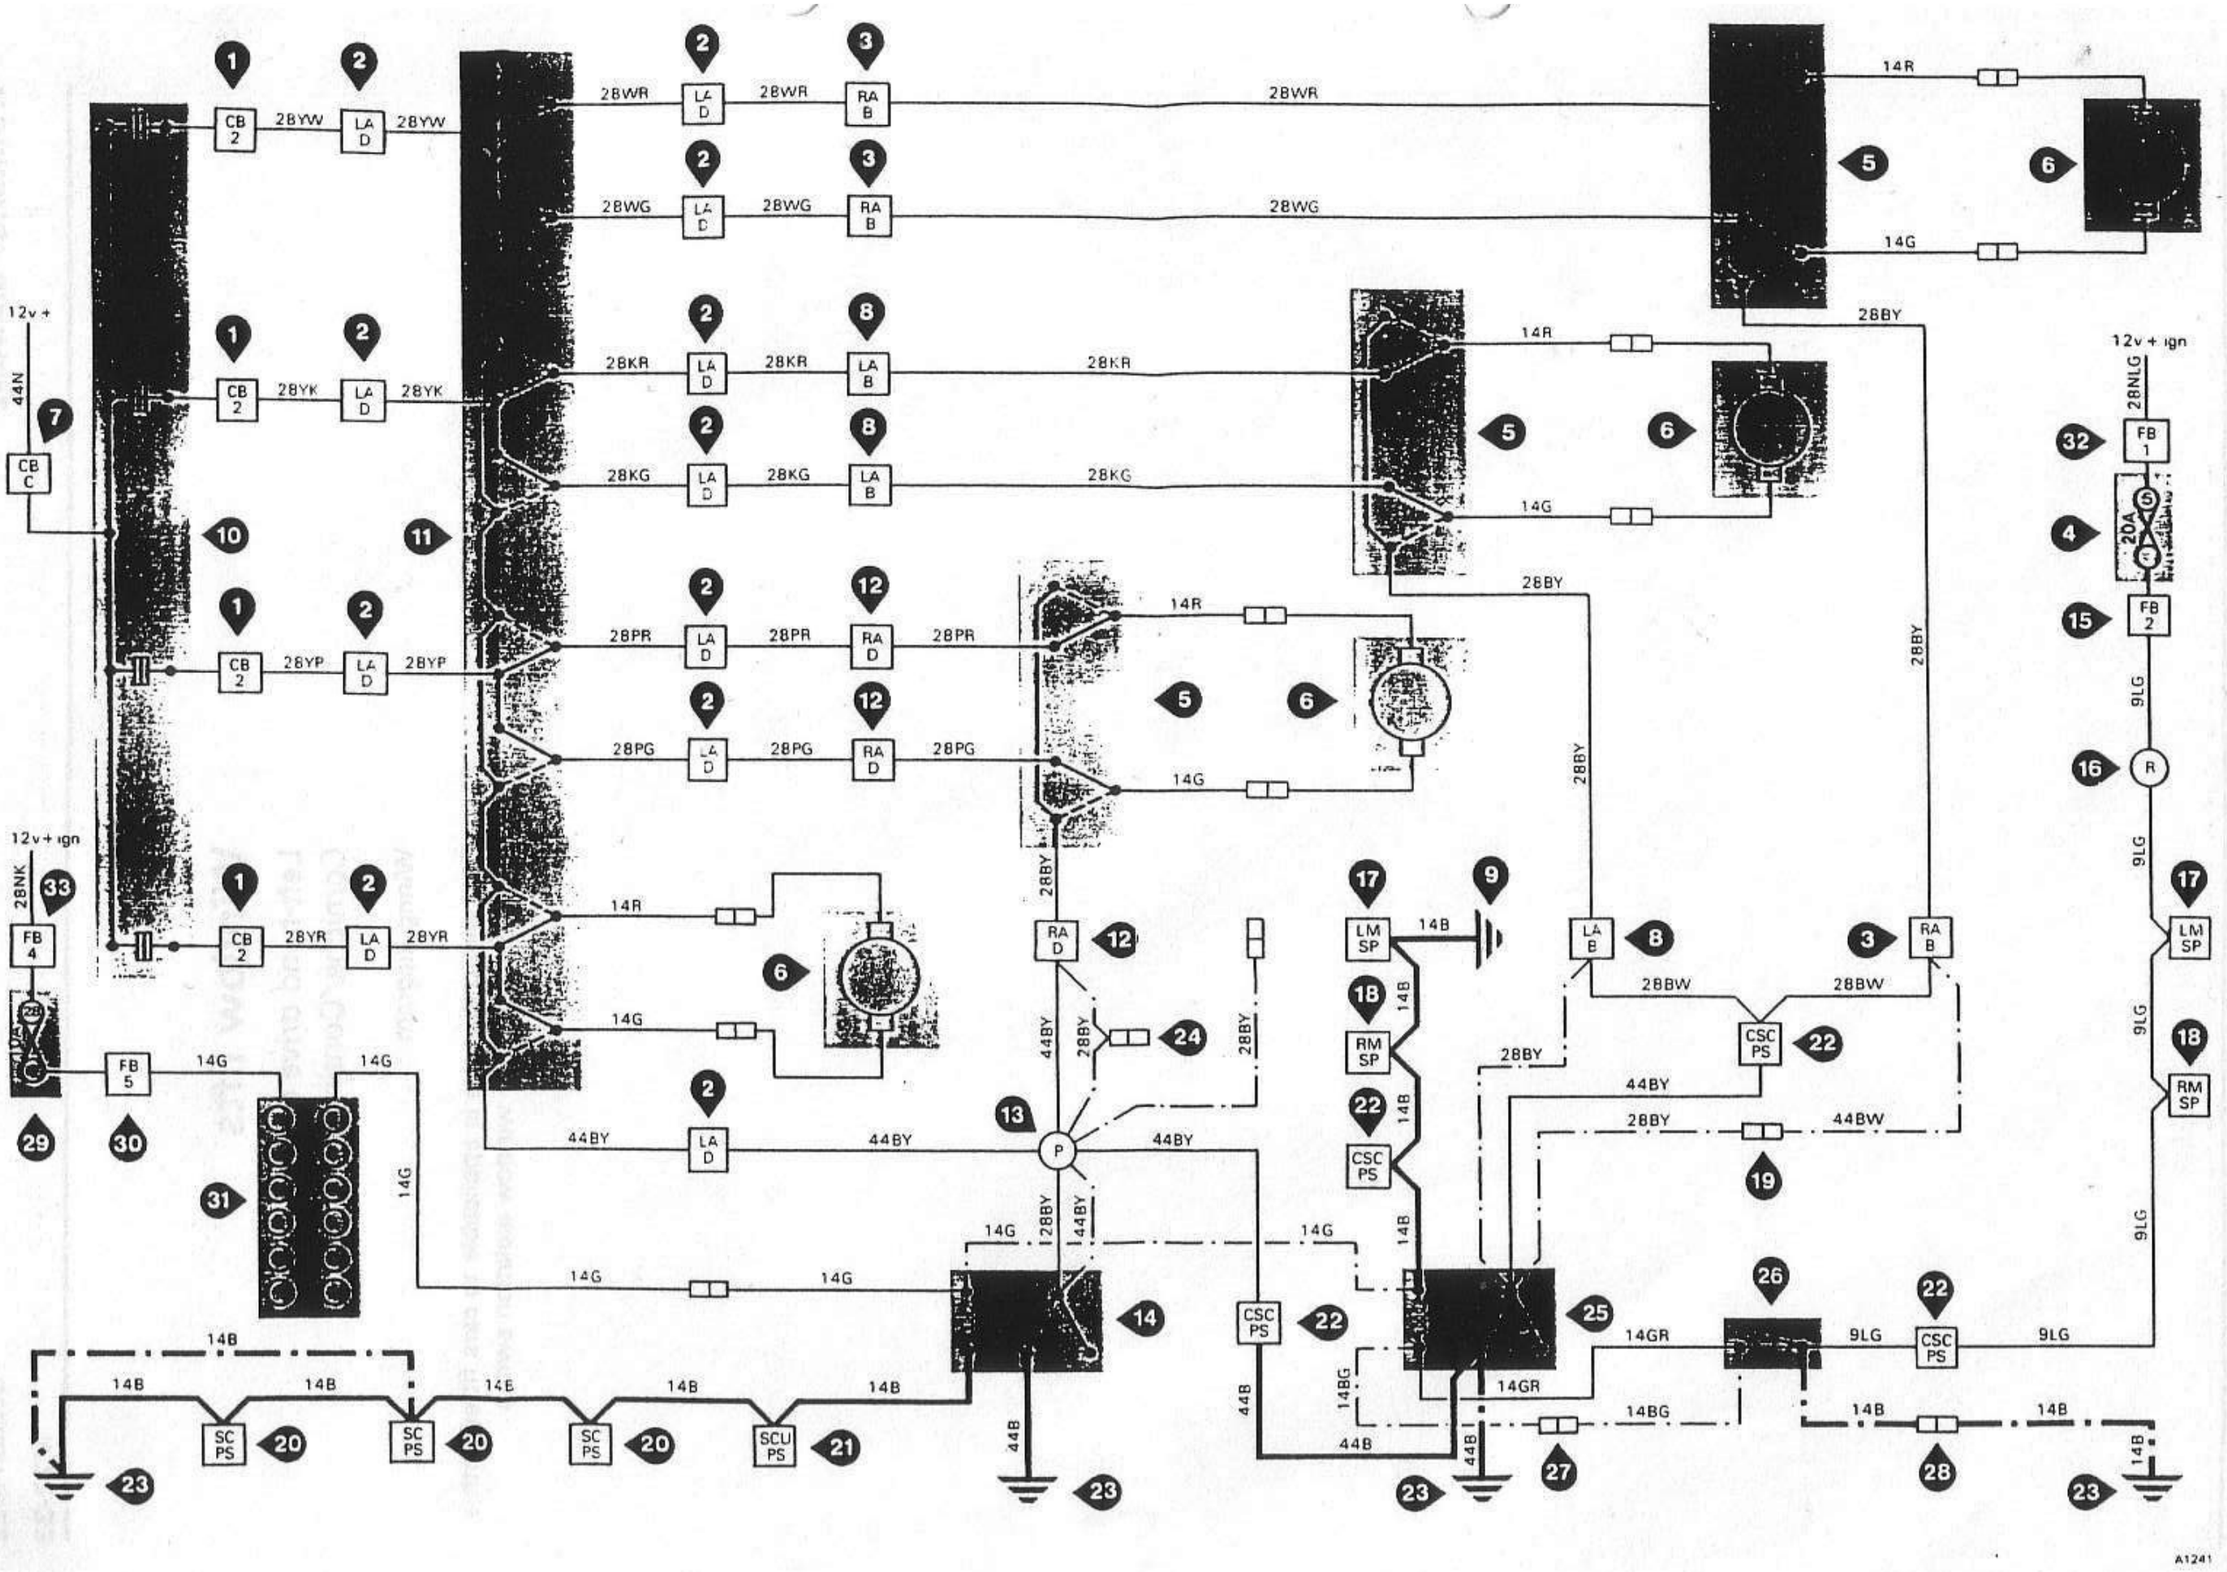
12v +
44N
CB C
CB 2
LA D
RA B
RA D
LA B
FB 1
FB 2
FB 4
FB 5
20A
12v + ign
28NLG
28NK
9LG
LM SP
RM SP
CSC PS
SC PS
SCU PS
28WR
28WG
28KR
28KG
28PR
28PG
28YW
28YK
28YP
28YR
28BY
28BW
14R
14G
14B
14GR
14BG
44BY
44BW
44B
A1241

Division glass lift

Silver Spur cars with a centre division

Component location

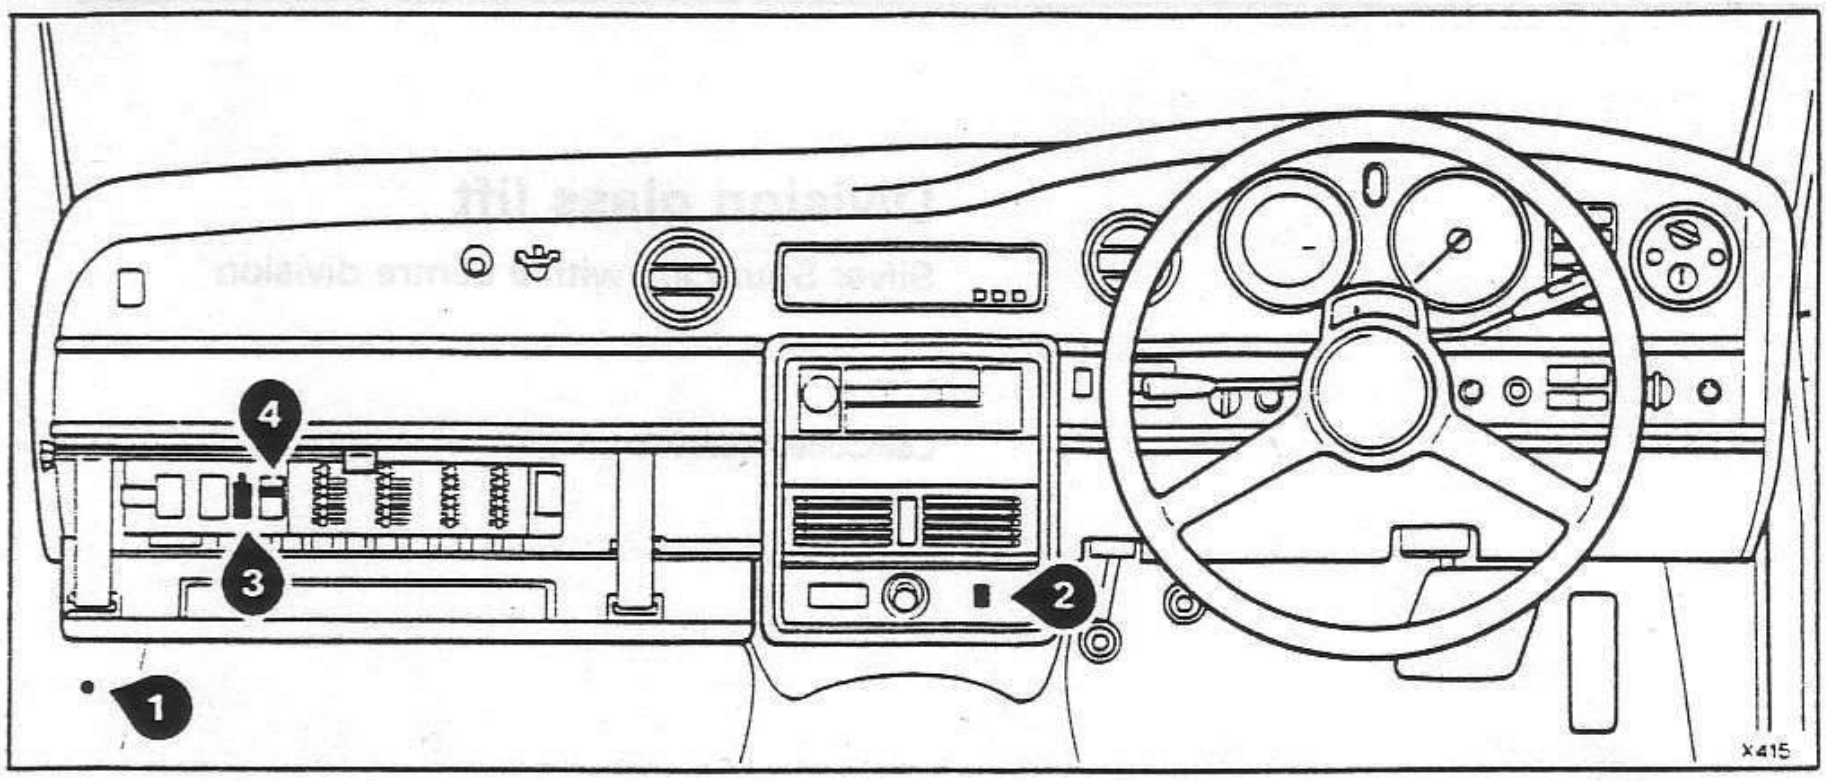
4
3
2
1
X415

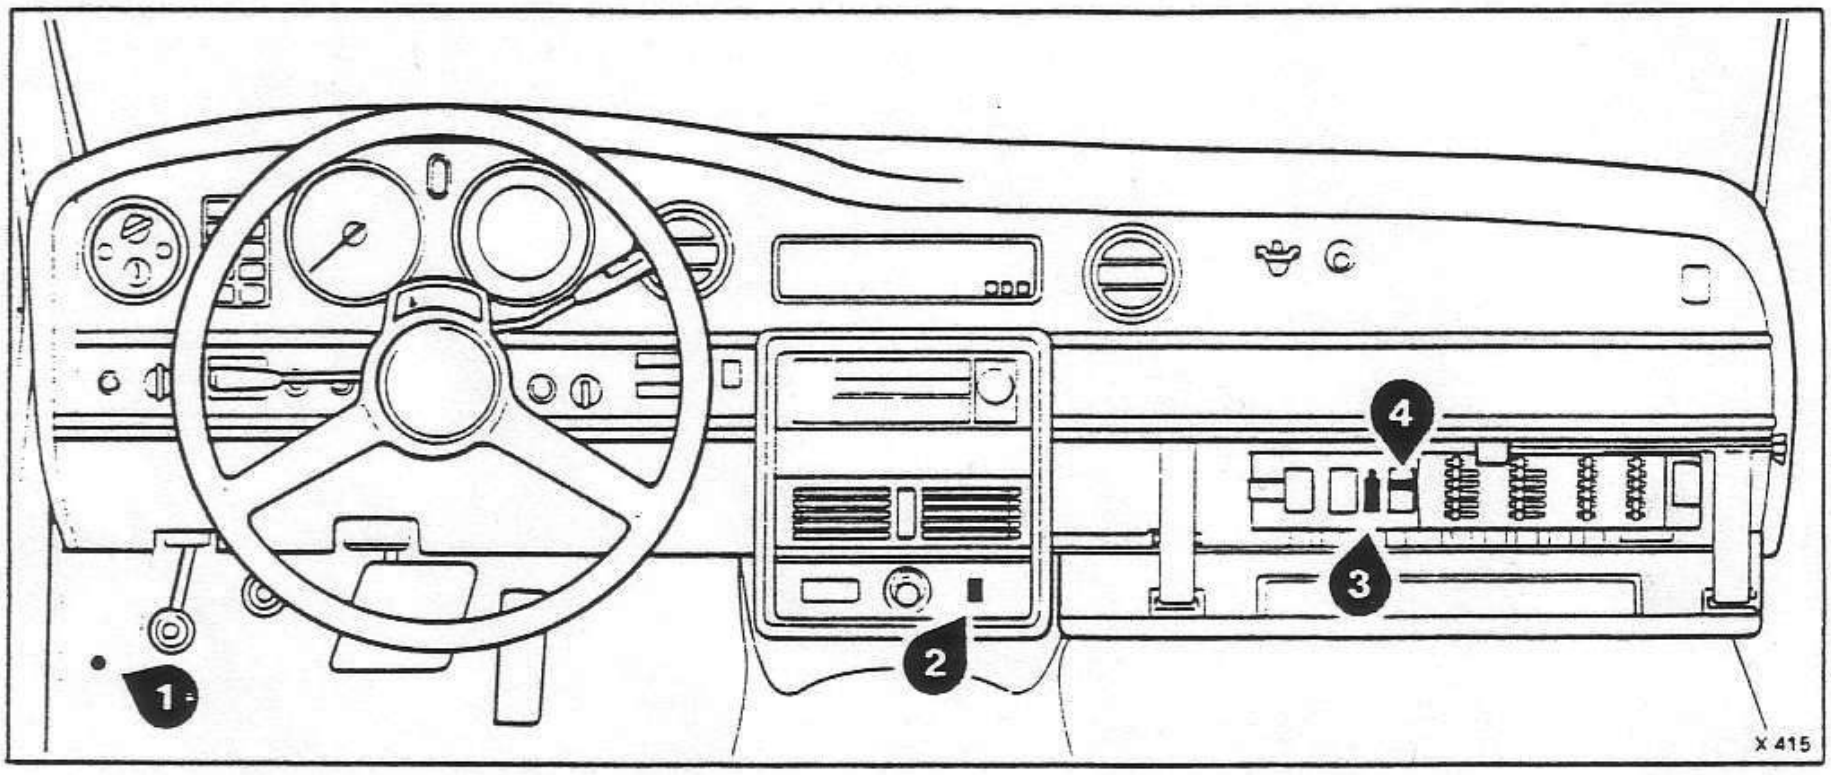
4
3
2
1
X 415

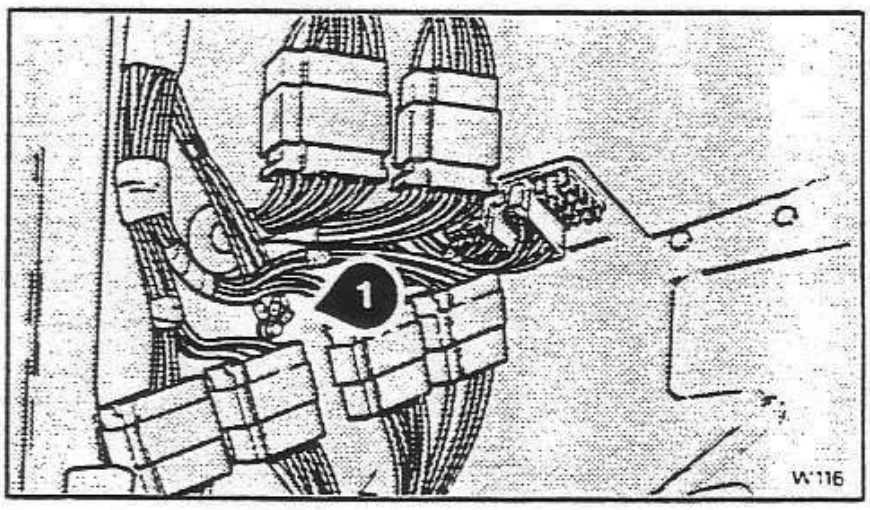
1
W116

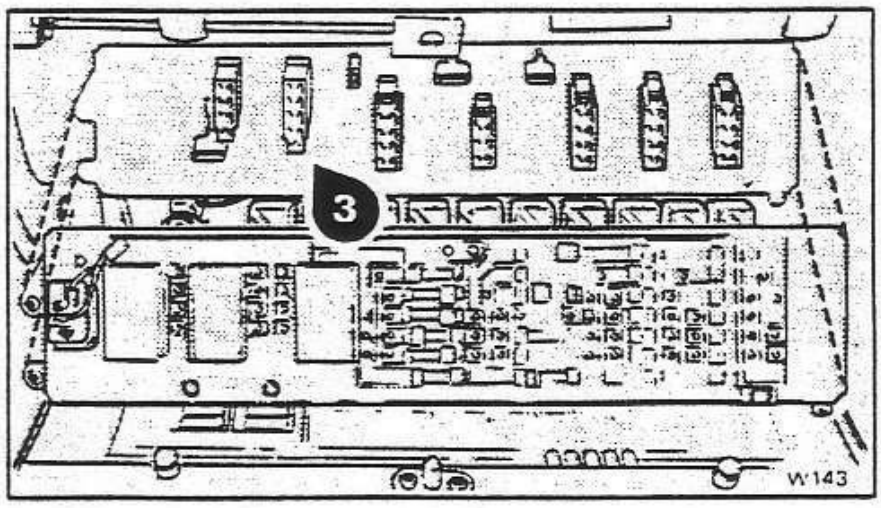
3
W143

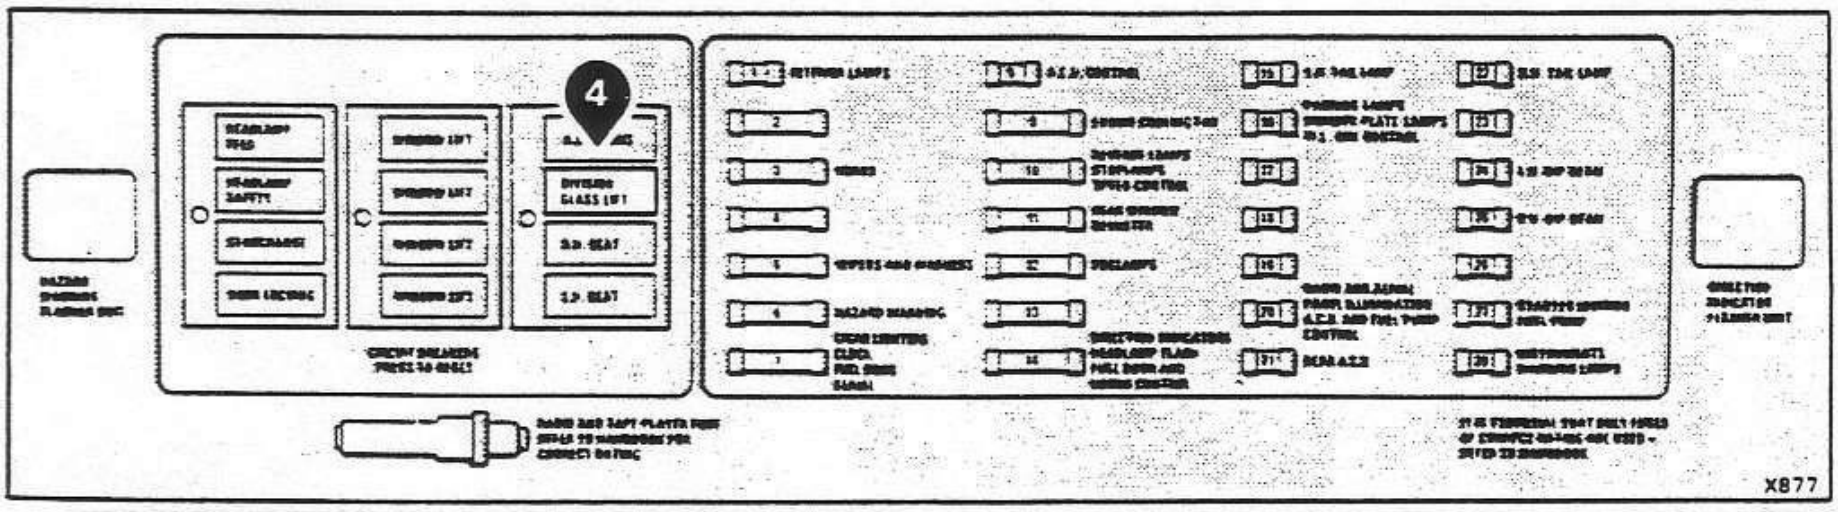
4
X877

Division glass lift

Silver Spur cars with a centre division

Wiring diagram

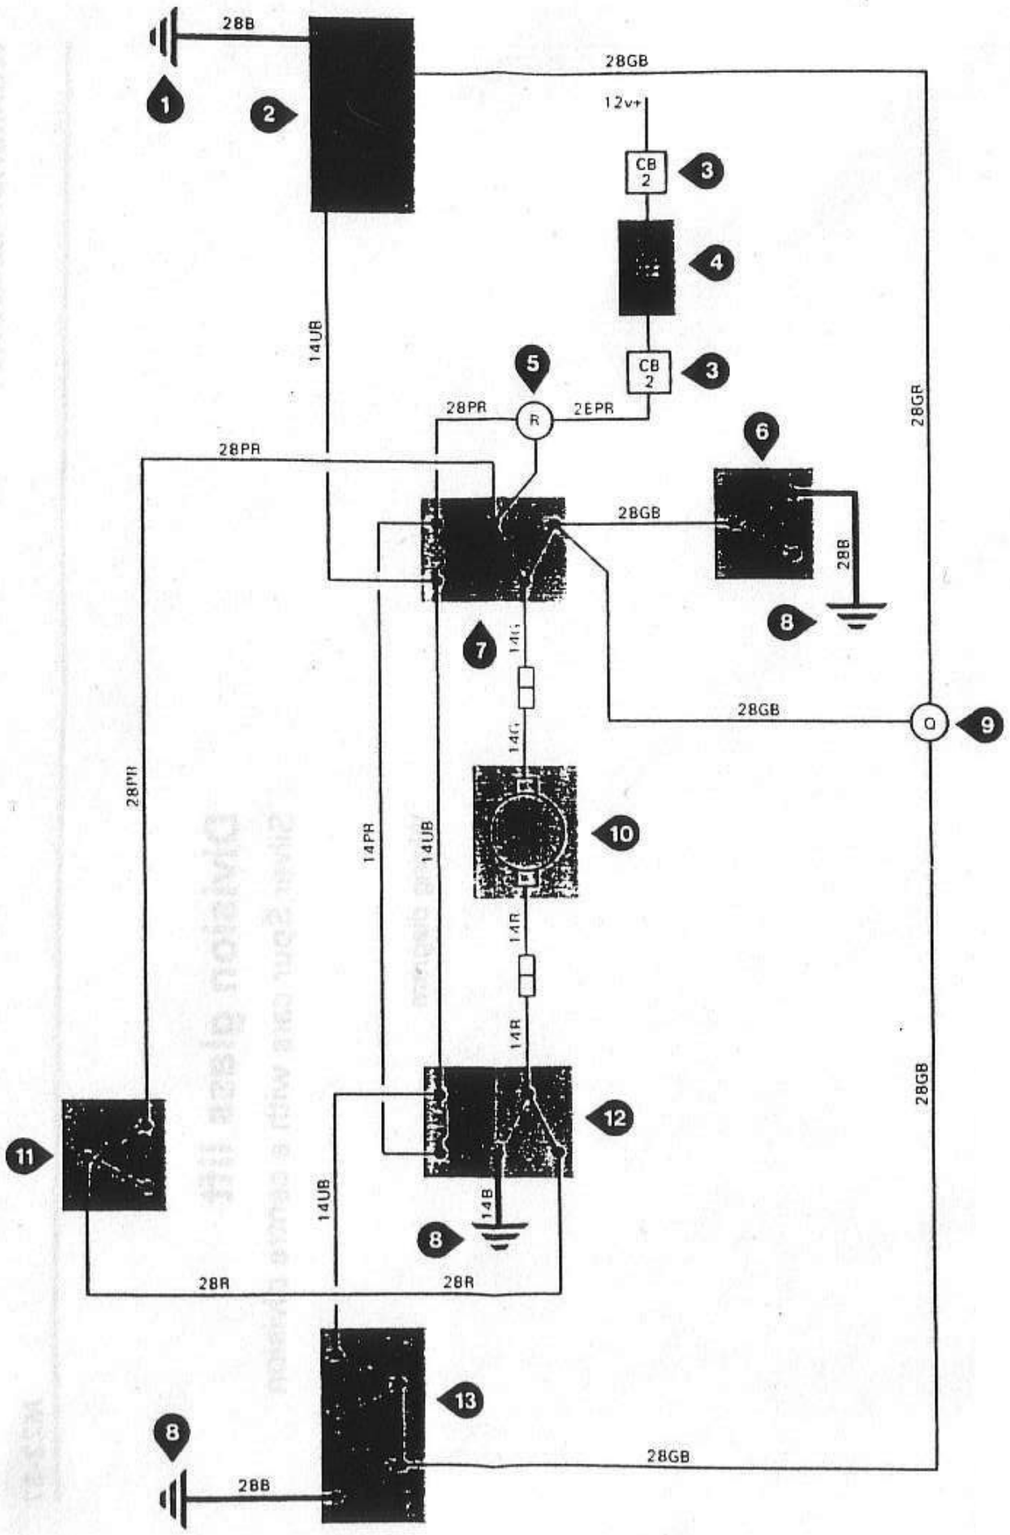
28B
28GB
12v+
CB 2
CB 2
14UB
28PR
2EPR
28PR
28GB
28B
28GB
28PR
14PR
14UB
14R
14R
28GB
14UB
14B
28R
28R
28B
28GB

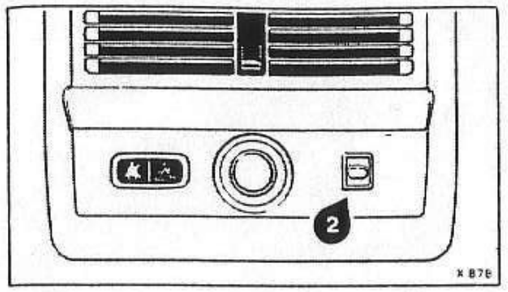
X 876

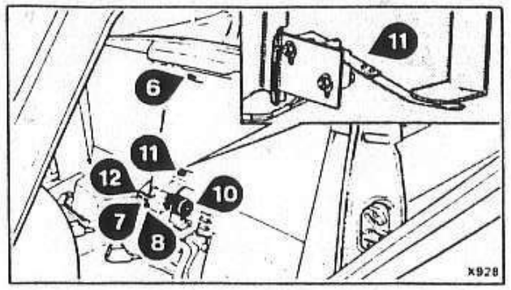
X928

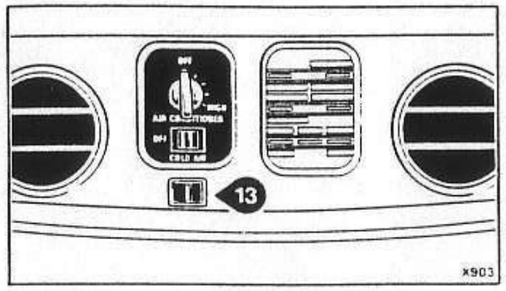
X903

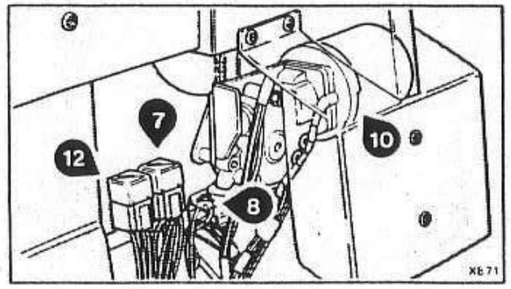
X871

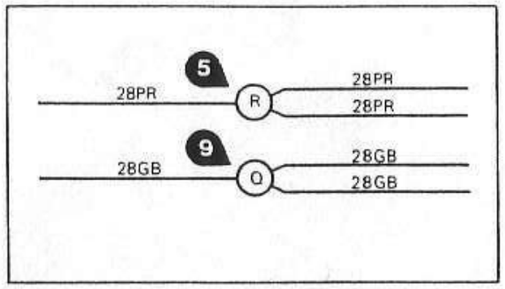
28PR
R
28PR
28PR
28GB
Q
28GB
28GB