
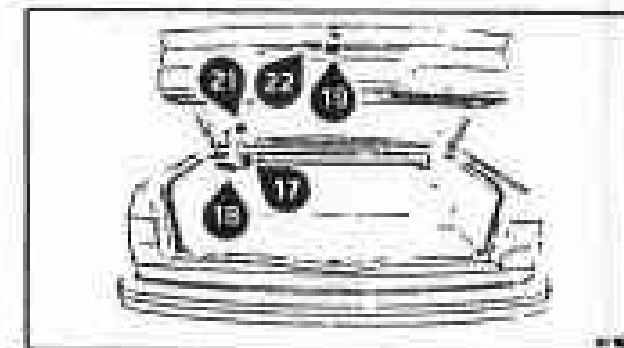
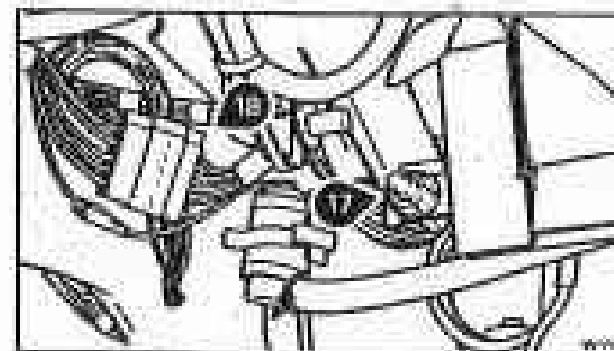
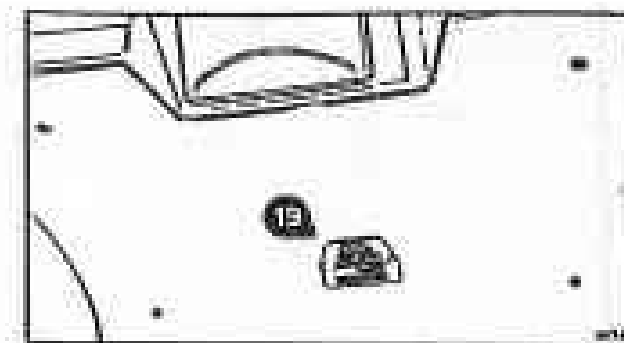
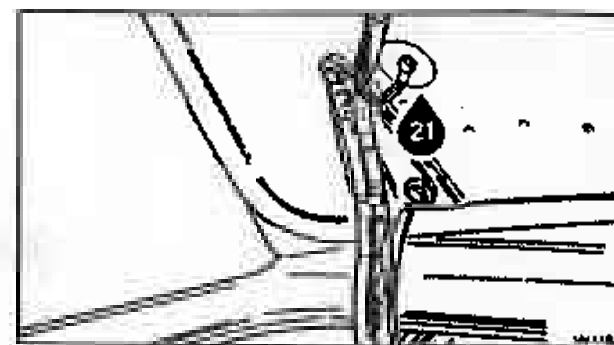


**Facia stowage compartment,
fuseboard, luggage
compartment, and engine
compartment illumination**








Wiring diagram

















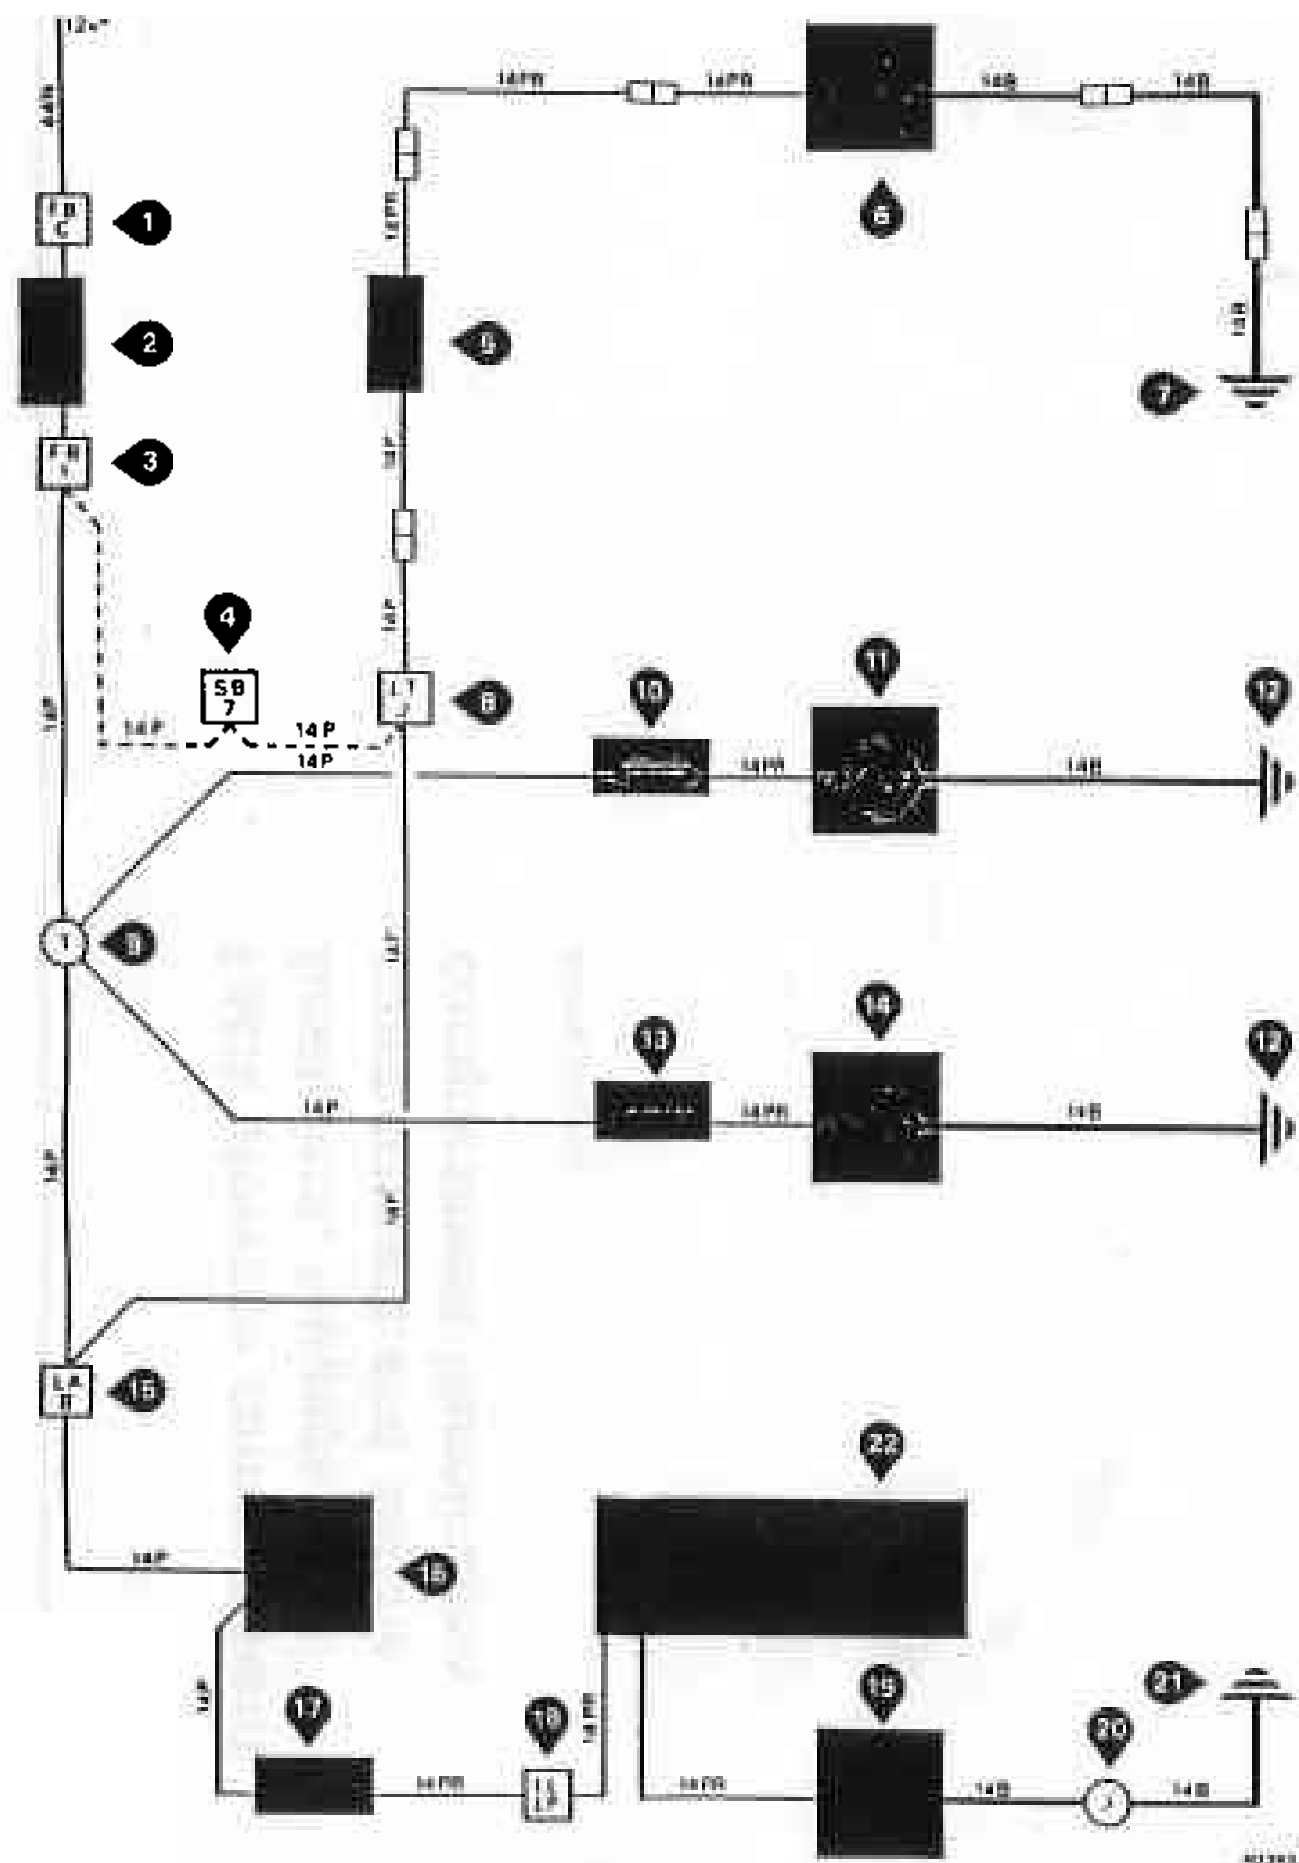


Interior lamps and seat belt warning

Right-hand drive cars

Wiring diagram and component location

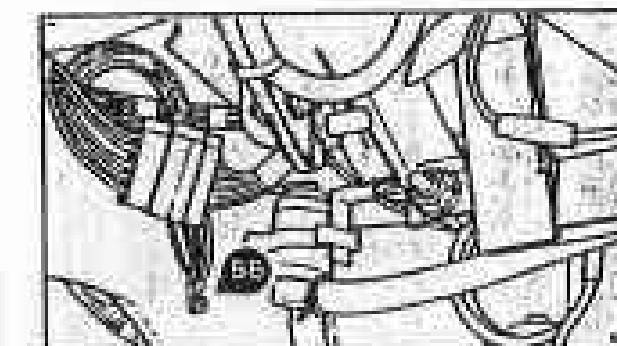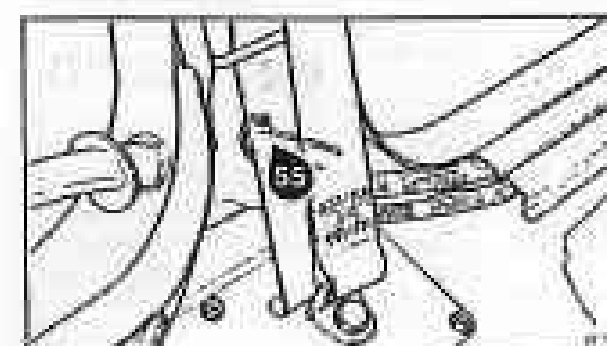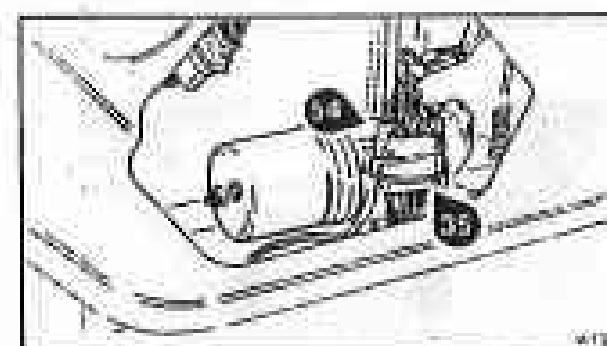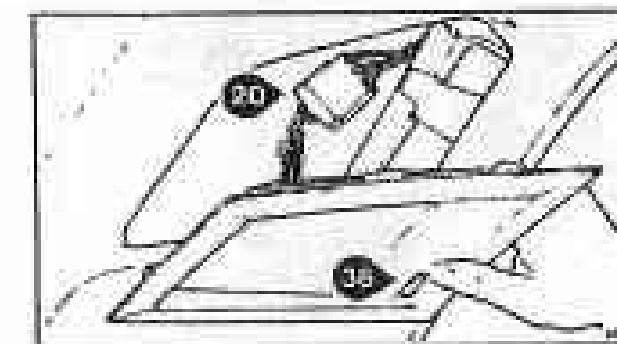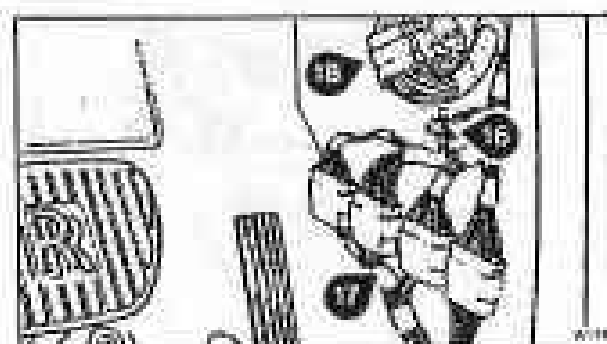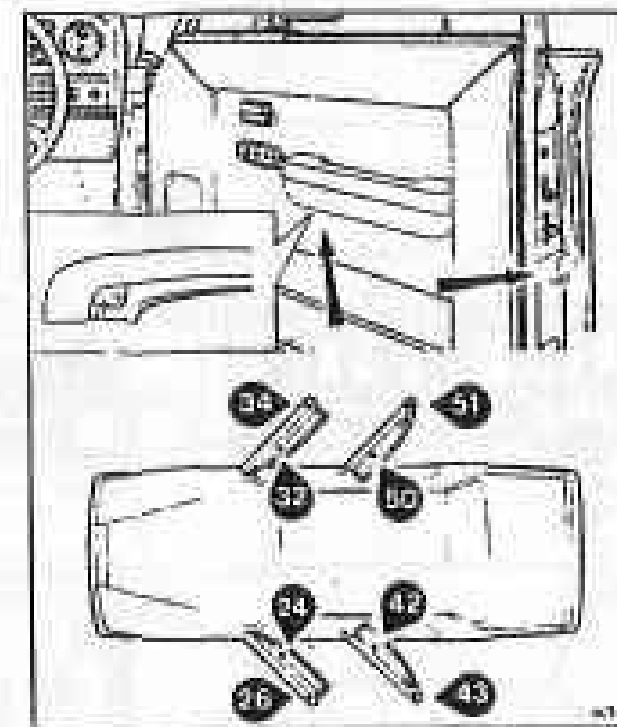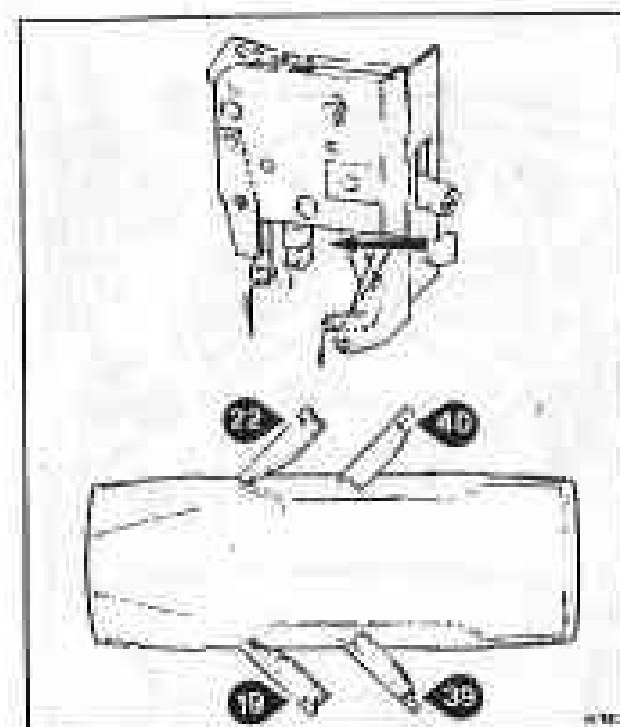


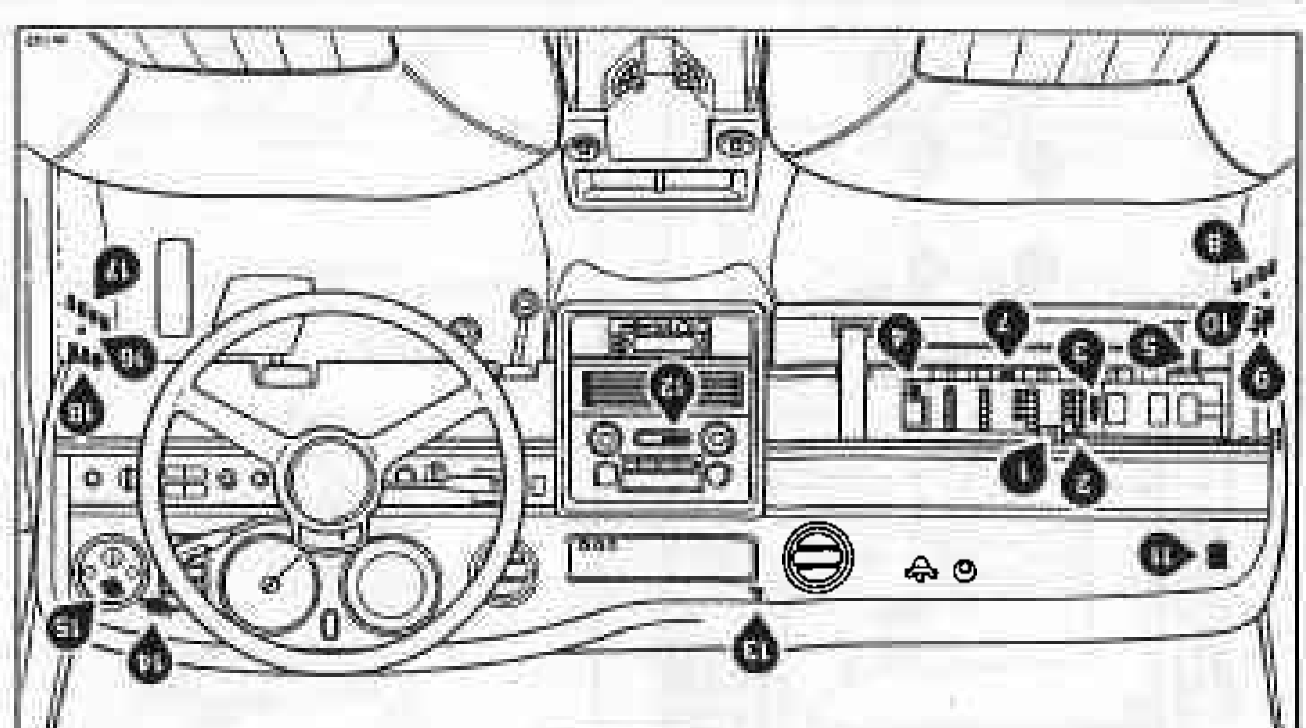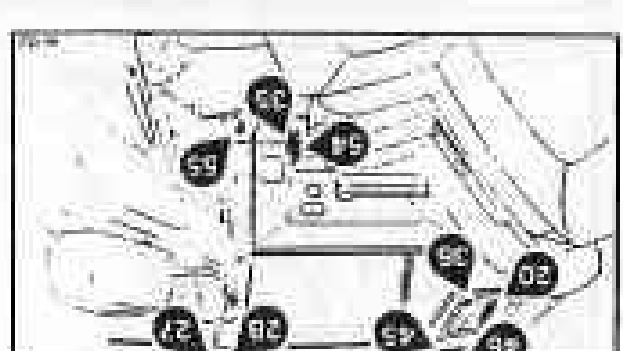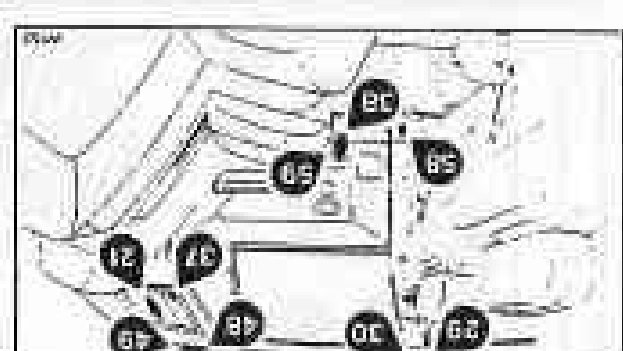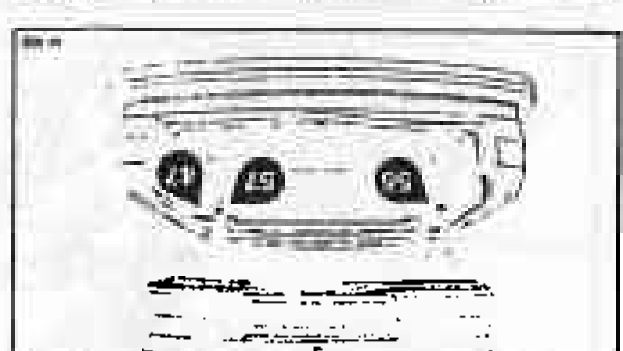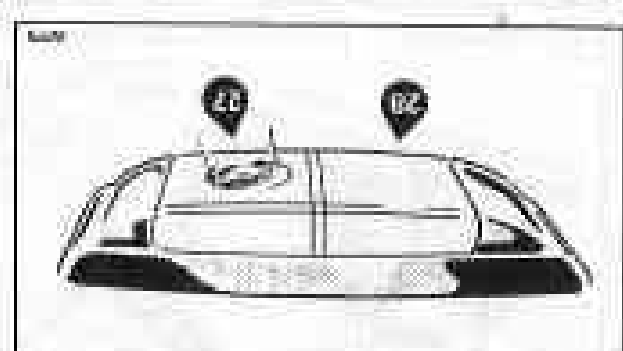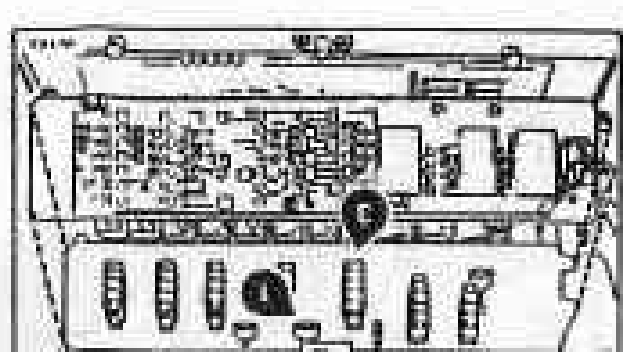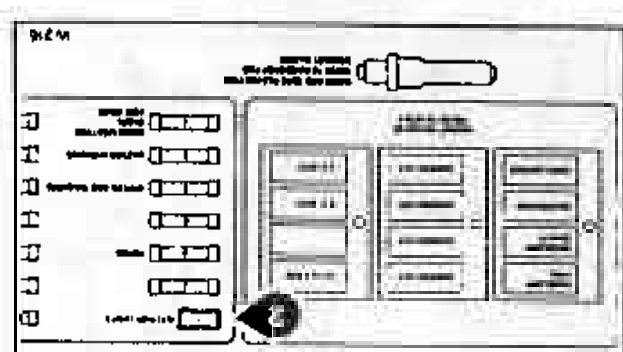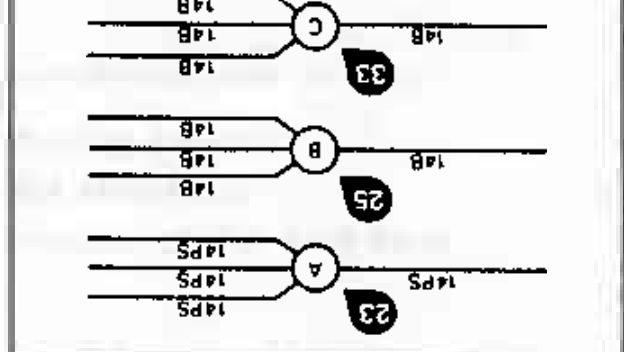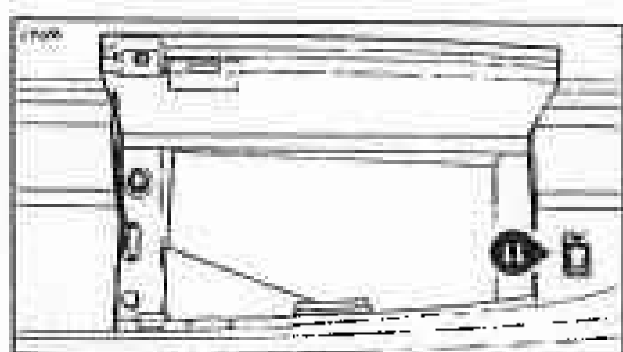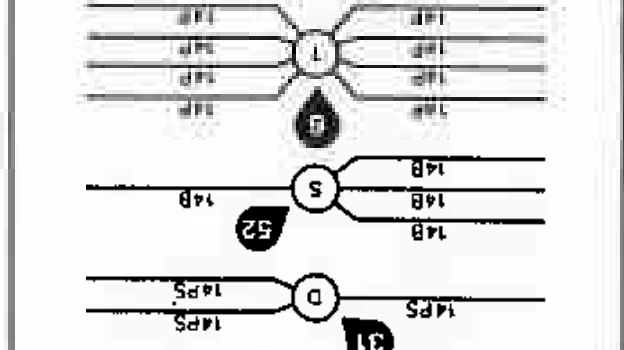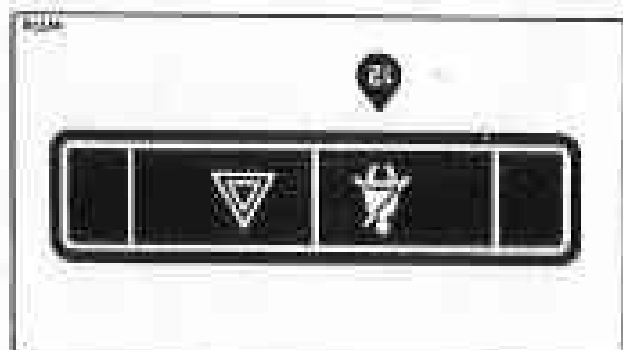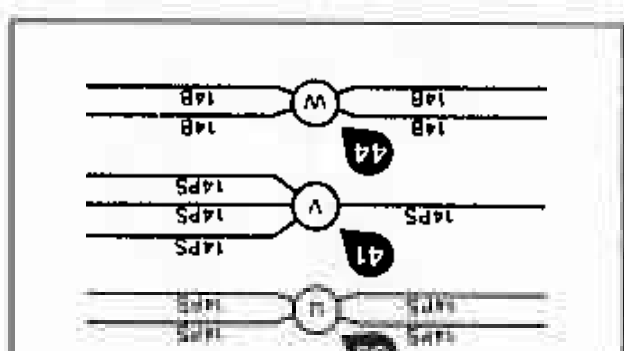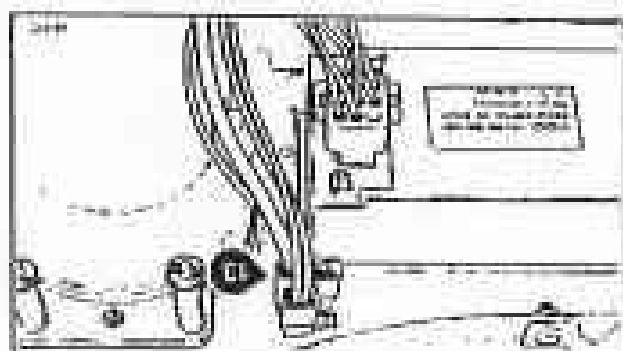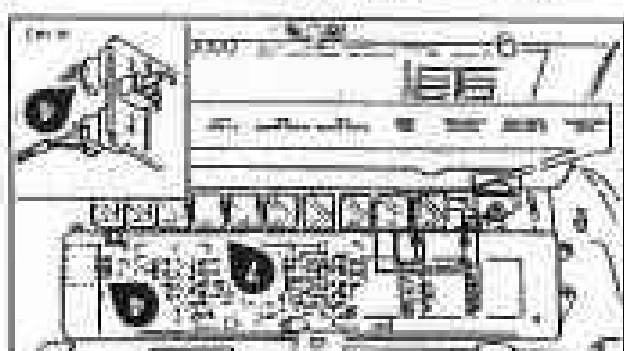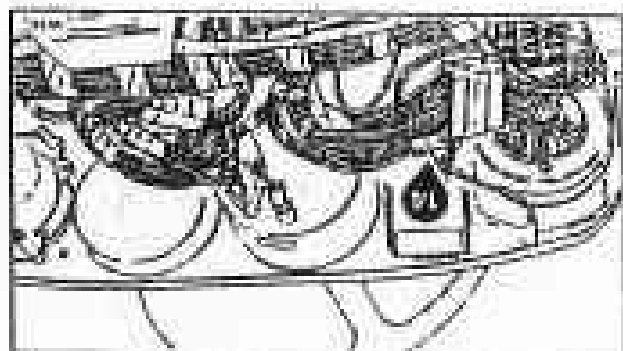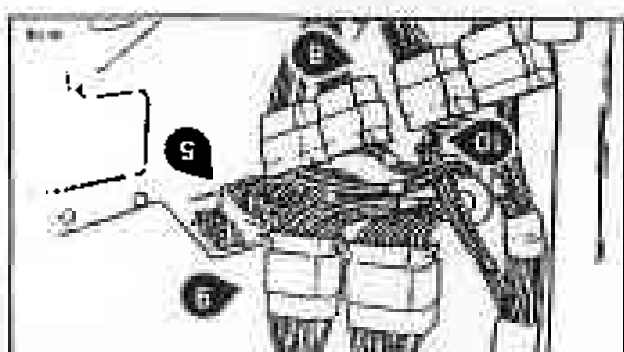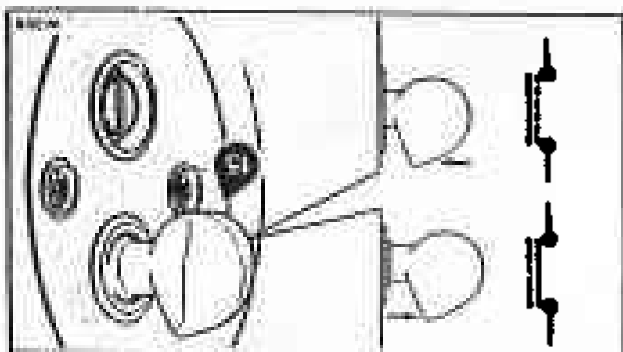

Interior lamps and seat belt warning

Right-hand drive cars








Wiring diagram and component location

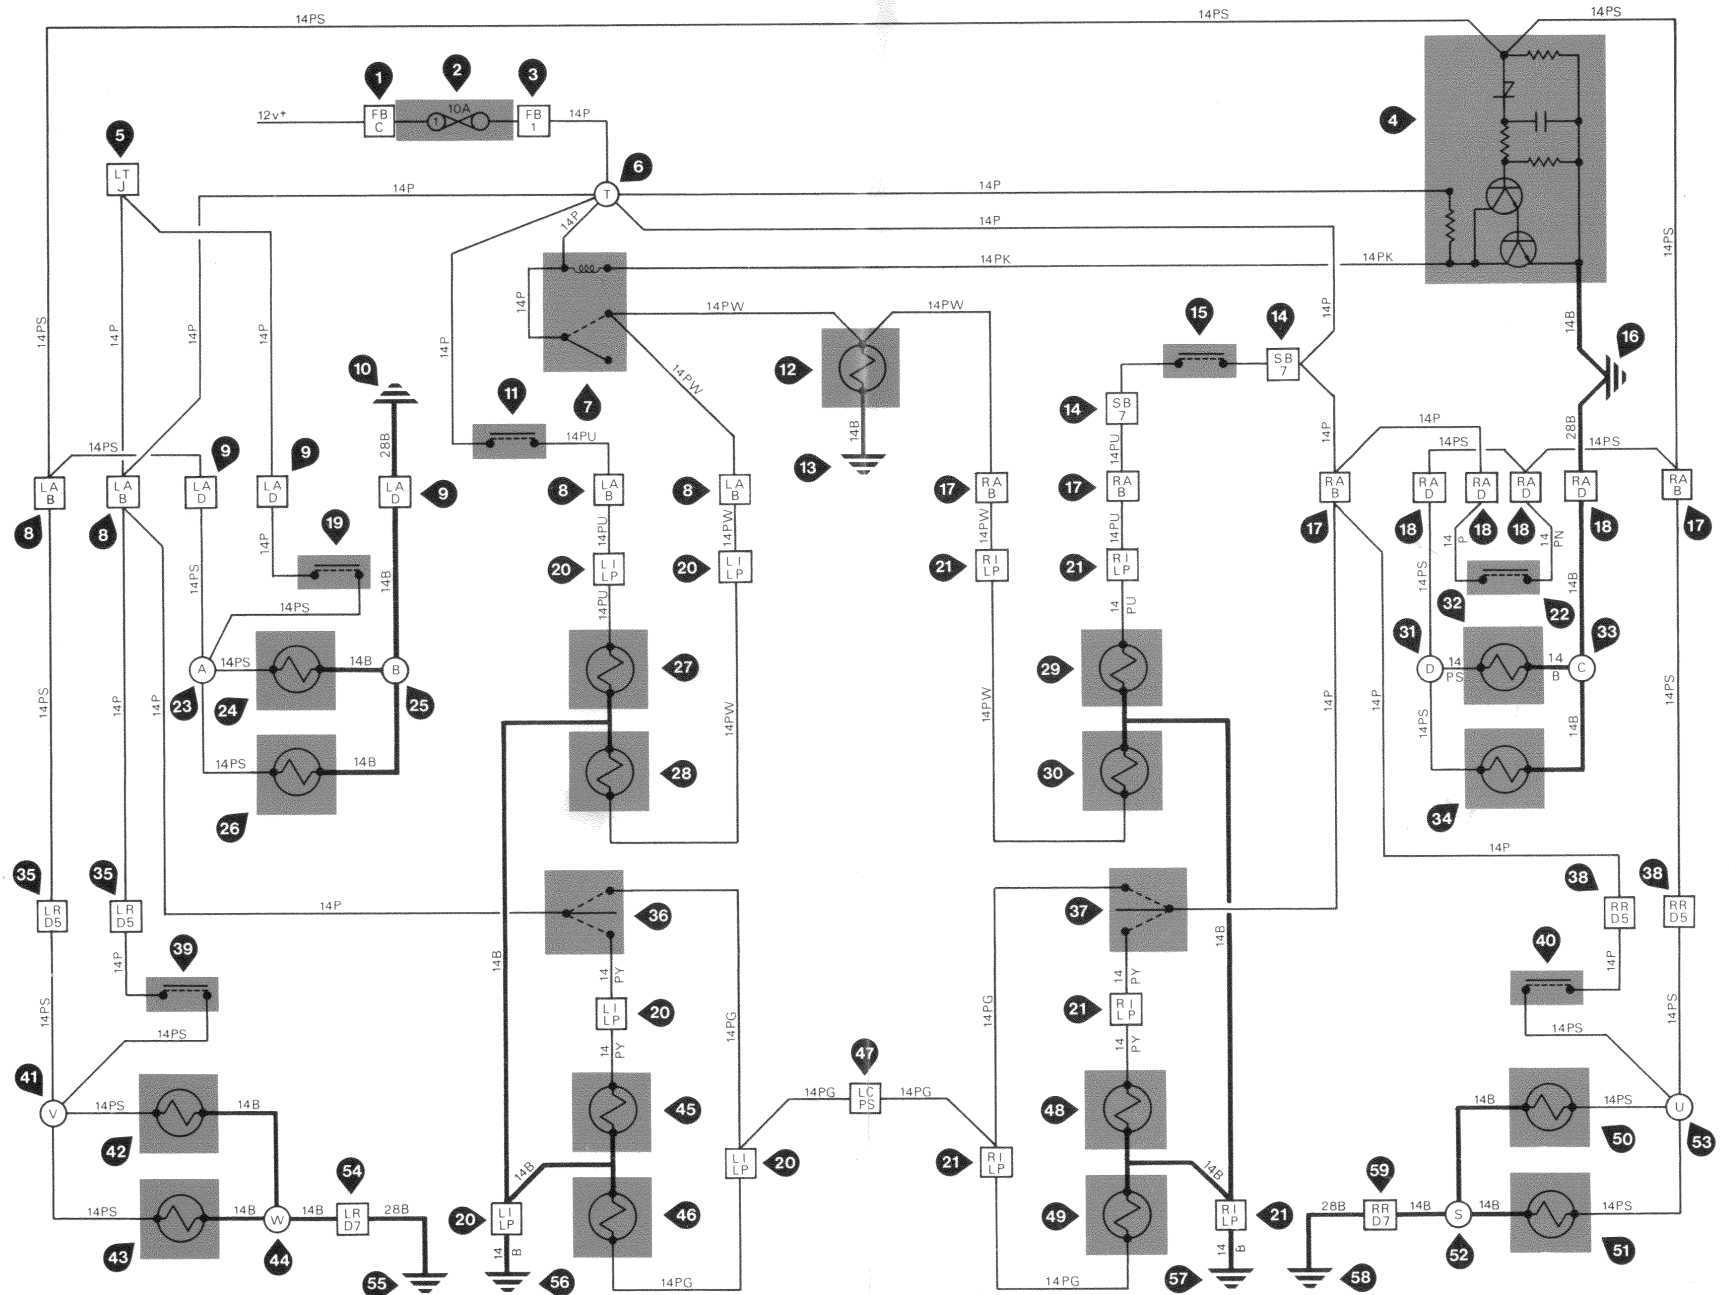

Interior lamps and seat belt warning

Right-hand drive cars


Component location

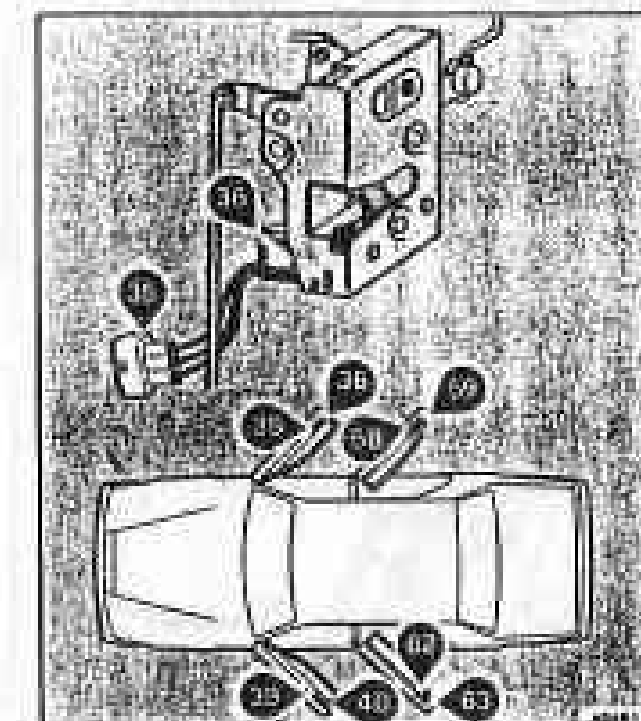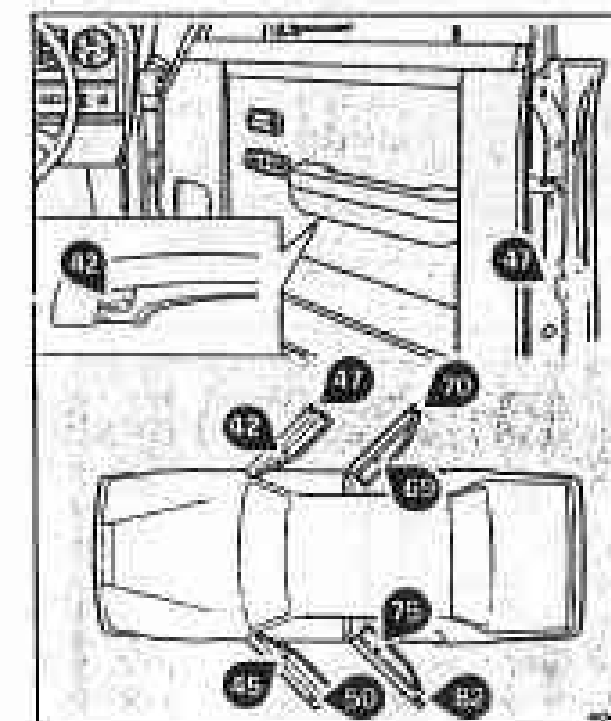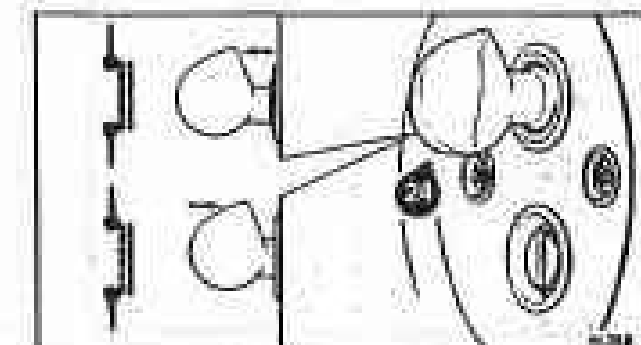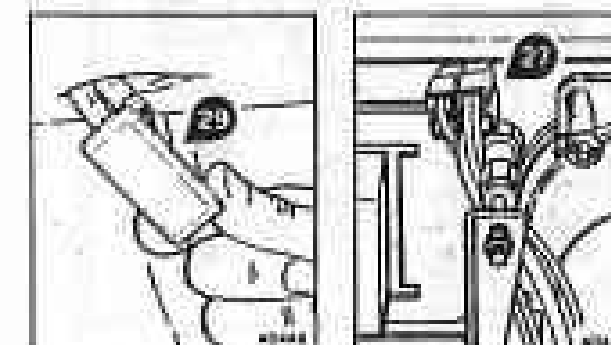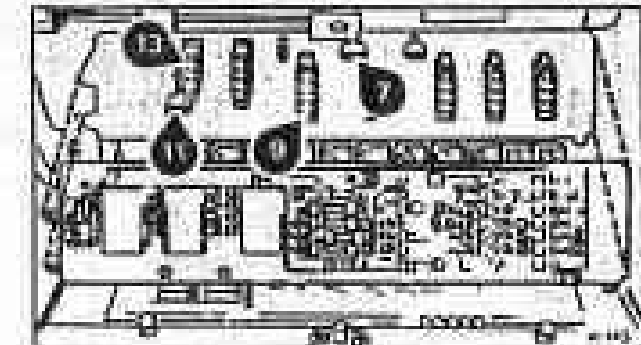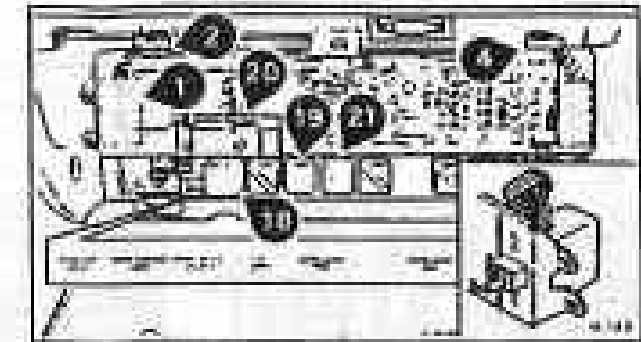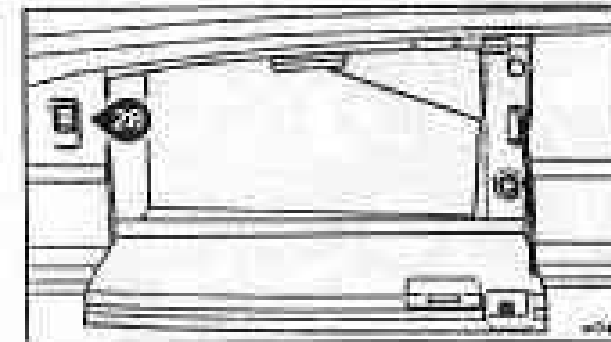

Interior lamps and seat belt warning

Right-hand drive cars

















Component location

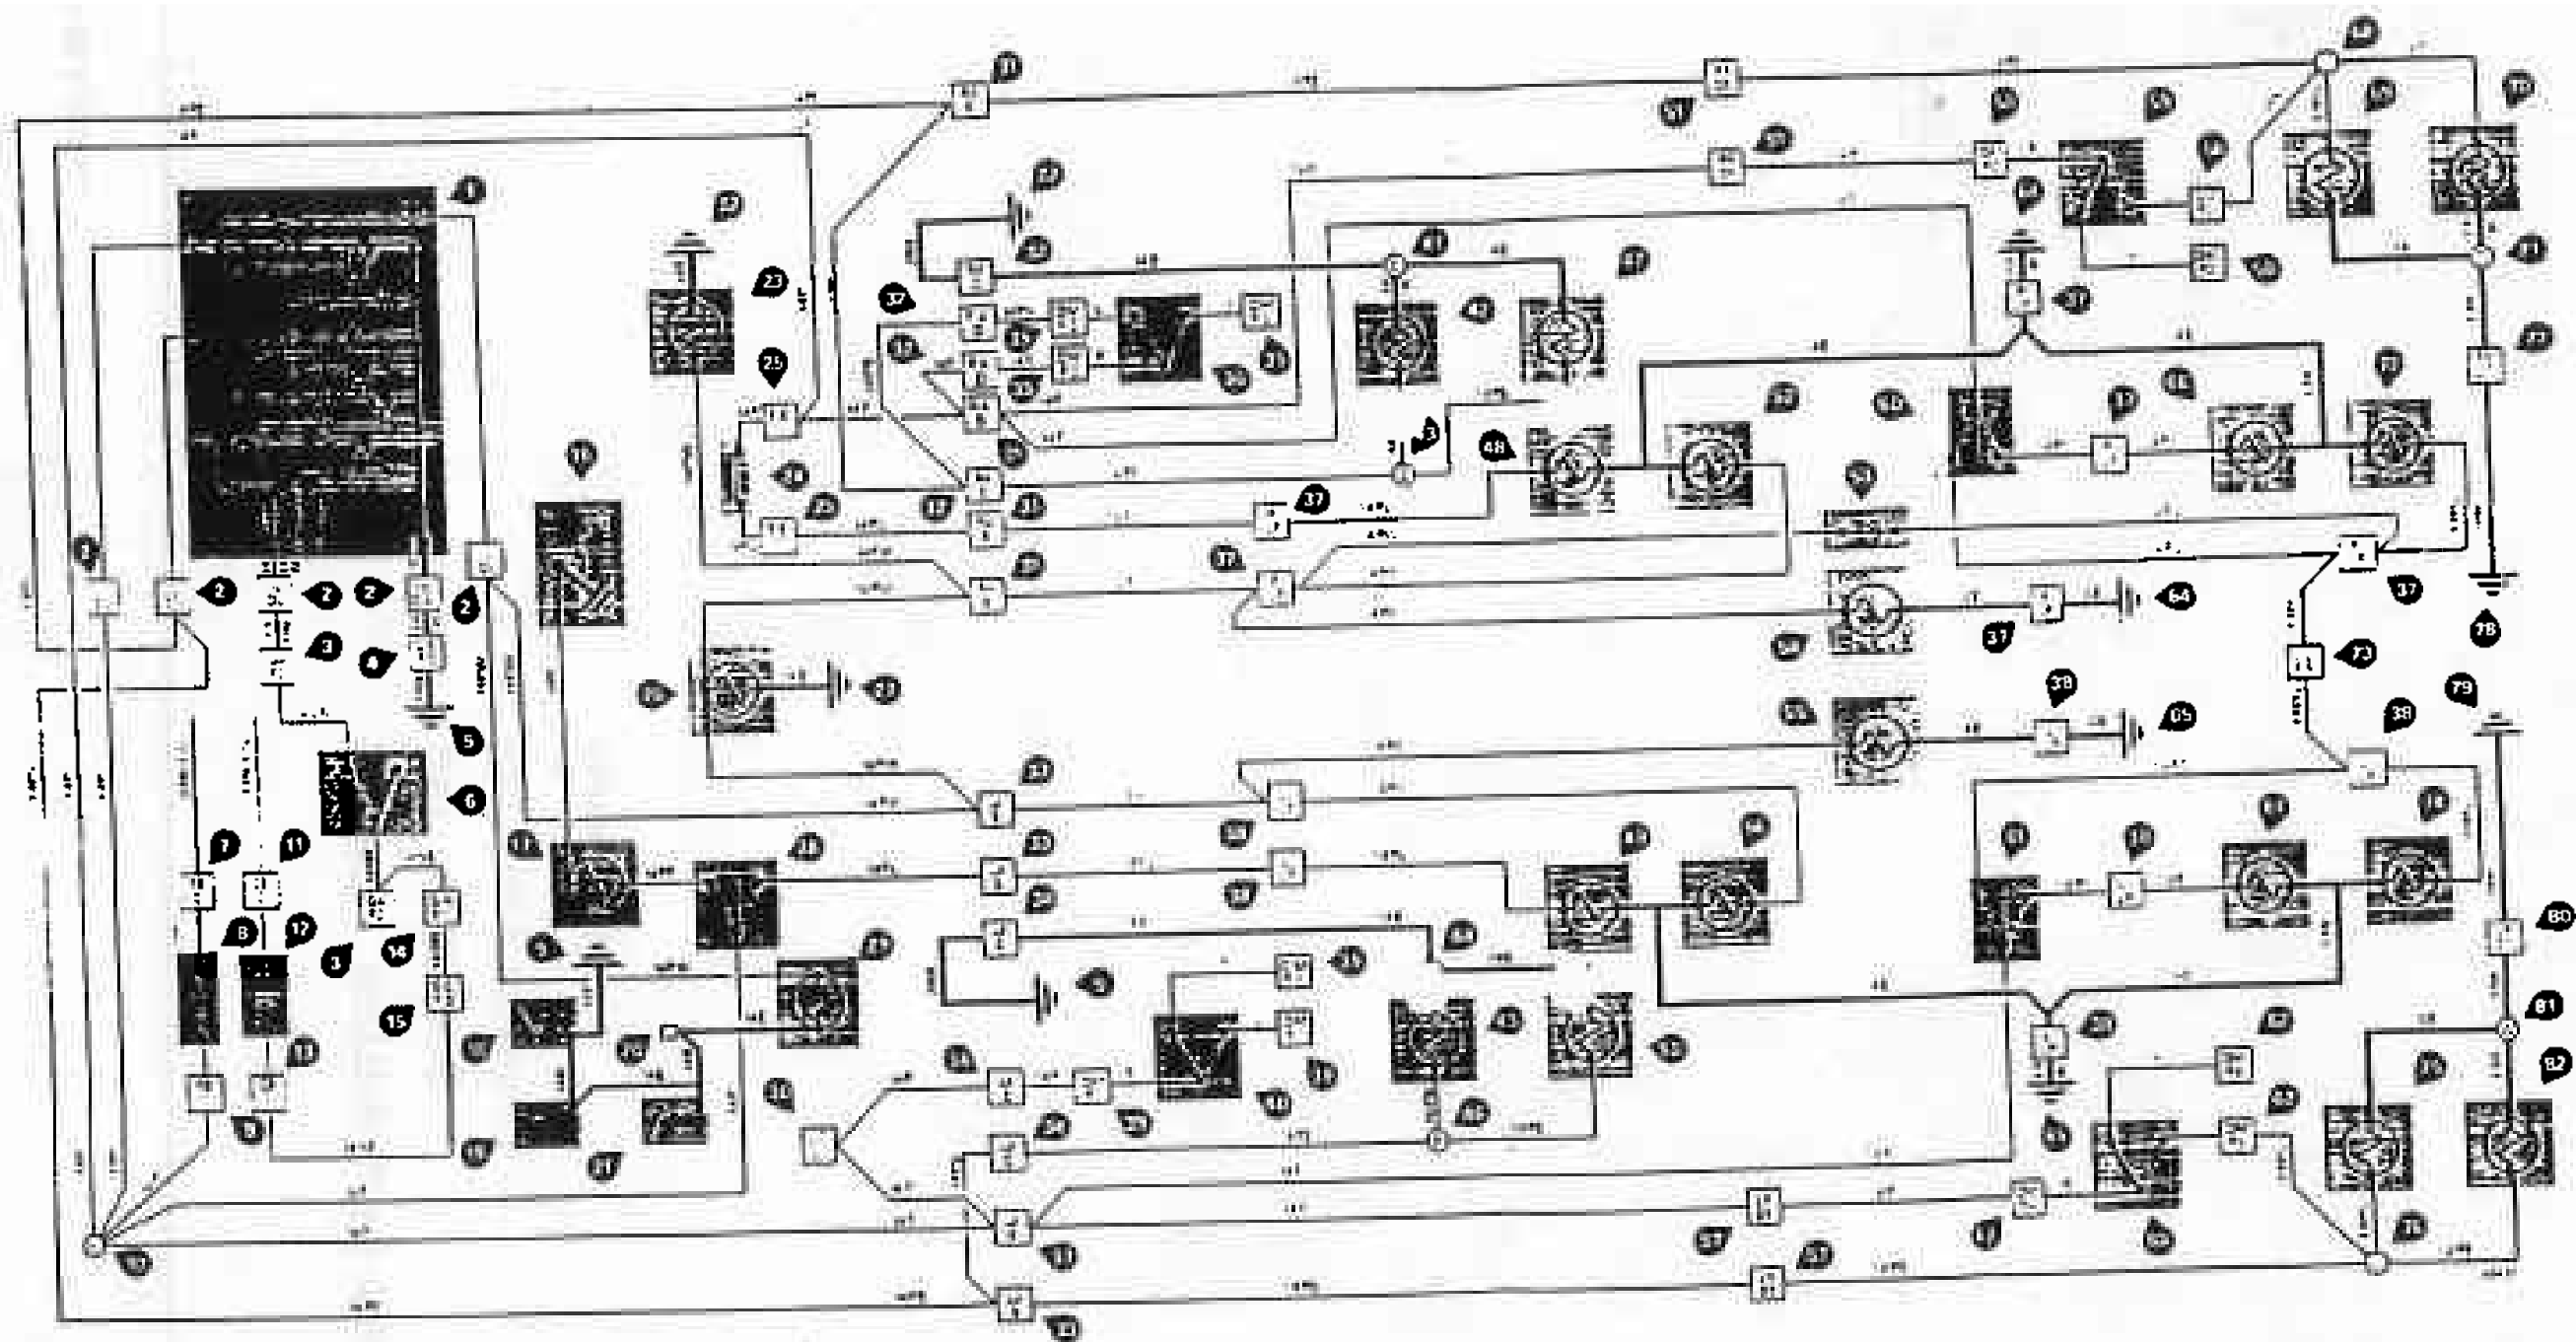

**Interior lamps and seat
belt warning**

Right-hand drive cars

Wiring diagram

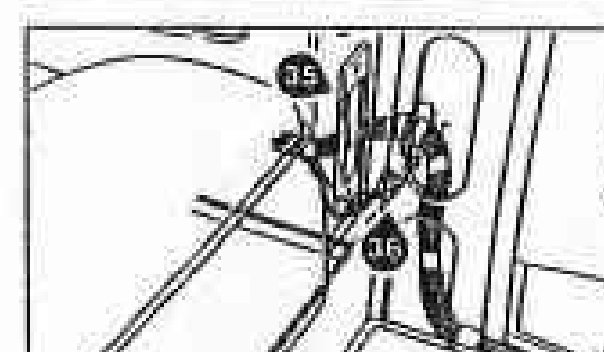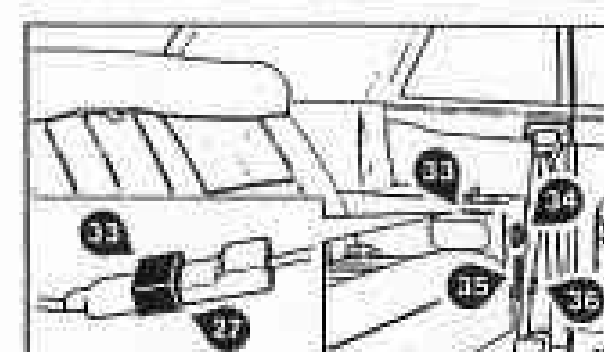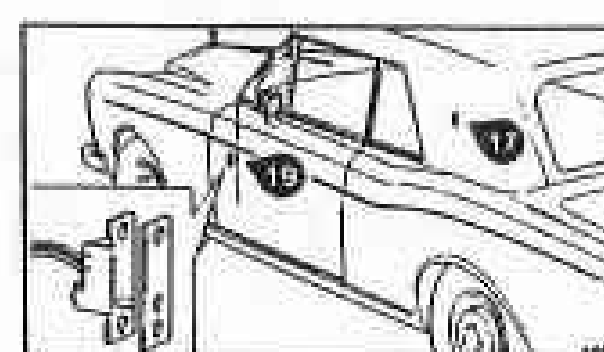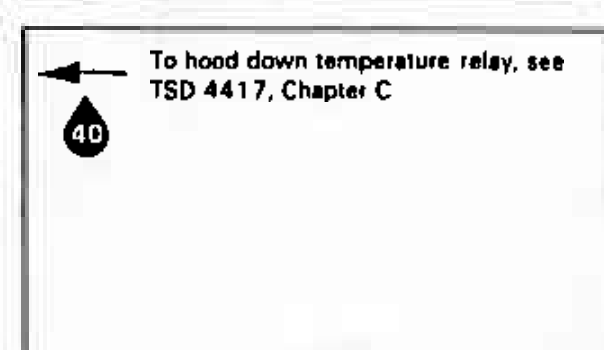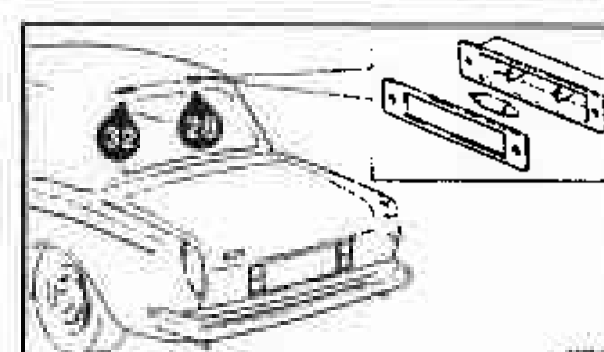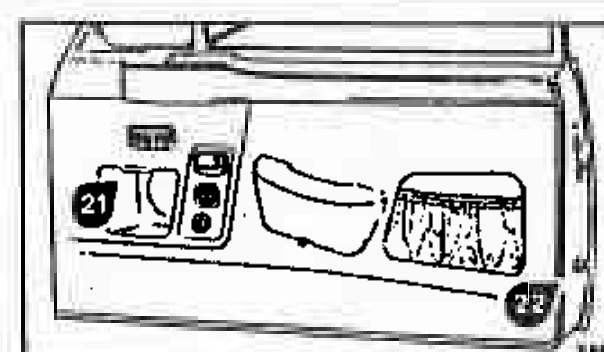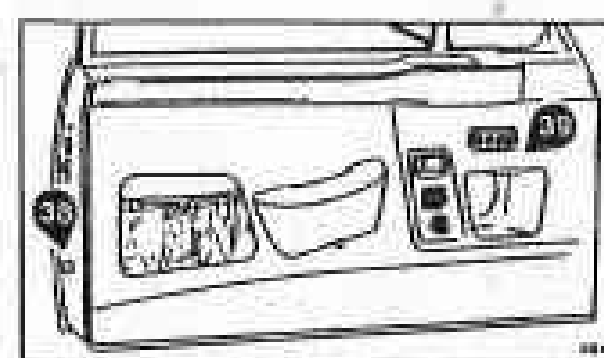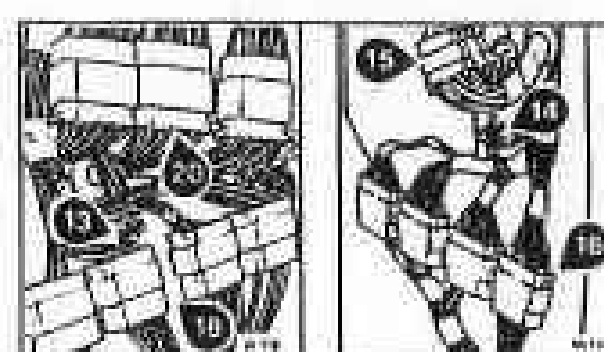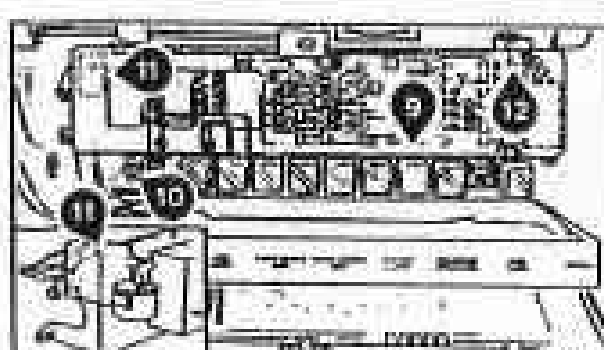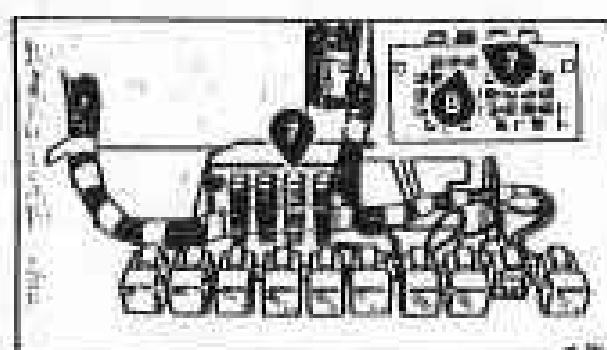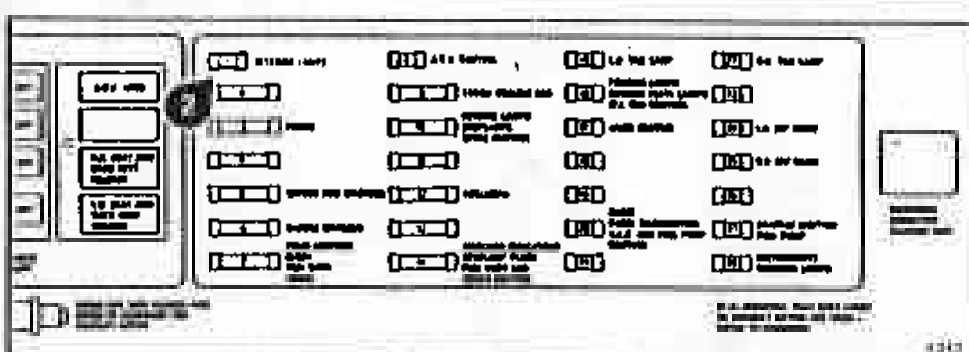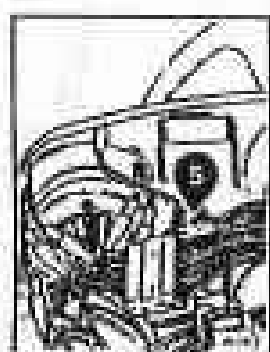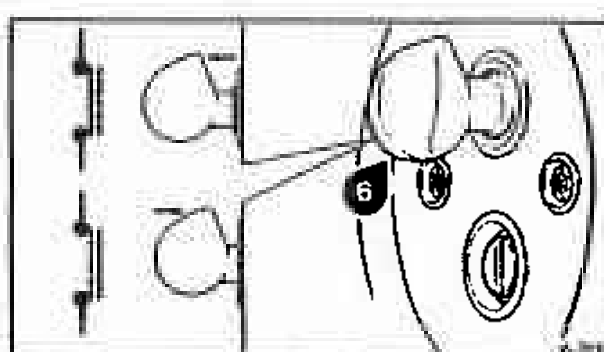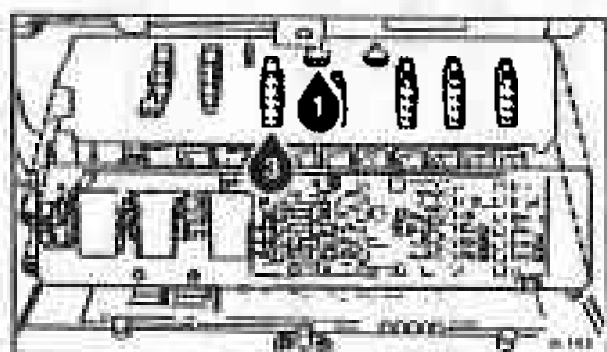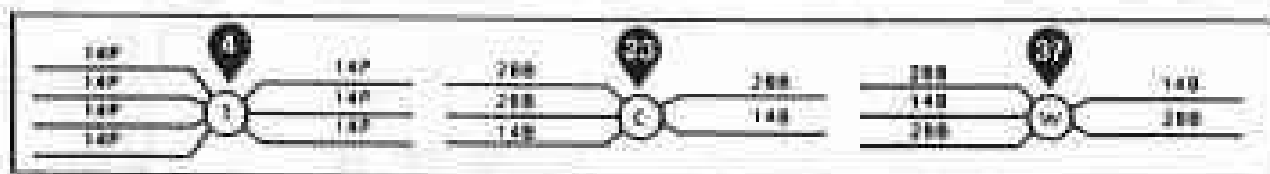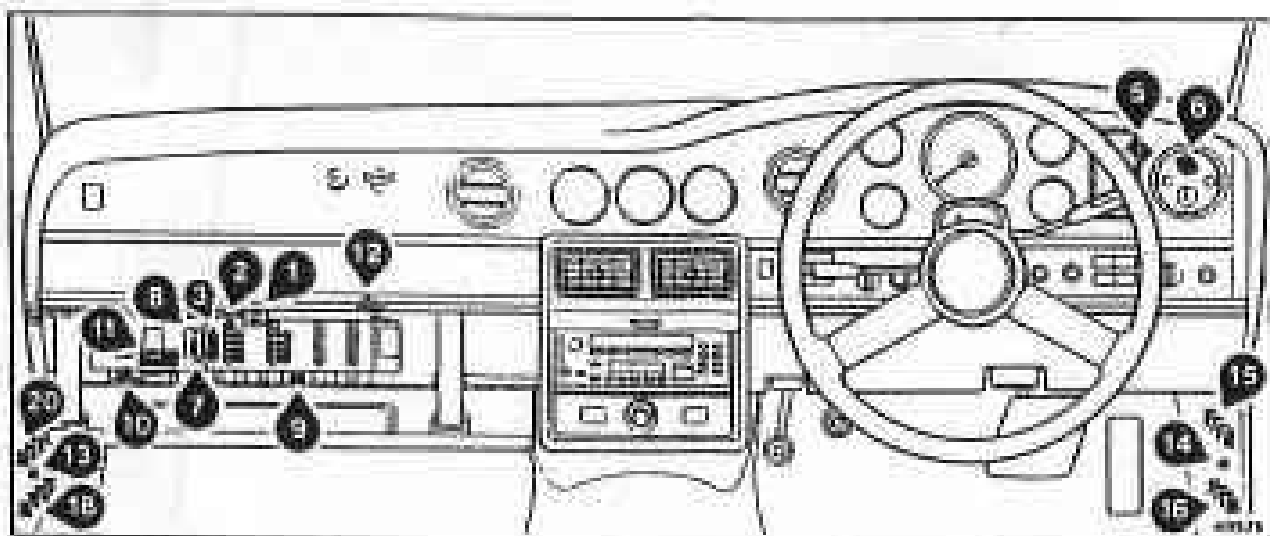


40 To hood down temperature relay, see TSD 4417, Chapter C

Interior lamps and seat belt warning

**Corniche and Continental
Right-hand drive cars**









Component location


















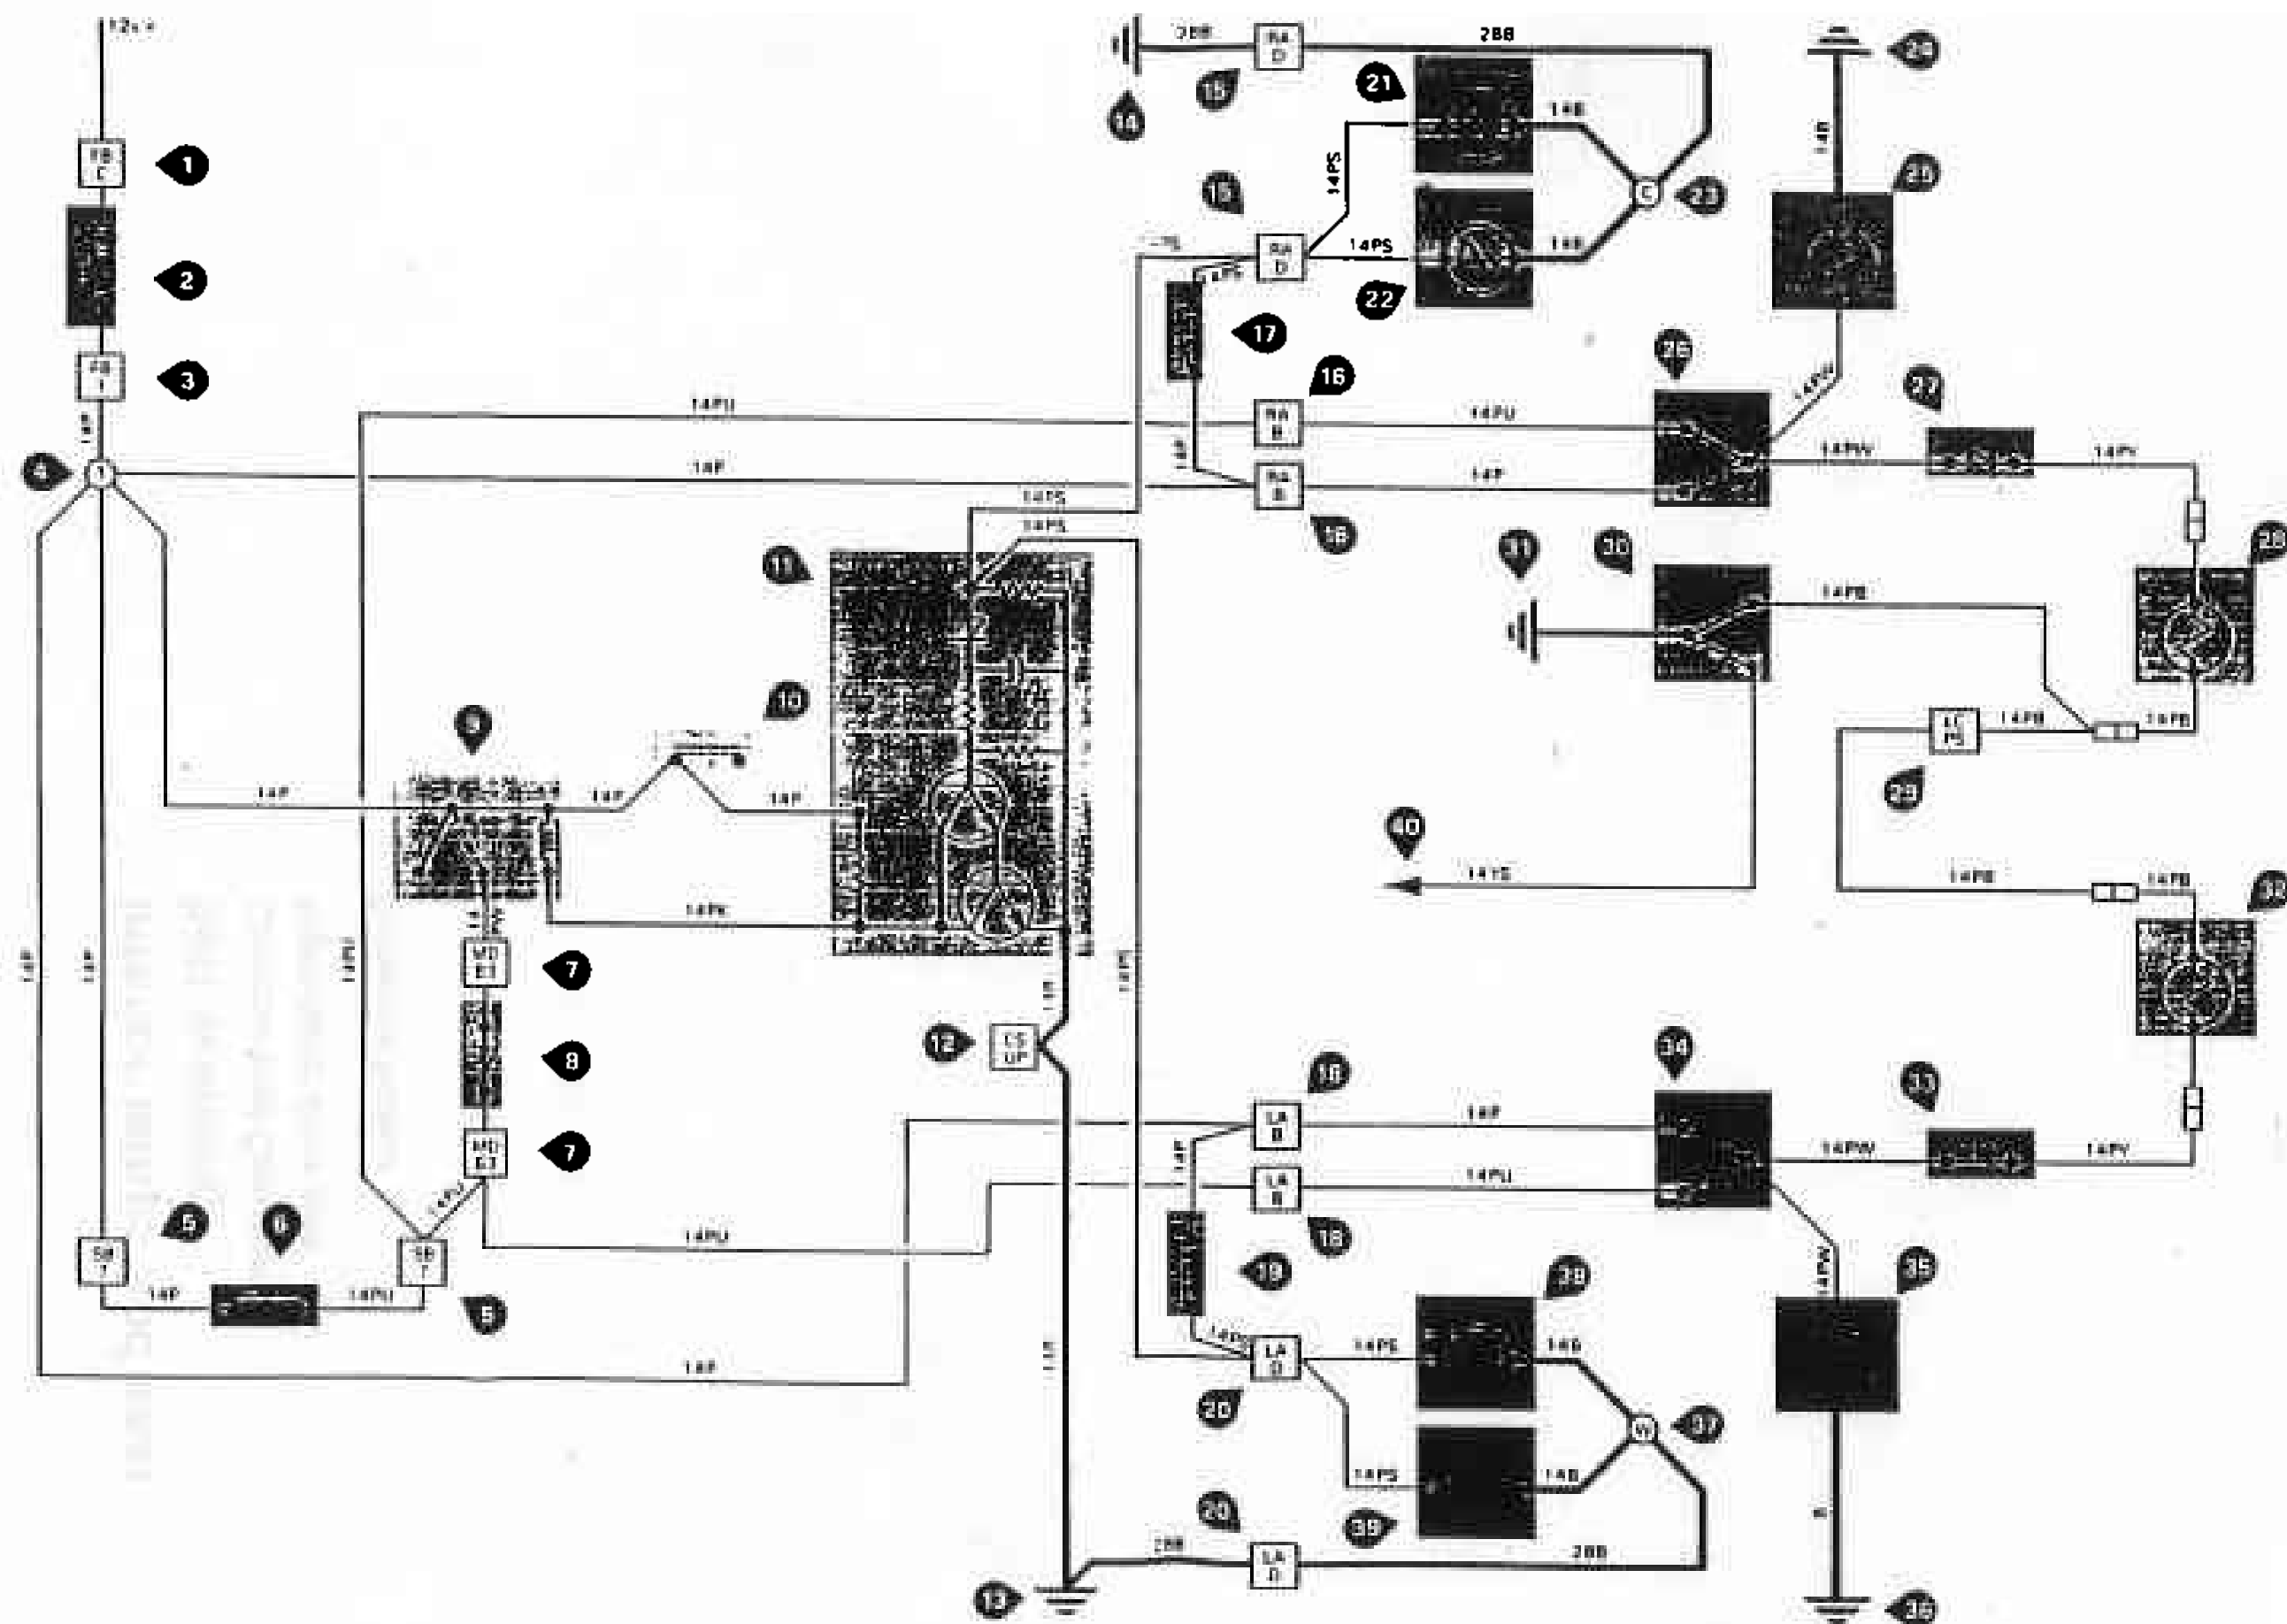


Interior lamps and seat belt warning

Left-hand drive cars other than those conforming to a North American specification

Wiring diagram and component location

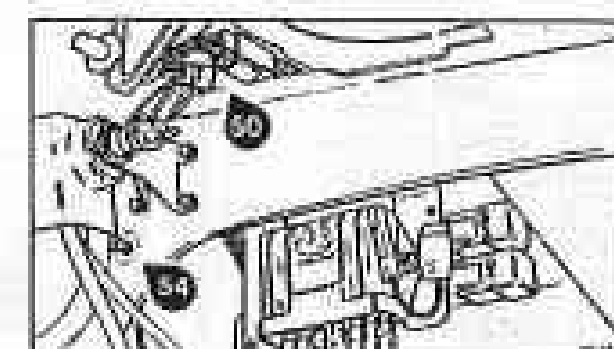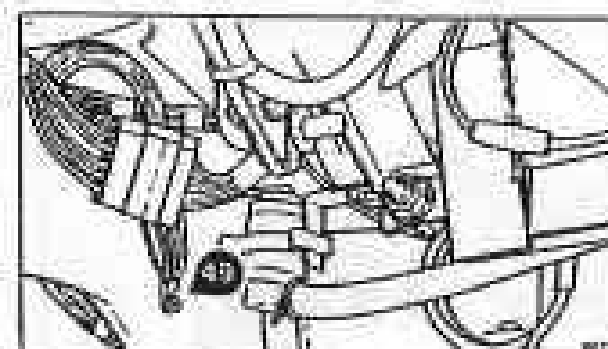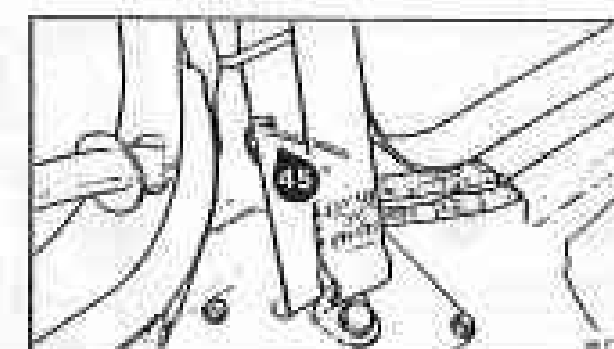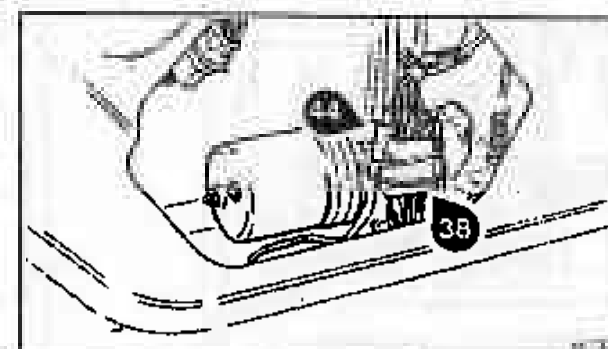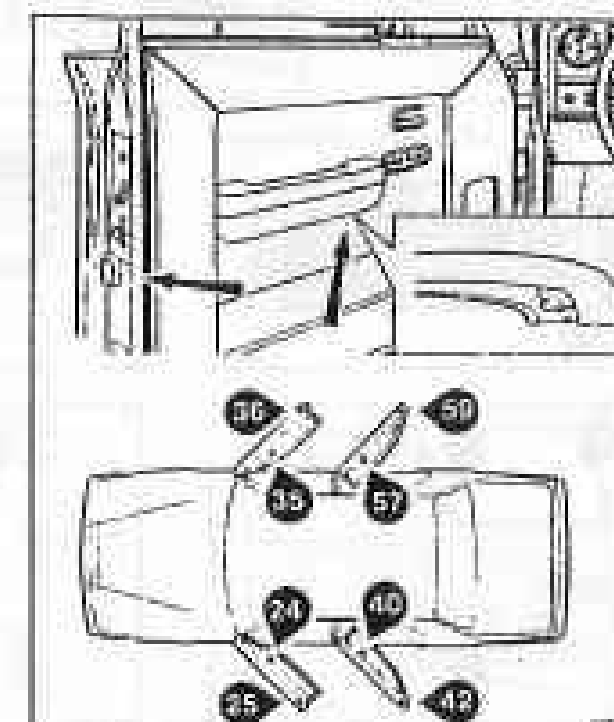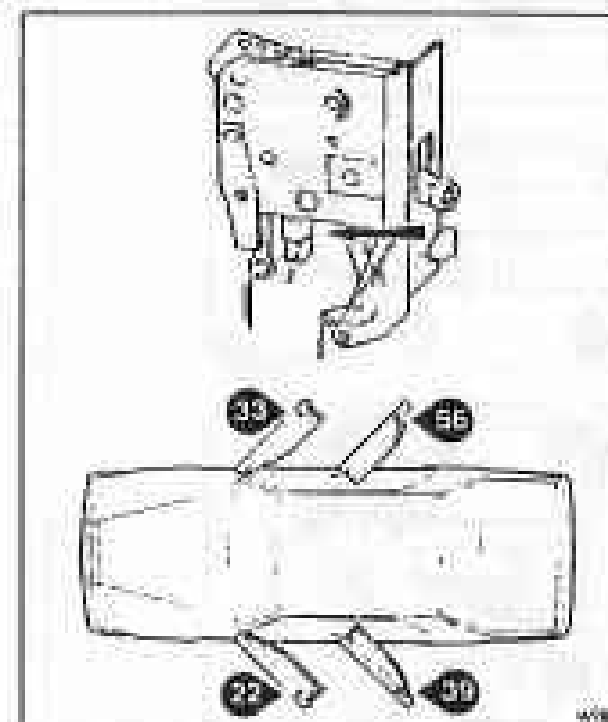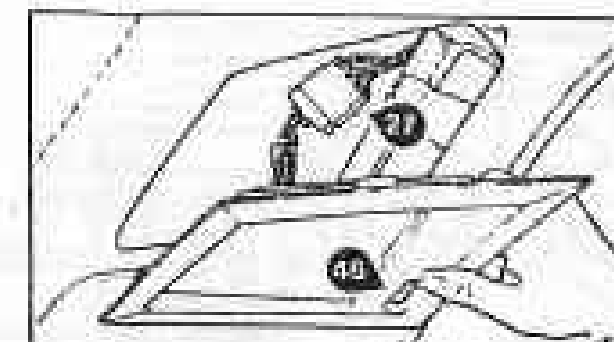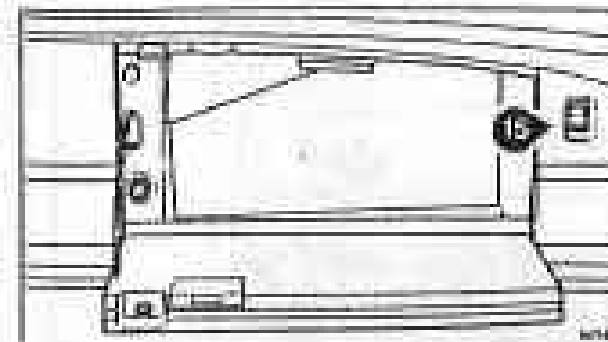


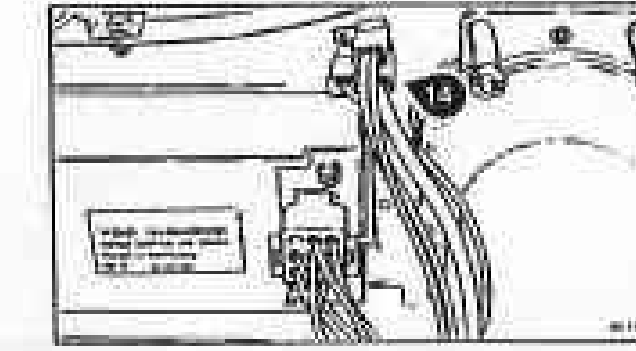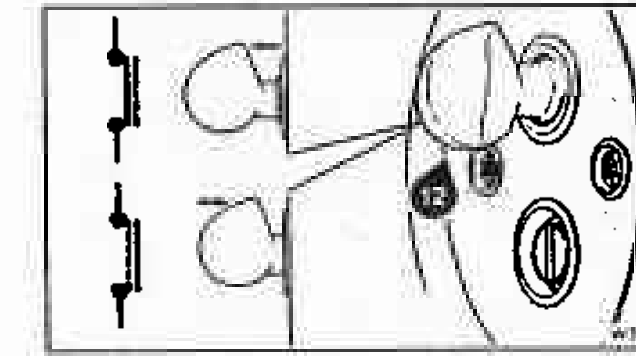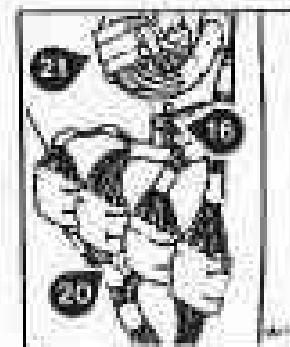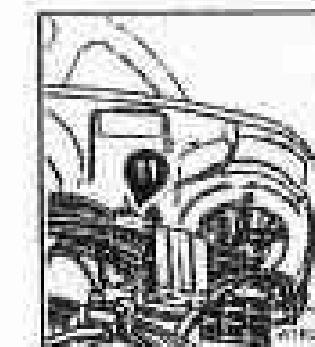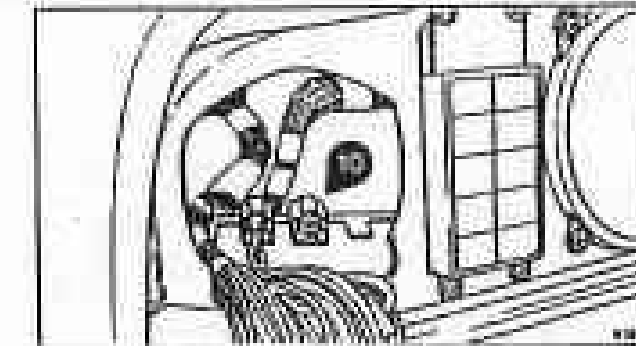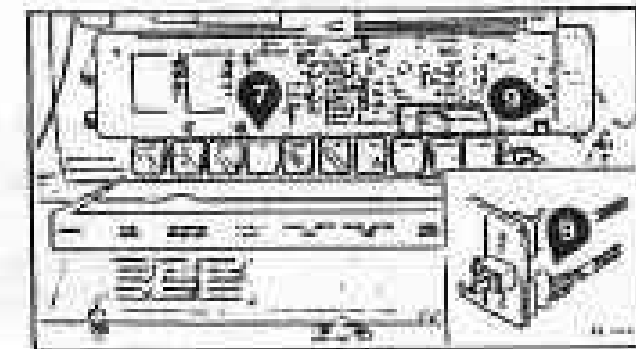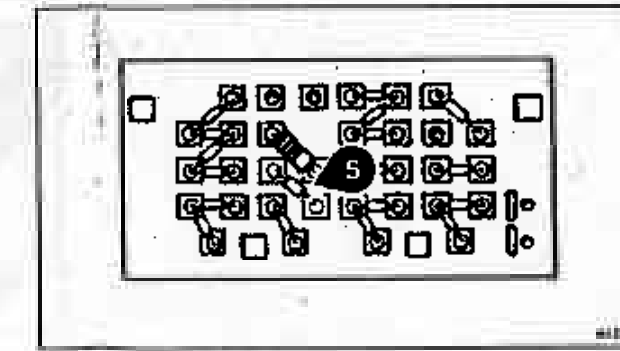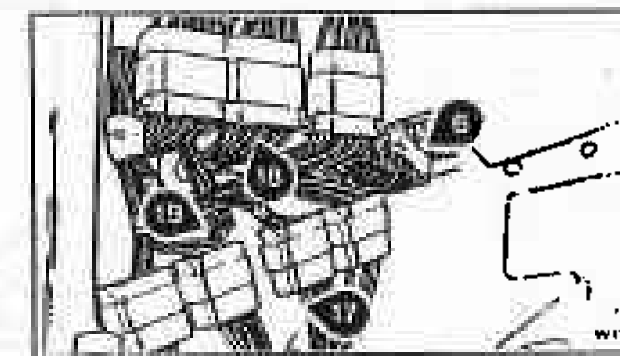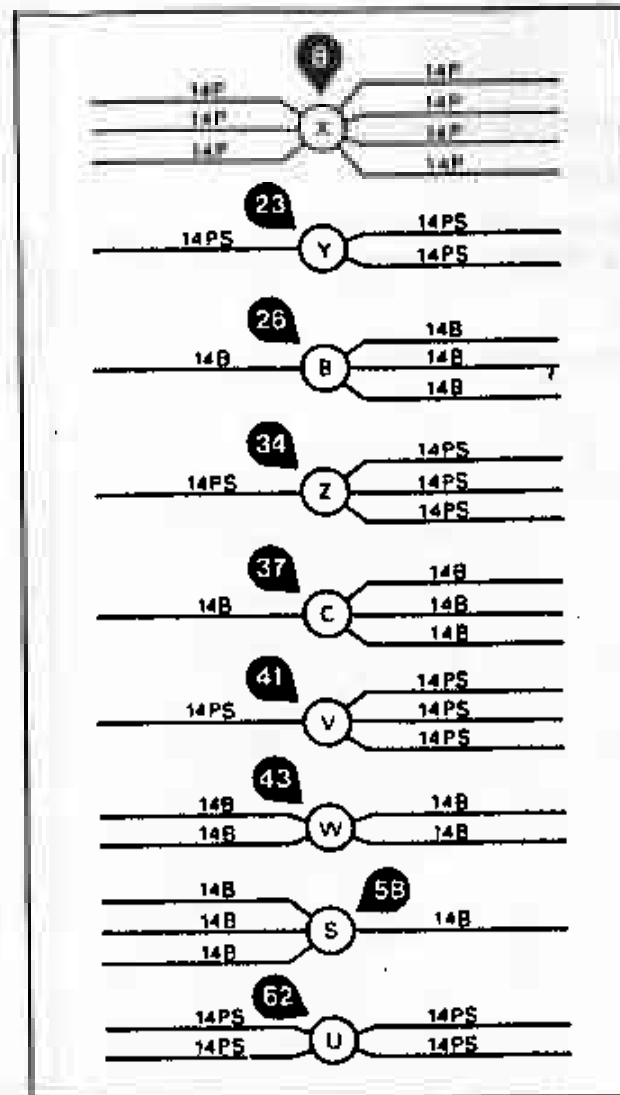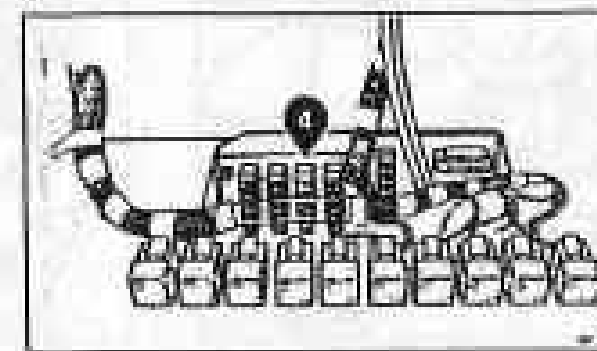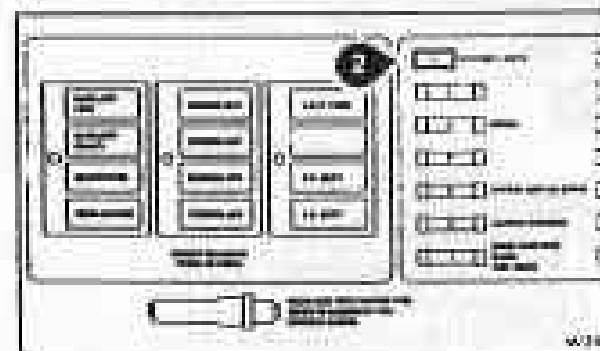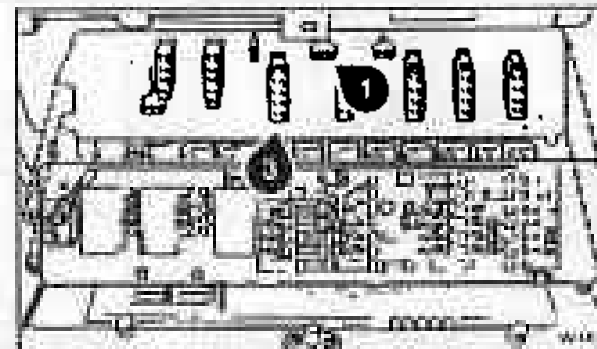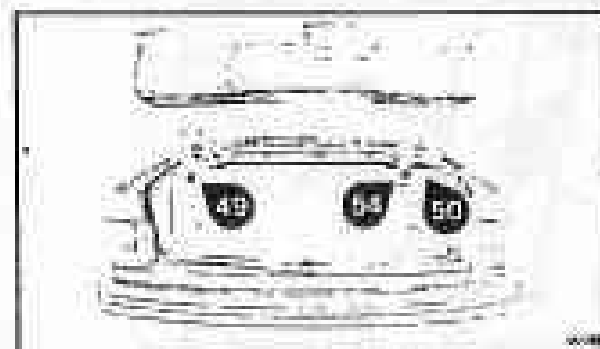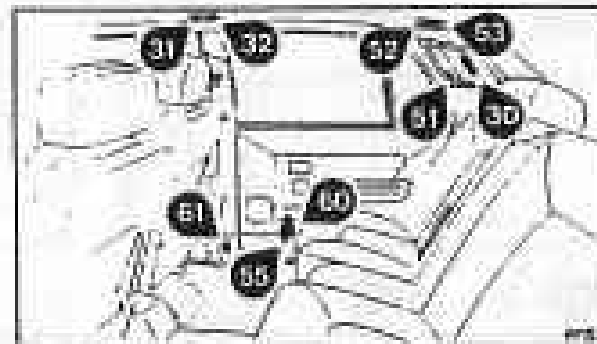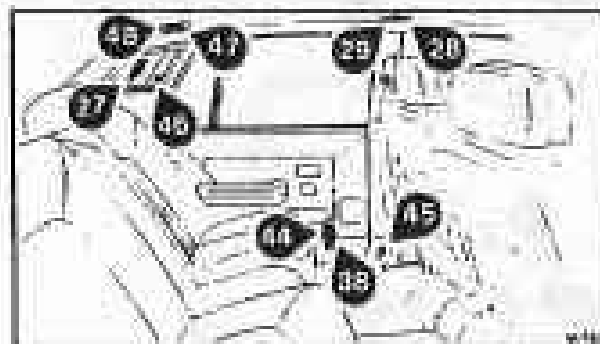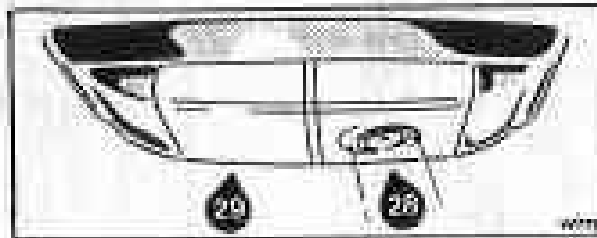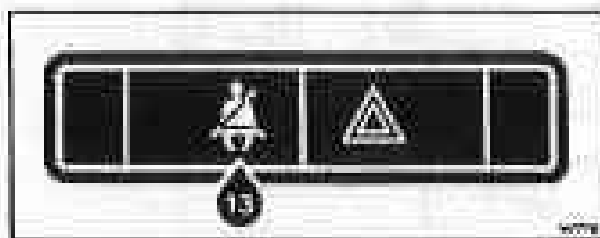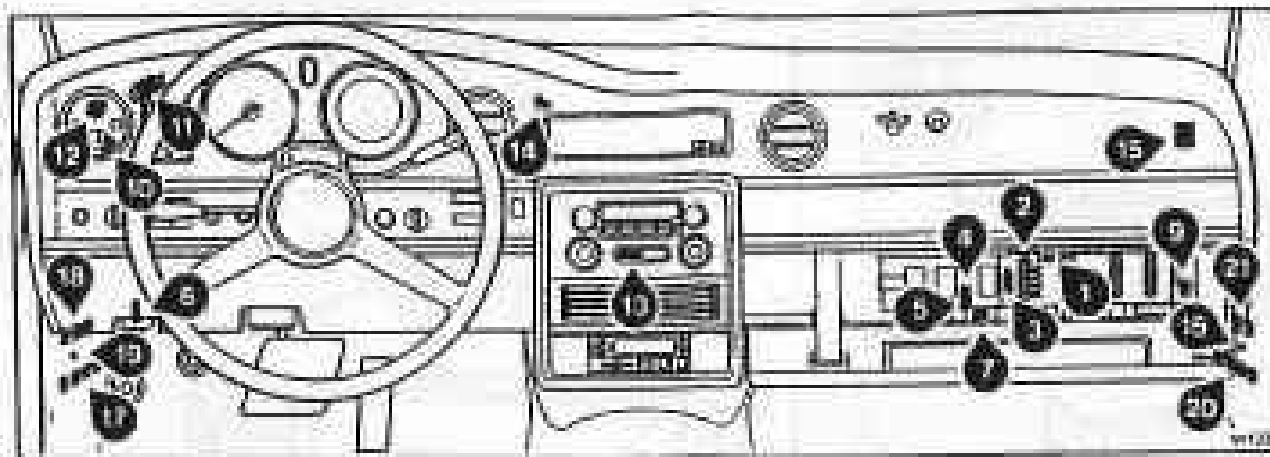



Interior lamps and seat belt warning

Left-hand drive cars other than those
conforming to a North American
specification

Component location

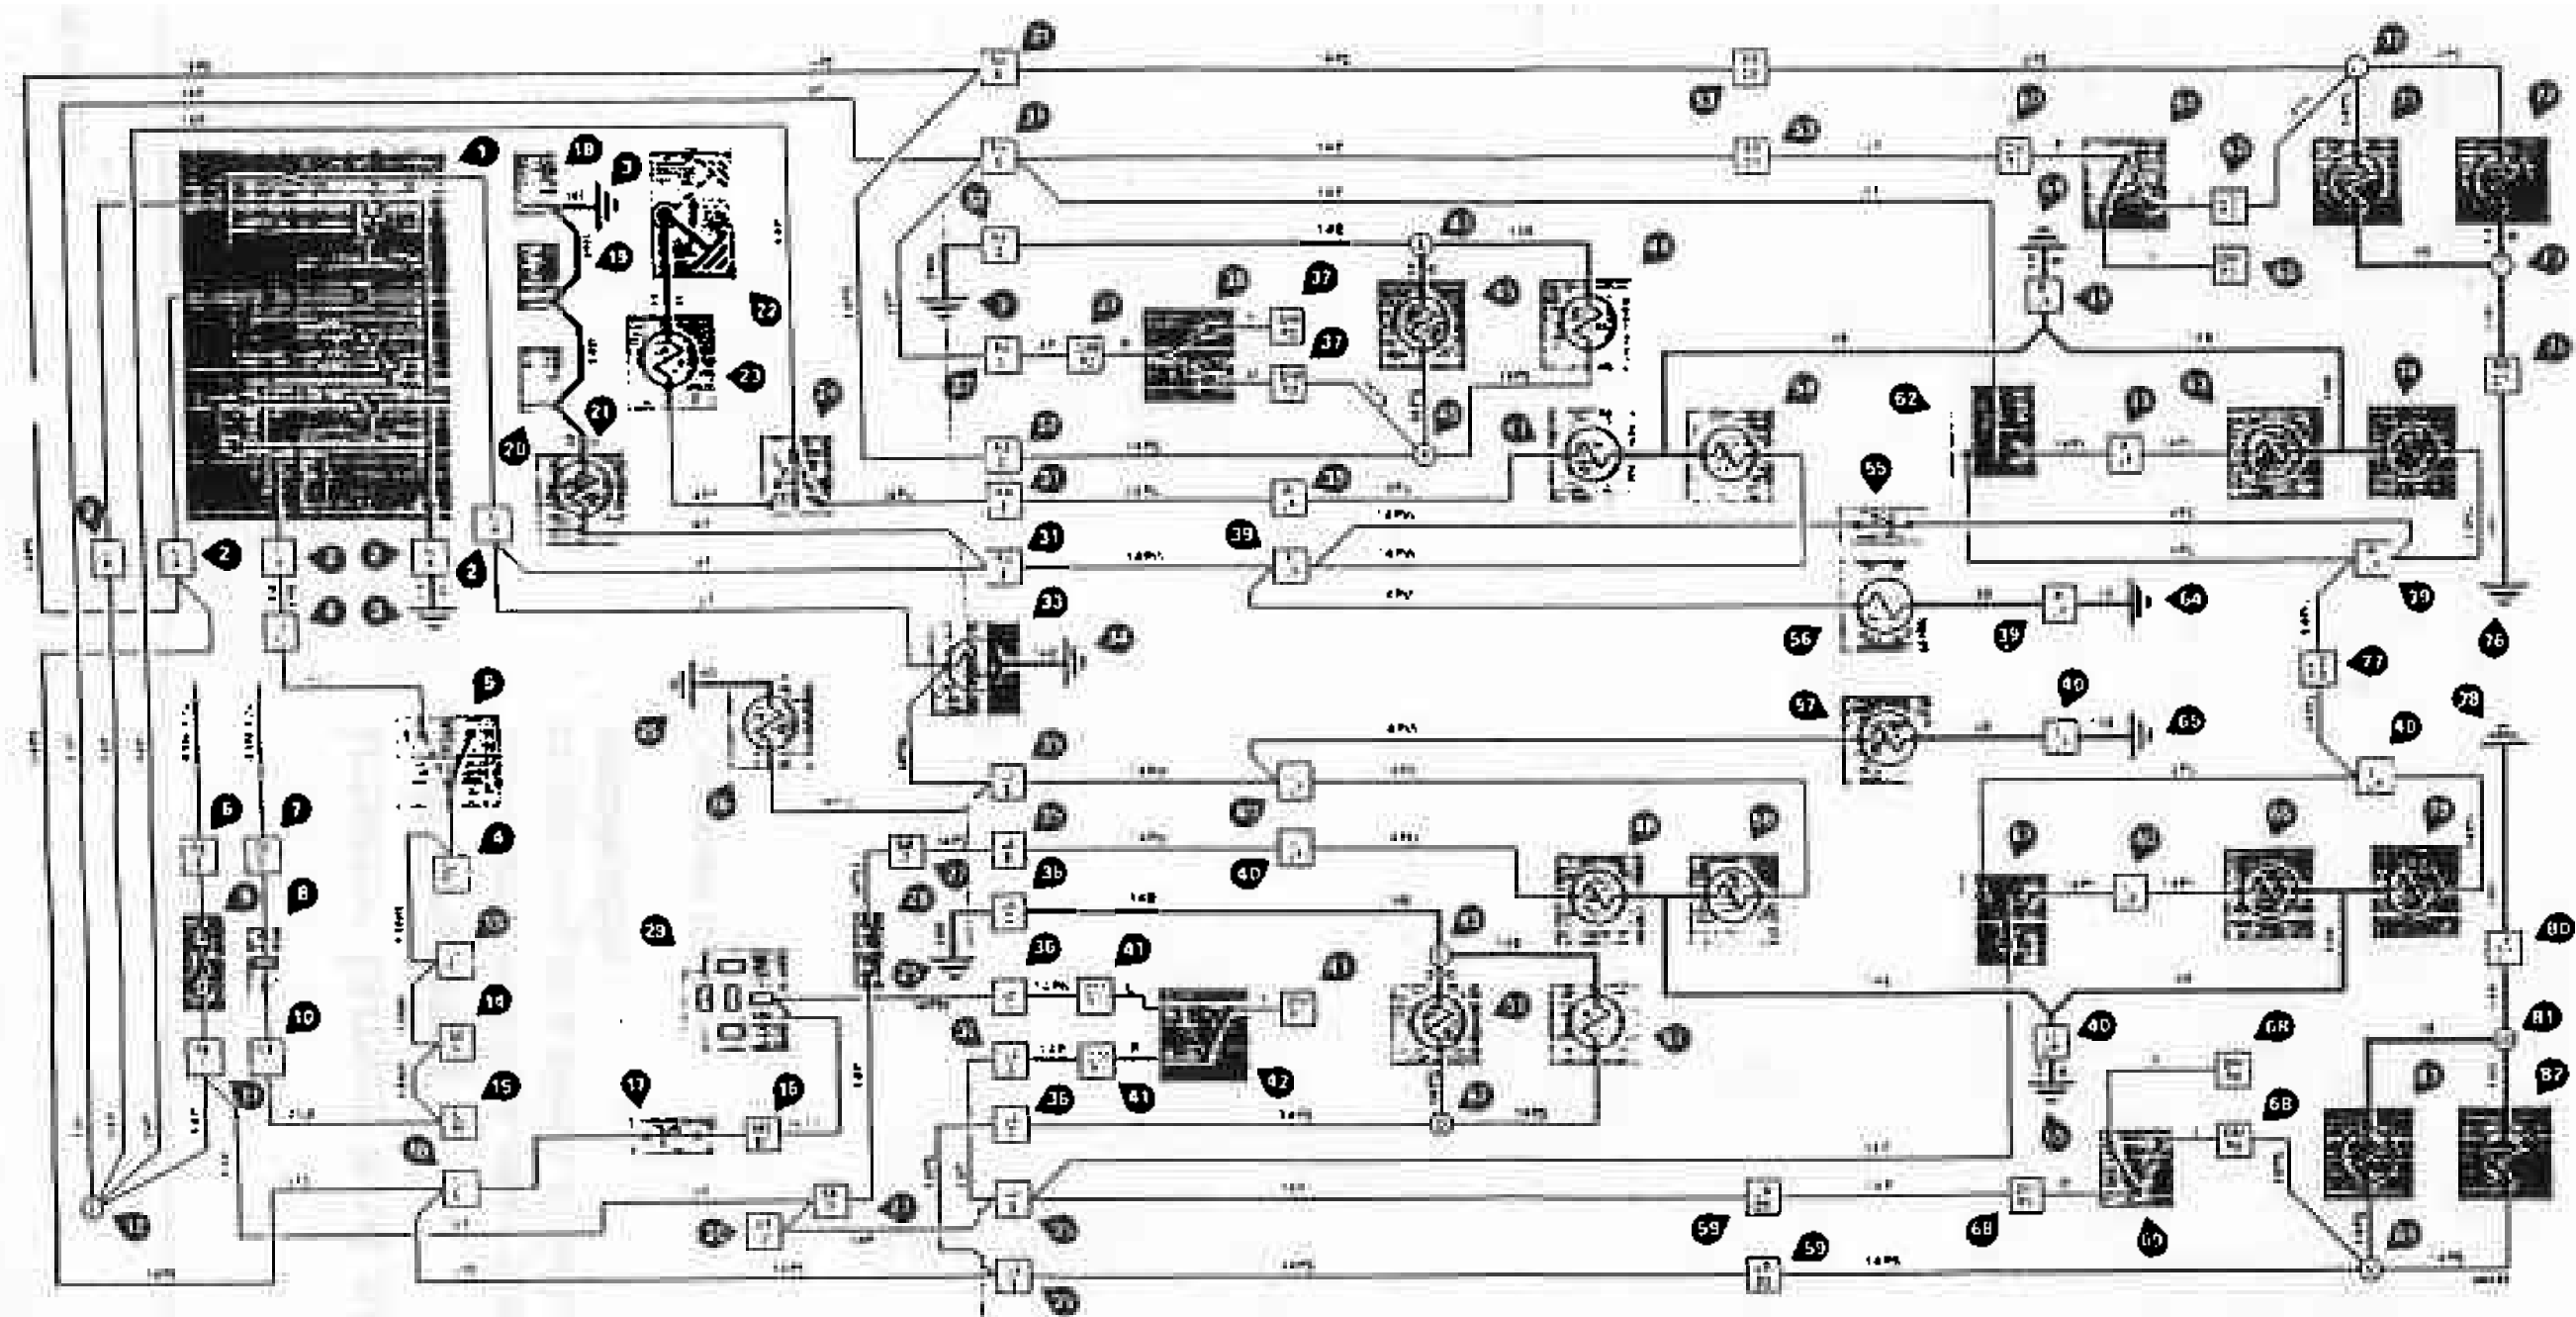

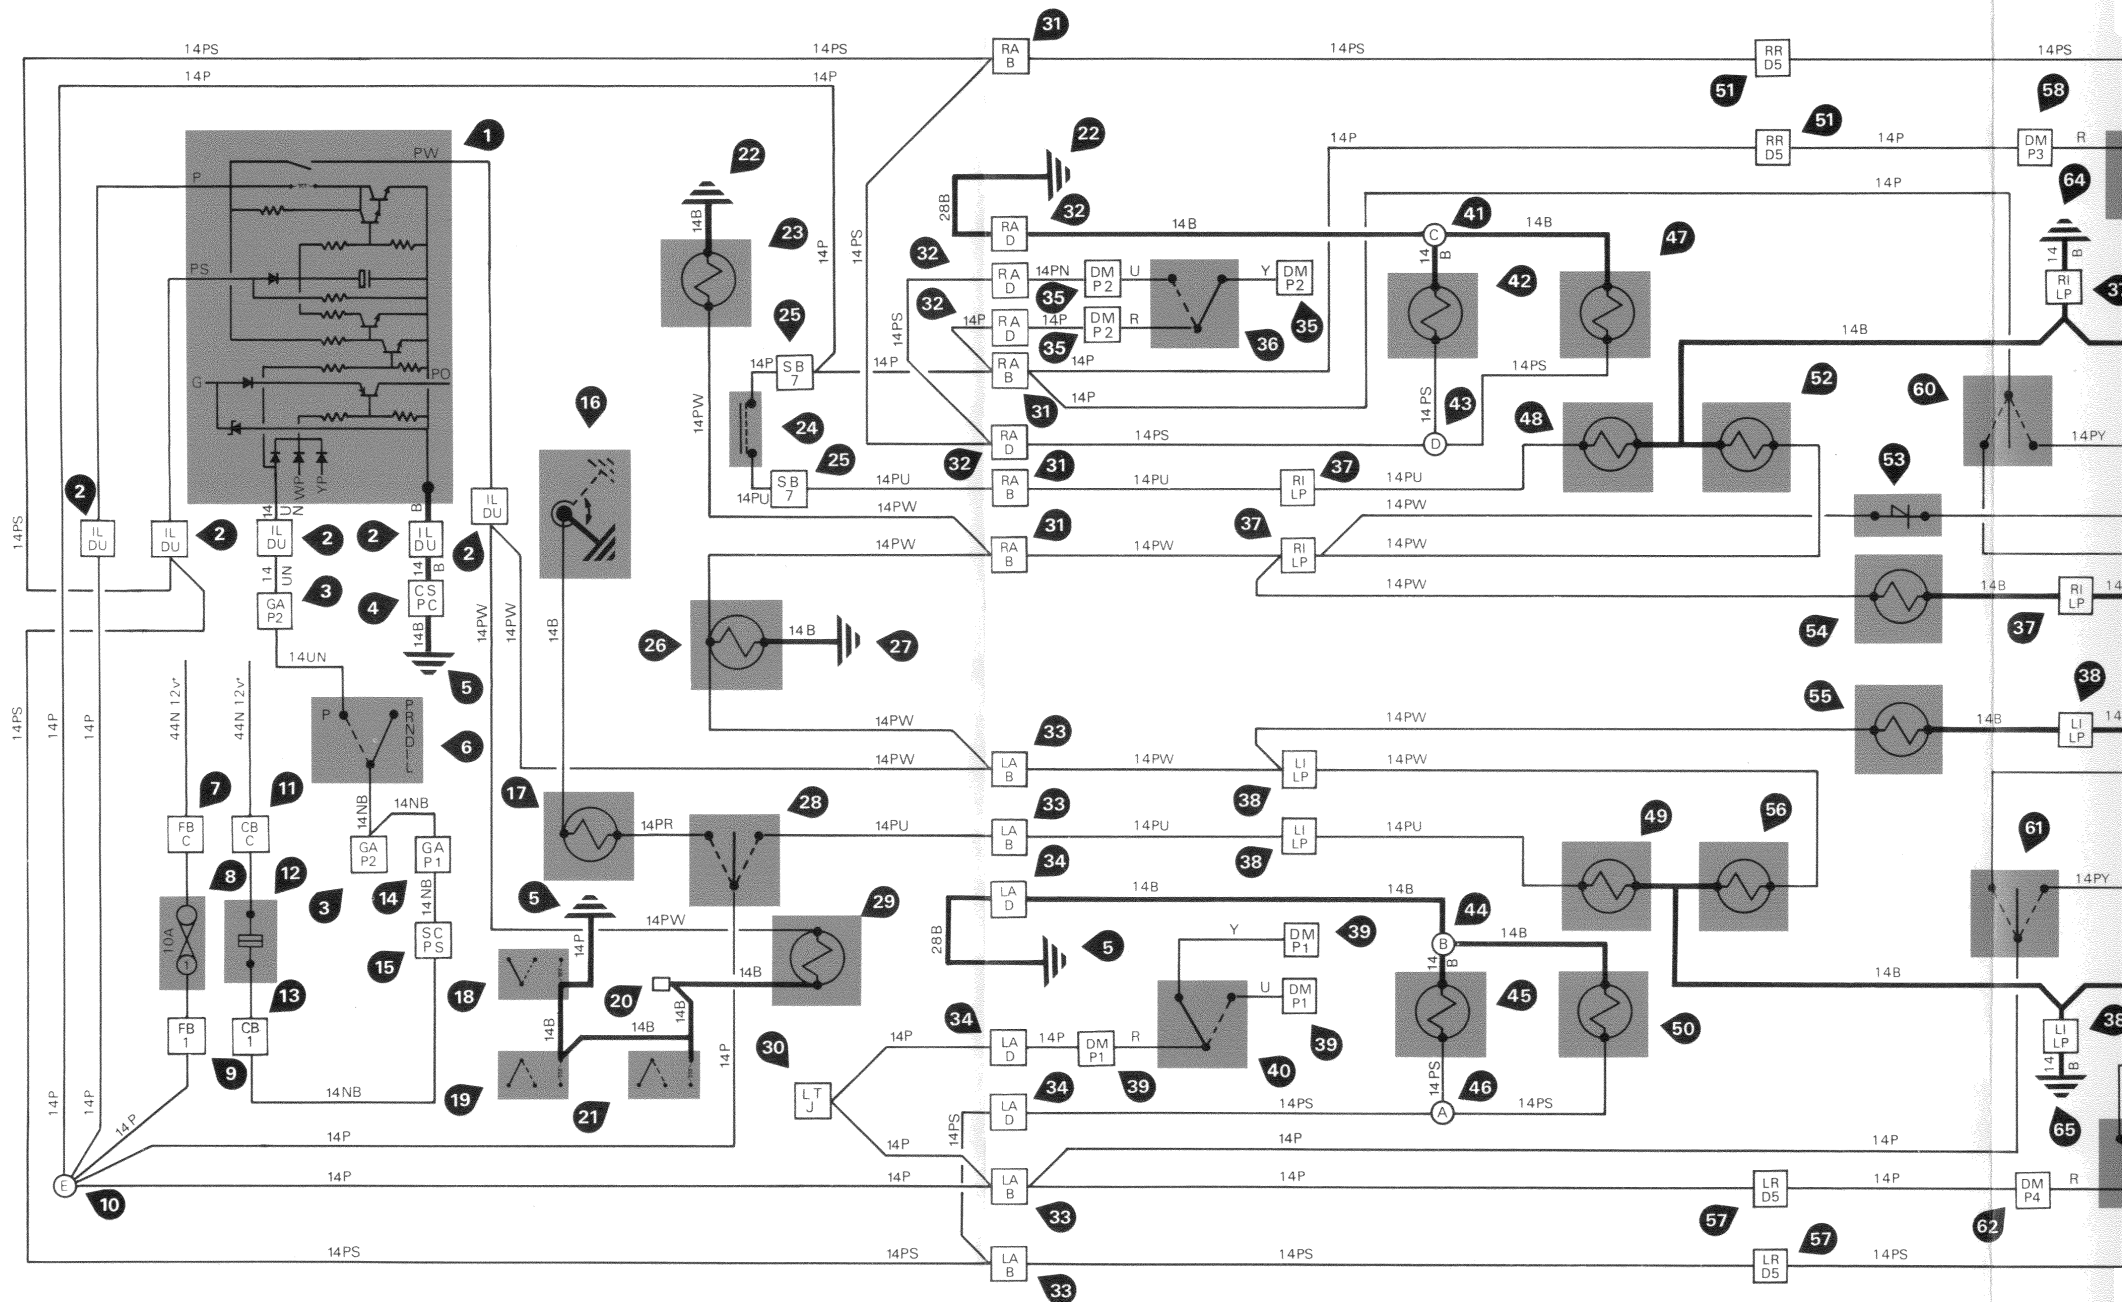

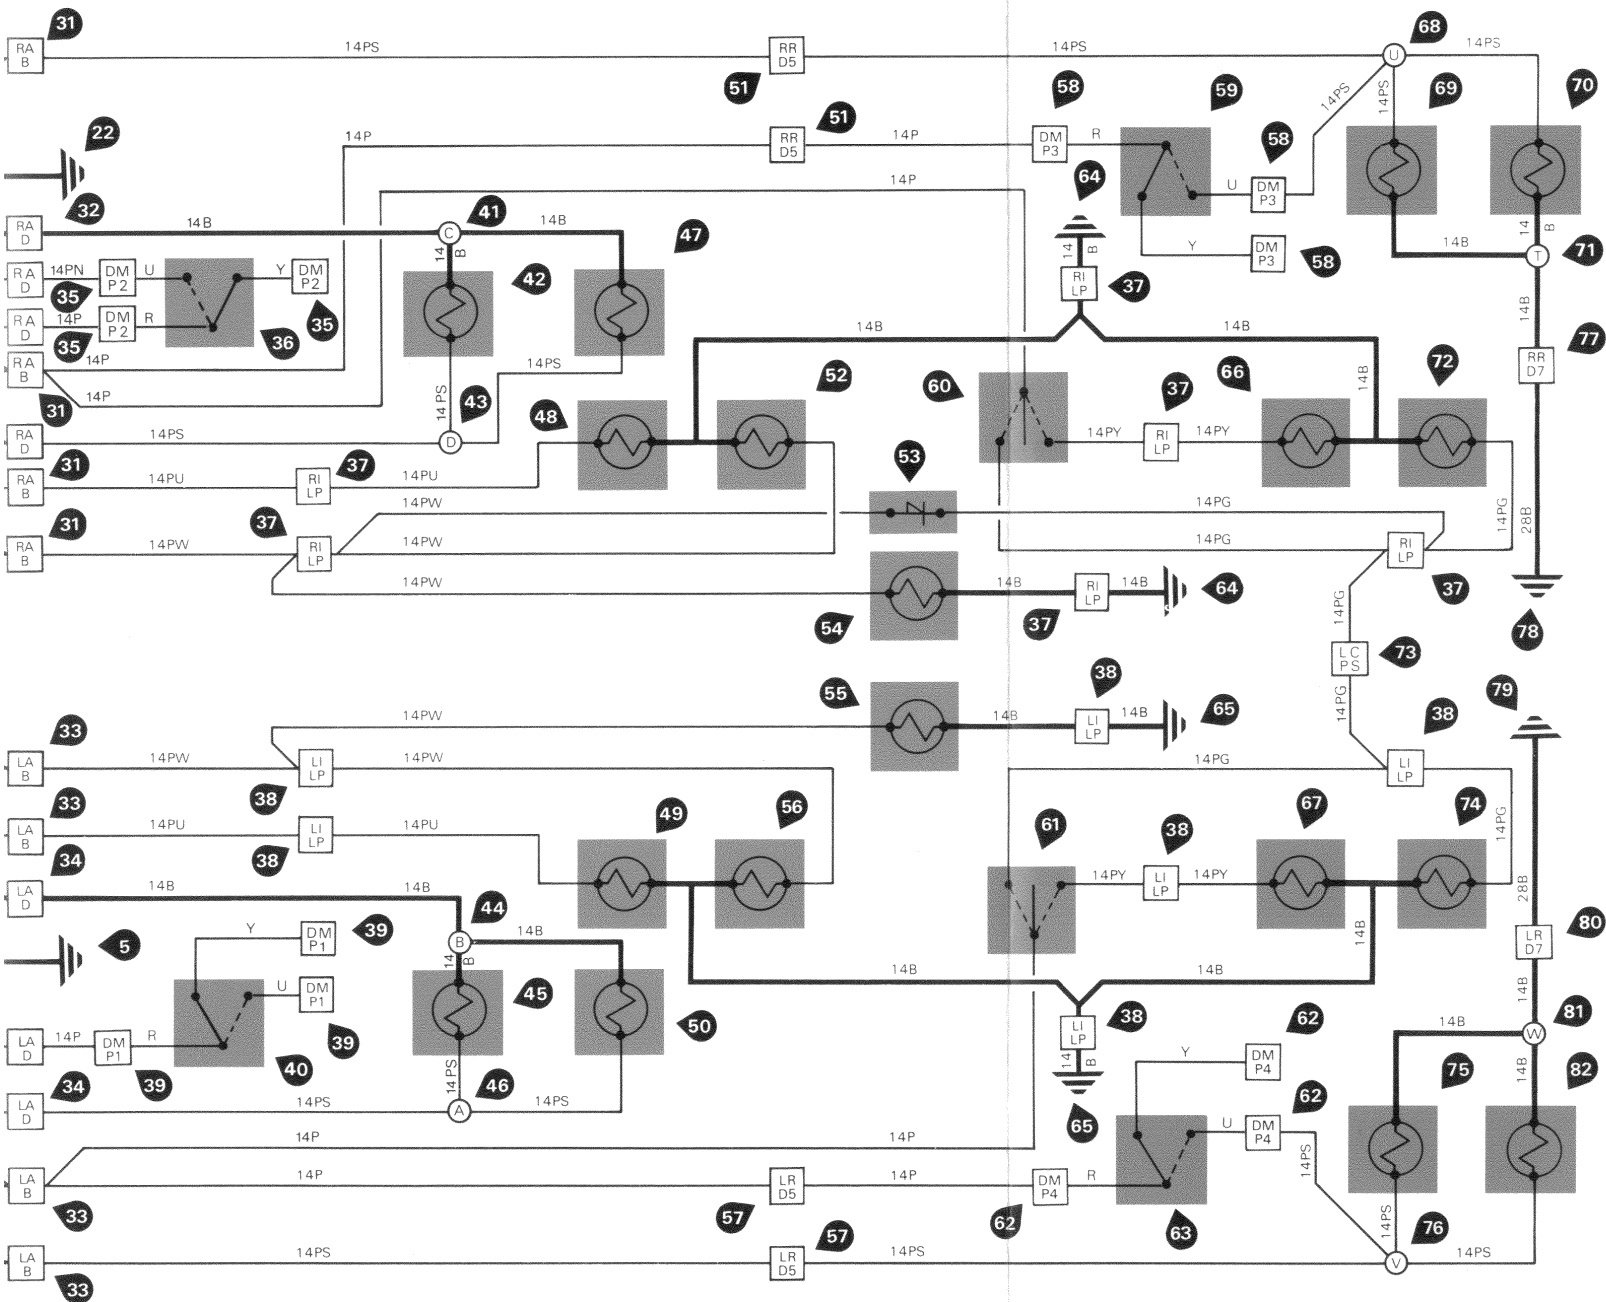

Interior lamps

Cars conforming to a North American specification

Wiring diagram and component location

